



396-001670

SurePoint Flow Indicator with Dual Metering Tube Plumbing Kits

Start Here


This SurePoint system combines the use of Floating Ball Flow Indicators with the application flexibility of Dual Metering Tubes. It can be used with optional Section Valves for added application control.

The Floating Ball Flow Indicators may be configured with any number of flow indicators in a group. This flexibility allows for the configuration of any size planter or other implement with the desired degree of section control.

The Dual Metering Tubes may be connected to a variety of Row Delivery devices to deliver the product the way you want it done.

This system has the ability to work with different (and variable) fertilizer products and to apply at an extremely wide range of rates.

Add in the precise measurement of liquid product by the SurePoint Electromagnetic Flowmeter and the result is a fertilizer application system that puts the exact amount of product precisely where you want it.

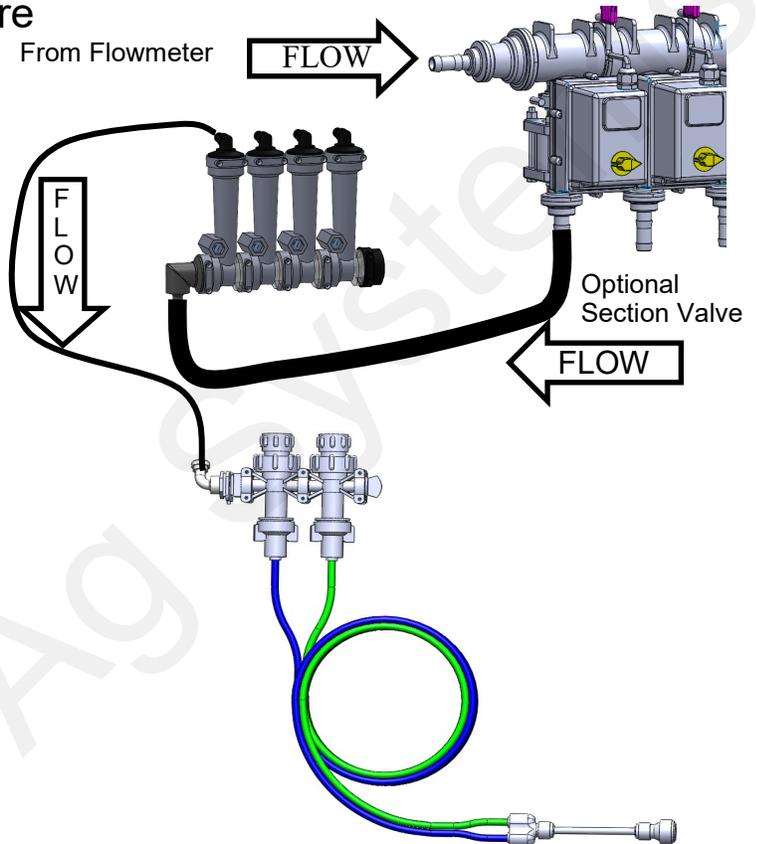

SurePoint dual metering tube plumbing kits are a great way to plumb a planter to apply starter fertilizer or high rate applications. They'll also work on other implements when applying low or high rates of fertilizer.

These plumbing kits will contain everything you need to distribute fertilizer from the flowmeter outlet down to the ground application device of your choice (not included).

These instructions will show you where all the pieces go. It will provide guidance on how much metering tube to use. There are some optional fittings included in each plumbing kit. These instructions will show you where and why you'd want to use the optional pieces.

The *dual check valve assembly* is a key piece in the dual metering tube design. In addition to a *check valve to stop fertilizer from draining when the system is shut off*, each check valve has an *on/off valve on top* of it. These on / off valves allow the operator to turn on only tube 1, only tube 2, or both tube 1 and 2. This provides for three different application ranges, which is especially helpful when using liquid fertilizers which can have a highly variable viscosity range based on temperature and batch changes.

Dual Advantage of Dual Metering Tube

Metering tube provides a larger passage-way diameter than a comparable orifice. For a 5 GPA rate on 30" rows, a size 0.046" orifice would be used. For the same rate a 0.110" meter tube that is 8' long would be used. This 8' tube with more than twice the diameter creates a fertilizer system resistant to plugging while providing excellent row to row distribution.

By using two metering tubes, the fertilizer system can handle a variety of liquid products and provide the proper system pressure as the fertilizer properties change due to temperature, mixtures and other factors.



Standard Orifice



Metering Tube

Illustration only.
Not actual sizes.

396-001670



Floating Ball Flow Indicators- Full Flow Column (mostly 3/8" HB outlet)



The full flow column is typically used with rates over 10 GPA on 30" rows. For rates less than 10 GPA SureFire recommends the low flow columns with 1/4" push to connect outlet fittings.

The full flow columns are most often assembled with 3/8" hose barb outlets. See the low flow info below for the difference between full and low flow columns.

400-2010A1
12 Row White
Visibility Backer
Plate

701-20460-95
Full Flow Column
w/ 3/8" HB Outlet

701-20521-00
End Cap


701-20525-00
Center Fed Tee
with Gauge Port

101-100075BRB
1" MPT x 3/4" HB

1/4" x 2"
Bolt

400-3155Y1
7-12 Row
Bracket

380-1001
Fits 7"x7" Tube

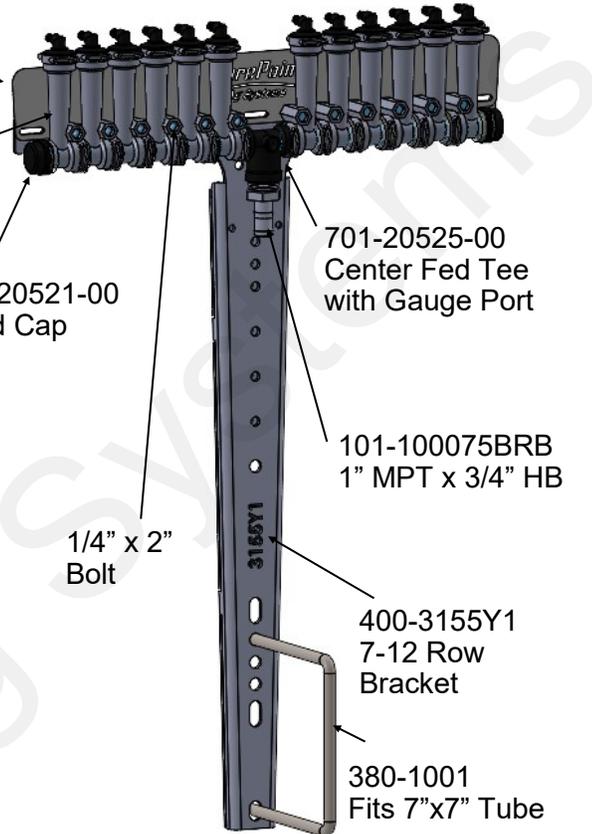

Full Flow Indicators w/ 3/8" Hose Barb Outlet

Column Flow (GPM): .05-2.70 GPM
Equivalent Application Rate
On 30" Rows at 6 MPH: 2-70 GPA

Ball Selection for 30" Rows

GPM	GPA	Ball
.05-.18	2-6 *	Green Plastic
.09-.30	3-10 *	Red Plastic
.31-.72	10-20	Maroon Glass
.40-2.1	13-70	Stainless Steel (1/2")

*SurePoint recommends using the low flow column for these flow rates.
Plastic balls may float on heavier fertilizers, such as 10-34-0.

Low Flow Column (mostly 1/4" QC or 3/8" QC outlet)

The low flow column has a smaller internal diameter. This means a heavier ball can be used to monitor a smaller flow.

SurePoint uses the low flow columns with 1/4" push to connect outlet fittings. The flow capability of 1/4" tubing and the low flow column are a great pair for rates on 30" rows under 10 GPA.

Externally, the low flow column can only be identified by "Low Flow" molded into one side of the column. All the same fittings work with low flow and full flow columns.



400-2011A1
6 Row White Visibility
Backer Plate

Low Flow Indicators w/ 1/4" Push to Connect Outlet


Column Flow (GPM): .03-.30 GPM
** Low Flow Column with 3/8" hose barb .03 - .70 GPM

Equivalent Application Rate
On 30" Rows at 6 MPH (1/4" QC): 1-10 GPA

Ball Selection for 30" Rows

GPM	GPA	Ball
.03-.09	1-3	Green Plastic*
.05-.14	2-4	Red Plastic*
.10-.18	3-6	Maroon Glass
.15-.70	5-10	Stainless Steel (1/2")

*These balls may float on heavier fertilizers, such as 10-34-0. Use Maroon Glass in this case.

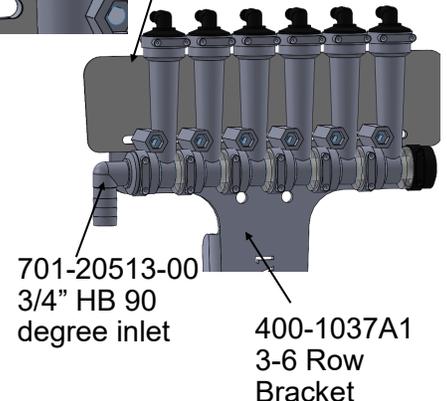

701-20513-00
3/4" HB 90
degree inlet

400-1037A1
3-6 Row
Bracket


Floating Ball Flow Indicators



Flow Indicators are extremely flexible and can be mounted in hundreds of different configurations on various types of liquid application equipment. This page is to give you some ideas and let you customize the installation for what works best on your equipment.

16 Row Split 6 - 4 - 6 (no Section valves)


This configuration works well on a 16 row front fold planter. Each flow indicator manifold is shown fed by a cross in a single section installation. Each manifold could be fed by a section valve if desired.

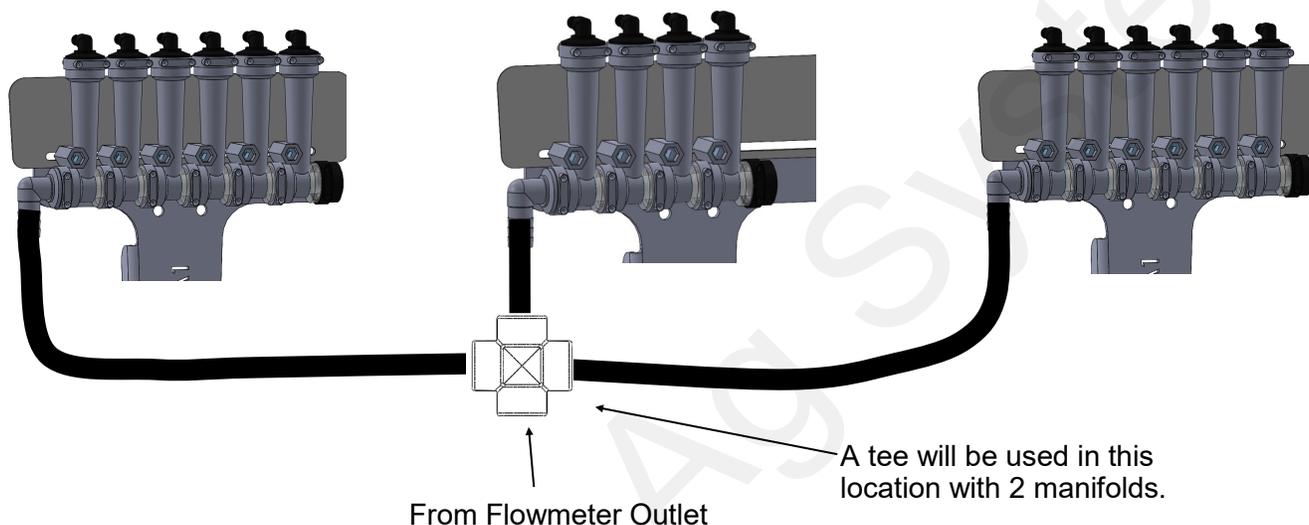

12 Row Split 3 - 3 - 3 - 3 (with Section valves)

Shown here is a 12 row with four 3 row sections controlled by four section valves. Note each 6 row T-Bracket can hold two separate 3 row manifolds.


A 4 section 24 row could be similar with four 6 row manifolds on two large T-Brackets.

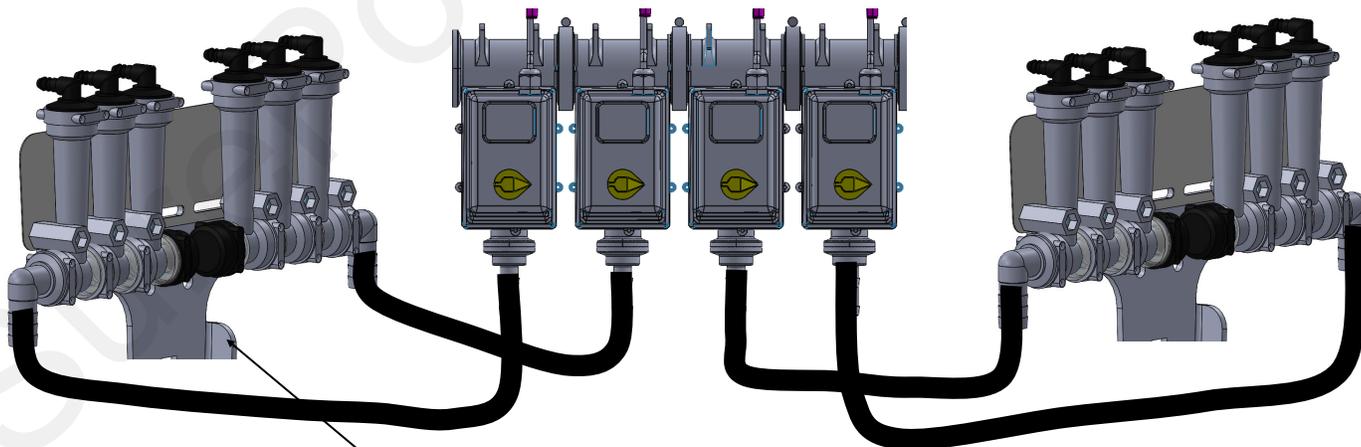

NOTE: Another option is the flange can face forward so the T-Bracket could be mounted on the front side of a bar.


**12 Row Dual Product (with Section valves)
Product 1 Split 4 - 4 - 4 / Product 2 Split 4 - 4 - 4**

In this case each manifold would be fed by a section valve. There would be 6 total section valves (3 sections X 2 products). Most often one set (top) of flow indicators would be Full Flow for high rate fertilizer and 2nd set (bottom) would be Low Flow for starter.

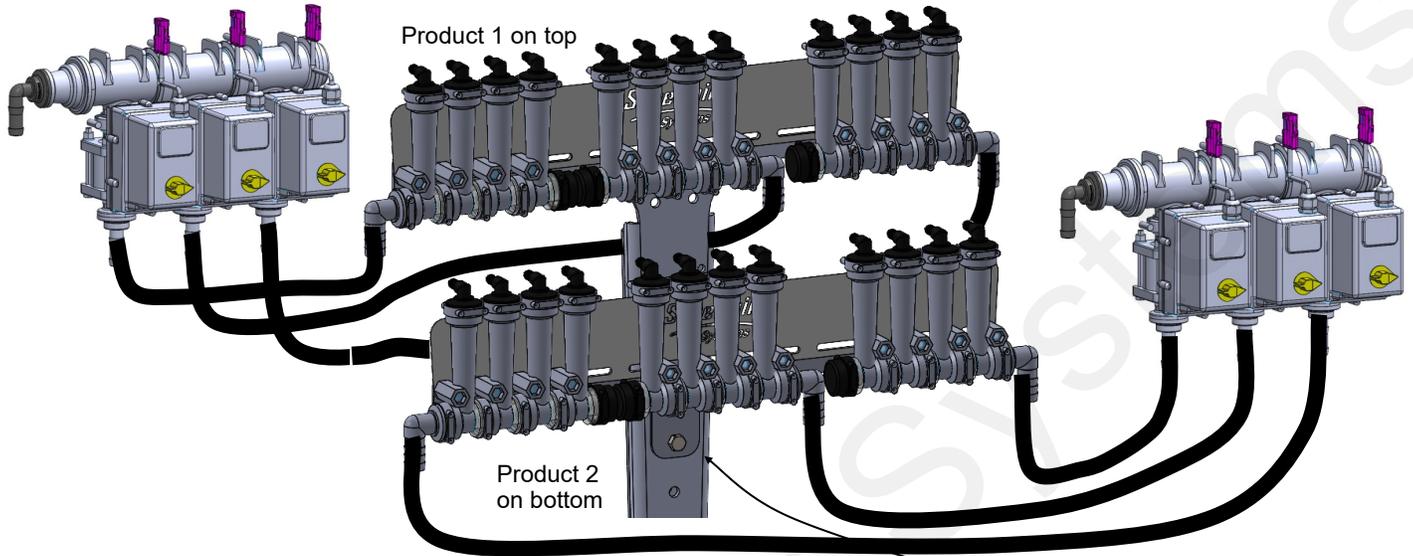

Dual Product Add-on Kit
515-02-1005 12 Row
515-02-1006 6 Row

General Plumbing Guidelines

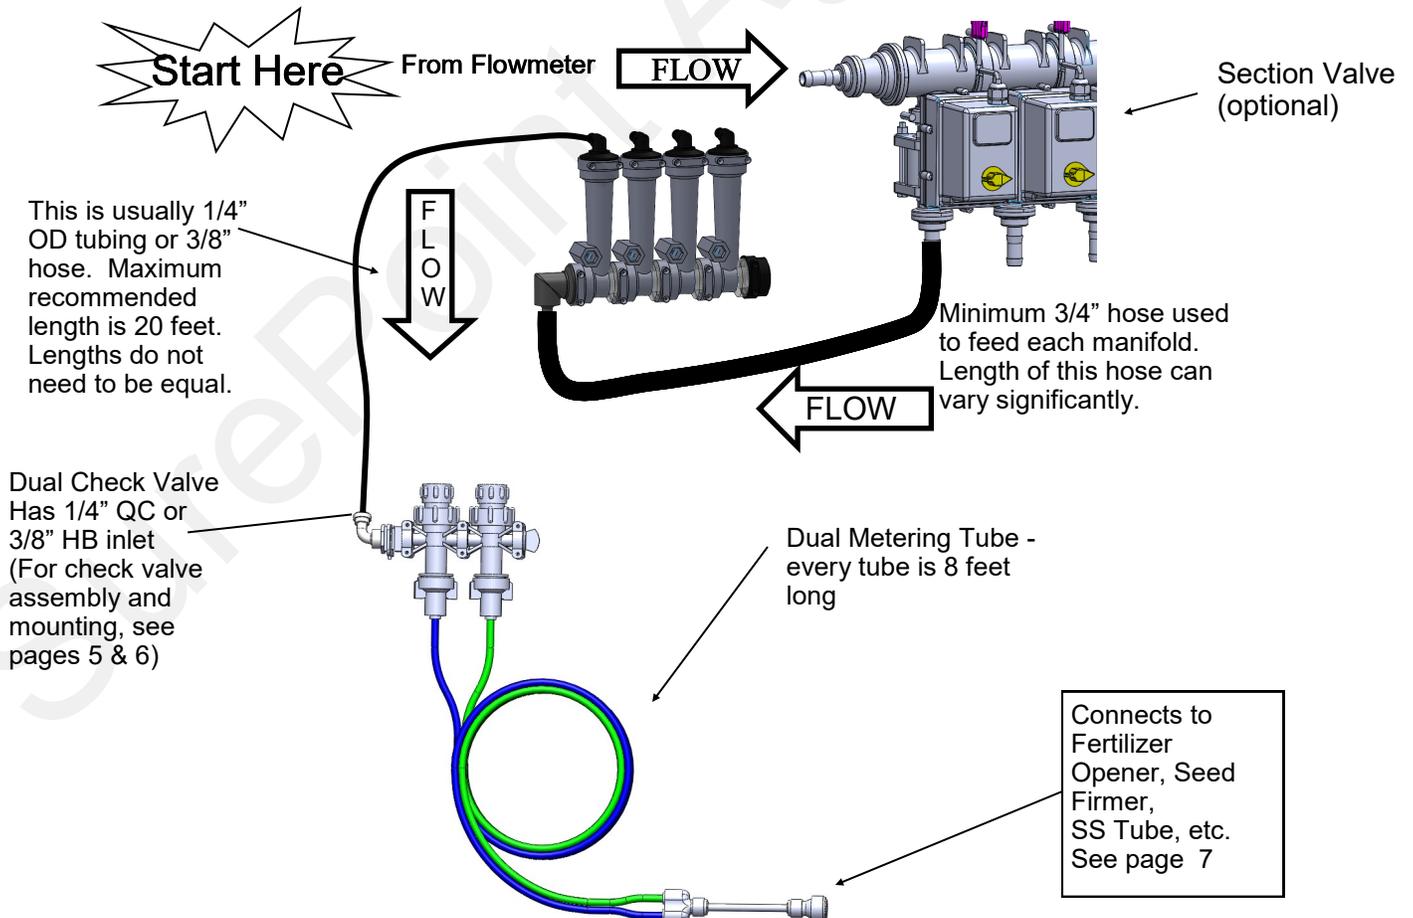

Field Operation of Dual Metering Tube - Dual Check Valve System



The dual metering tube allows for three application rate ranges. Liquid fertilizer solutions can have widely variable viscosity ranges. Therefore, based on temperature, tank mixing and fertilizer batch, the best tube to use will change.


SurePoint recommends you start with the larger tube ON only. This is the middle application range and is a good starting point. Conduct a test using the test speed mode to determine your system pressure. Recommended pressure is between 8 - 30 PSI for electric pumps. If pressure is below 8 psi, some check valves may not open and row to row distribution will be uneven. Pressures up to 80 PSI may be used with PumpRight hydraulic pumps.

Start with green (larger) tube ON, blue (smaller) tube OFF:

- **Pressure below 10 PSI: Turn green (larger) tube OFF and blue (smaller) tube ON.**
- **Pressure over 30 PSI: Turn BOTH tubes ON.**

Other tubes (different colors, different sizes) are available if needed for different application rates.

** Ultra Low Rate Application –For rates from 2-5 oz/min/row use a 12 foot length of metering tube. To calculate oz/min/row: $Oz/min/row = (GPA \times MPH \times spacing \text{ (inches)}) \div 46.4$

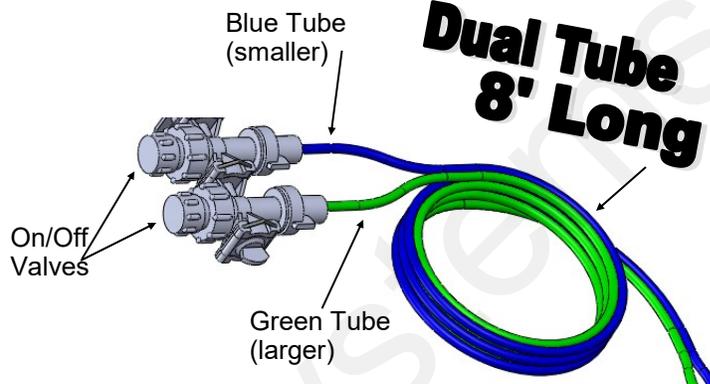


	GPA on 30" rows (approximately, will vary)
Blue Tube	1.5 - 3
Green Tube	3 - 6
Blue & Green Tube	6 - 10
Minimum Recommended flow for Blue Tube (8 ft)	4 - 5 oz/minute

These rates are for a high viscosity fertilizer product. The rates will be higher for a low viscosity fluid such as water.

Dual Check

Valve Plumbing Diagram

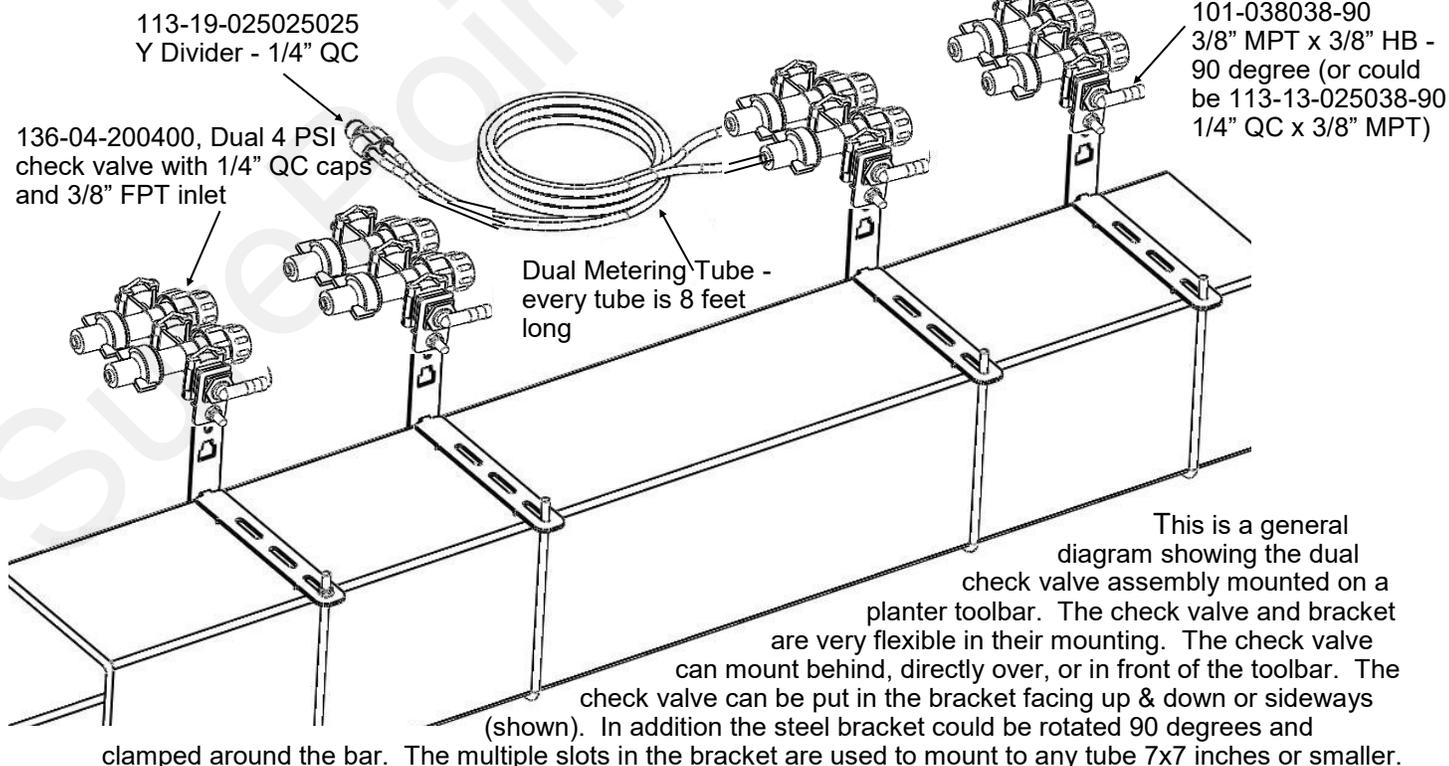

clamped around the bar. The multiple slots in the bracket are used to mount to any tube 7x7 inches or smaller.

Dual Check Valve Assembly Steps





SurePoint
Ag Systems

Additional pictures and instructions on Page 8.

Follow these steps to mount each check valve to the steel bracket.

1. Screw the 3/8" MPT x 1/4" QC (or 3/8" HB) elbow into the check valve using blue thread sealer. Orient the hose barb to run the hose as needed from the flow indicator.
2. Insert the check valve into the "C" notch in the end of the bracket, according to how you want the check valve to be mounted on your planter. Orient the wire clips up or to the side for easiest access.
3. Slide the small "C" clamp bracket around the check valve to lock it in place.
4. Install the 1/4" carriage bolt and flange nut to secure the "C" clamp plate around the check valve.
5. Now, mount the check valve on the bar. (See below for various options.) Hold the check valve and long bracket assembly on the toolbar. Slide the tab on the front of the short bracket into the upper or lower notch on the long bracket.
6. Slide the L bolt into the appropriate slots on the brackets for your tube size. Tighten the 1/4" flange nuts to hold the bracket in place.

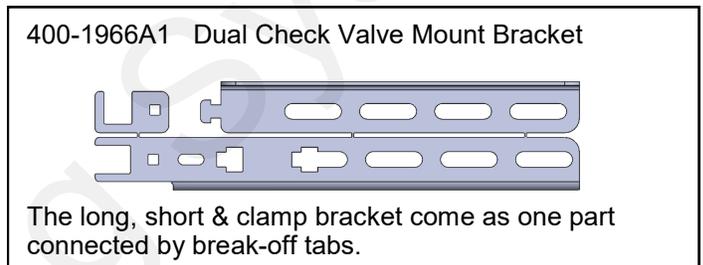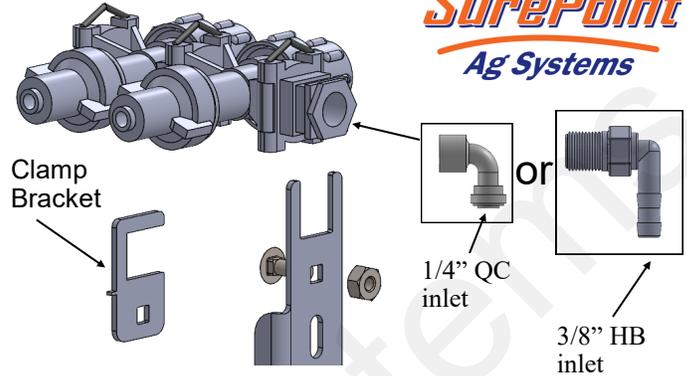

Check Valve Mounting Options

The dual check valve mounting bracket is very flexible to fit many different planter configurations. Three options are shown here to illustrate some of the possibilities. The 1/4" QC or 3/8" HB can be oriented in whatever direction is best to accept the hose from the flow indicator.



<p>Example 1. Use the long bracket on the top of a bar. The check valve is mounted vertically. The liquid supply hose is ran directly on the front side of the bar. The L-bolt is placed in slots to clamp on a 4x6 inch tube.</p>	<p>Example 2. Use the long bracket on the rear of a bar. The check valve is mounted over the top of the bar. The supply line would run above and behind the bar. The short bracket is placed in the notch to mount the check valve closer to the bar.</p>	<p>Example 3. Use the long bracket on the front of a 3x7 bar (vacuum tube on some planters). Mount the check valve hanging forward of the bar. The supply line will run directly over the bar. The excess bolt and bracket length can be cut off.</p> <p>311-0408000800-05 1/4" L Bolt</p>
---	--	---

Dual Check Valves on Parallel Linkage




1. Insert head of 1/4" x 3/4" bolt into the opening of check valve as shown below and attach with 1/4" flange nut to the top slotted hole of the mounting bracket. Tighten nut, taking care not to spin the bolt head in the plastic valve body.
2. Bolt mounting bracket to planter row unit parallel linkage using 1/4" x 1" hex head bolt, 1/4" fender washer and 1/4" nylon nut. Wrench tighten.

NOTE: Ensure top two tabs are resting on parallel linkage arm before tightening.

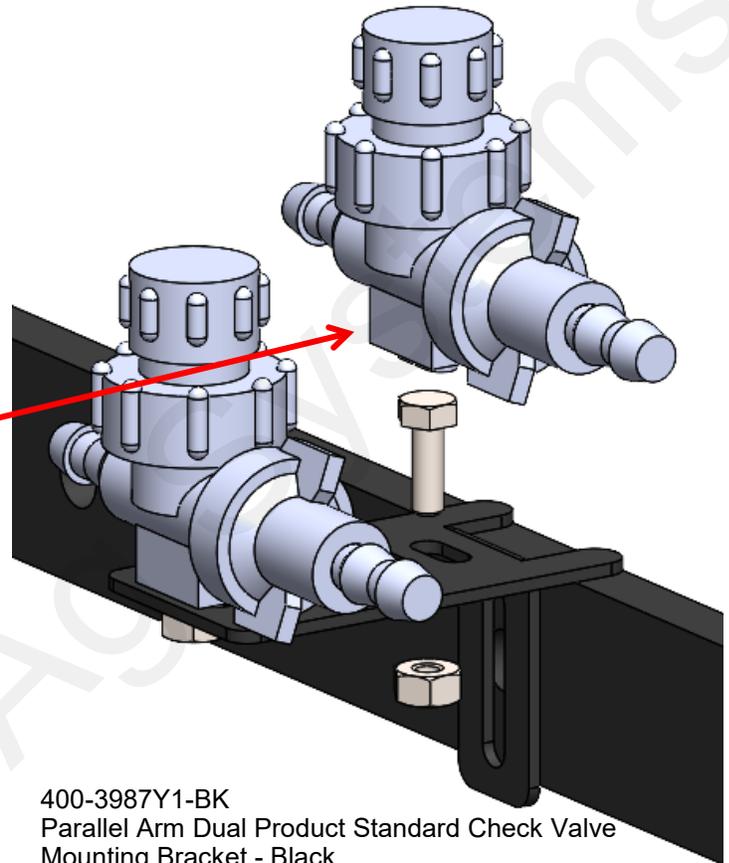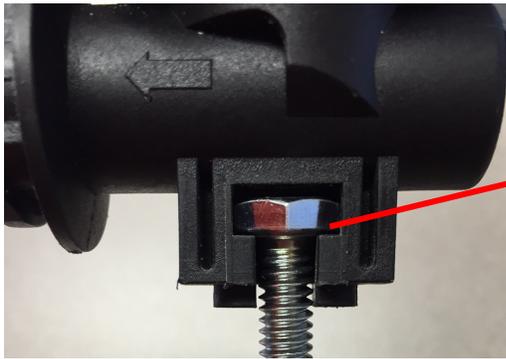

400-3987Y1-BK
Parallel Arm Dual Product Standard Check Valve
Mounting Bracket - Black

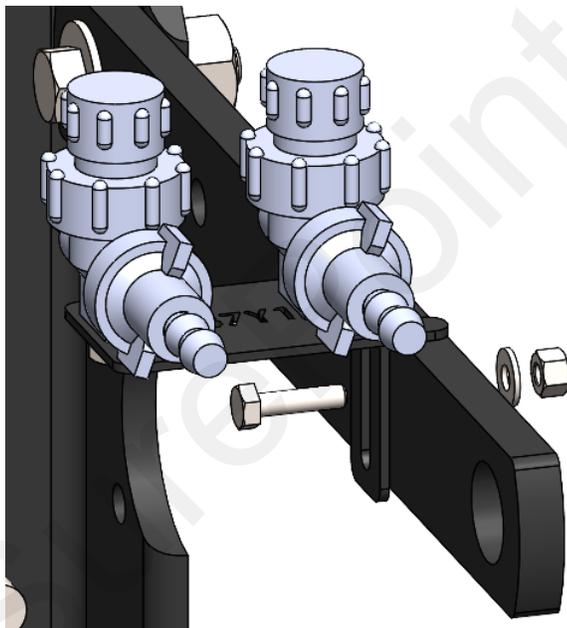


Dual Check Valves on Parallel Linkage


Cont.



1. Break off mounting tab by bending back and forth several times until the tabs break.
2. Bolt mounting bracket to planter row unit parallel linkage using 1/4" x 1" hex head bolt, 1/4" fender washer and 1/4" nylon nut. Wrench tighten. *Note: Ensure top two tabs are resting on parallel linkage arm before tightening. Bracket can be mounted on the outside or inside of the row unit, check for clearance.*

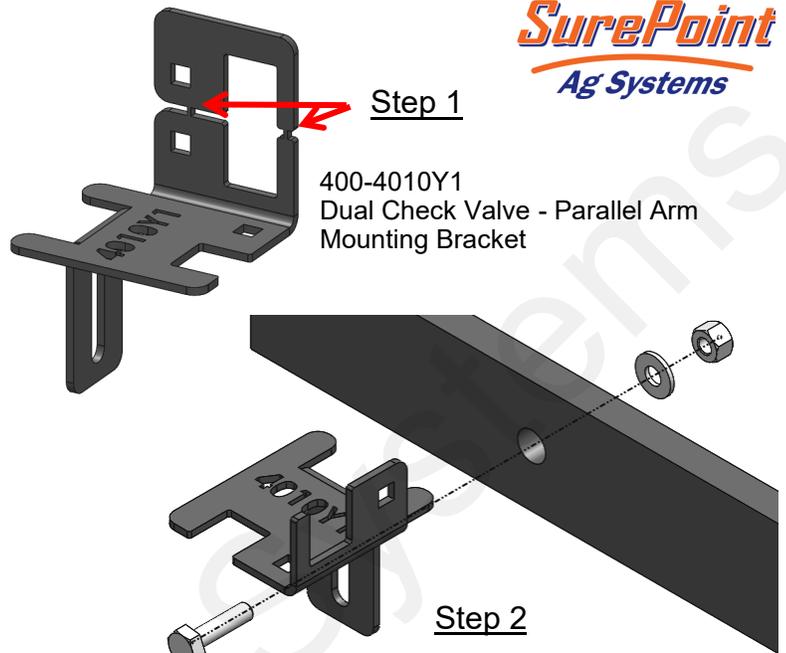

3. Choose dual tube valve orientation based on planter model and setup. Thread the provided inlet hose barb fitting prior to valve mounting. *Note: In some cases, a 90° hose barb will need to be used for the inlet hose. See orientations, right.*
4. Insert the check valve into the "C" notch in the bracket and slide the C clamp bracket around the check valve to lock it in place. Fasten clamp bracket in place using 1/4" x 3/4" carriage bolt and nylock nut.
5. Route plumbing hose and tube to and from the check valve and check for clearance from row unit travel.

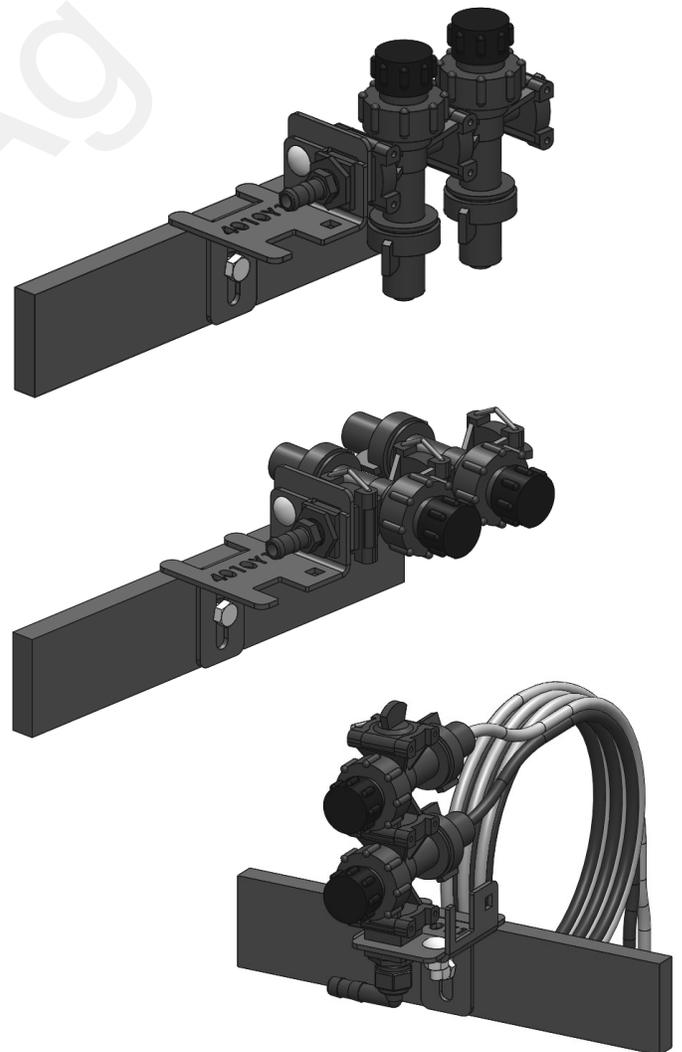


Connection to Keeton Seed Firmer, Rebounder Seed Covers or through thin wall stainless steel tubes



1. Mount the Keeton Seed Firmer or Rebounder Seed Cover.
2. Route the tube included in the above kit as instructed.
3. Attach the 1/4" tube to the 1/4" QC Y divider fitting.
4. Zip all tubing to the planter and row unit in as many locations as possible.

For thin wall stainless steel tubes, you can push the 1/4" black tubing all the way through the stainless steel tube so fertilizer will run directly from the tubing on to the ground.

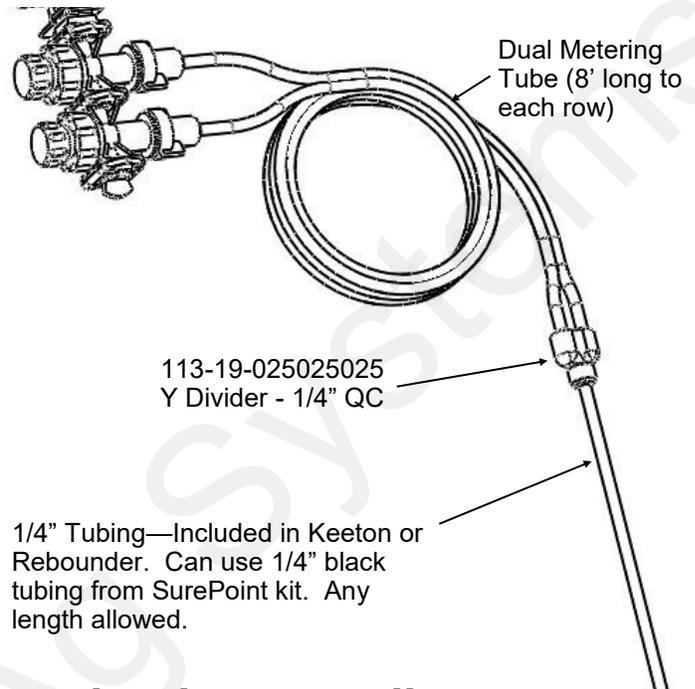


Connection to Totally Tubular or other heavy wall Stainless Steel Tube Ground Application Devices


When using a 3/8" OD stainless steel tube to apply fertilizer to the ground, there are two options for the delivery tube plumbing. If the tube ID is less than 1/4" (tubing will not fit inside tube) this attachment method must be used. The description following is for Option 1. See bottom right picture for Option 2.

1. Use the 1/4" x 3/8" QC fitting shown. Push the 3/8" end onto the stainless steel tube. (Hint: if the fitting slips off the stainless steel tube, use sandpaper or a file to roughen the end of the tube slightly)
2. Use a short piece of 1/4" black tubing to connect the Y fitting to the reducer fitting on the stainless steel tube.
3. Zip all tubing to the planter and row unit in as many locations as possible.

Option 1: QC Fitting attaches to SS Tube

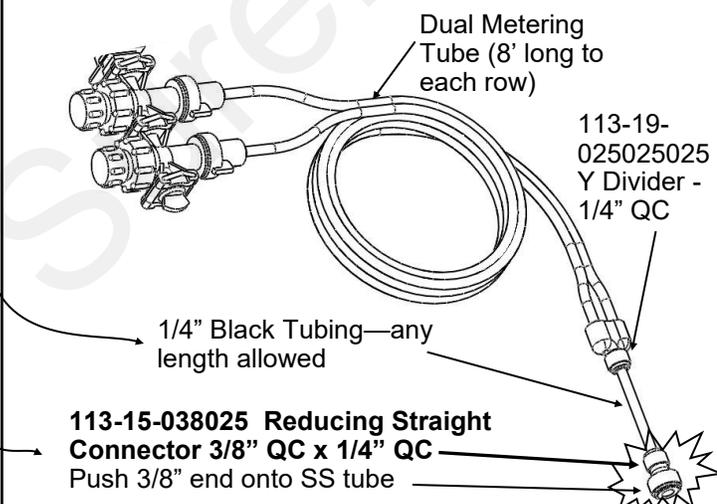

Option 2: 3/8" Hose attaches to SS Tube or 3/8" HB (Typical for higher rates)

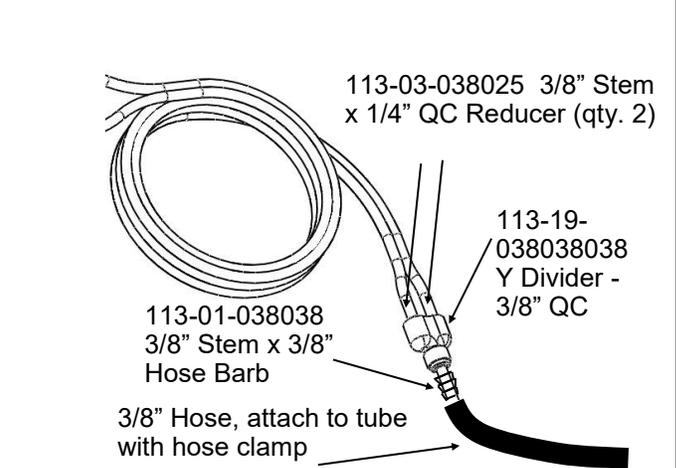

See page 6 for additional mounting instructions.

1. Bolt the dual check valve bracket onto the flow indicator T-bracket.
2. Snap off the top piece of the dual check valve add-on bracket.
3. Insert each dual check valve into the slot, using the groove in the back. (see dual check picture)
4. The top piece slides down onto the check valve in the groove in the back. Fasten with hardware included in the add-on bracket kit.

