

Astro GPS Speed Sensor


D

Wiring & Elec.

The Astro GPS Speed Sensor is the simplest speed sensor to use with the SureFire Commander II Controller. The GPS receiver uses the GPS satellites to track only speed. The output from Astro is a pulse to communicate speed to the Commander II.

PN **203-01-01410** Astro 2, 2 Hz GPS Receiver (most common with Commander II)
 PN **203-01-01425** Astro 5, 5 Hz GPS Receiver

Speed Calibration for Commander II: **0.189**
 Astro Minimum Operating Speed: **1.0 MPH**

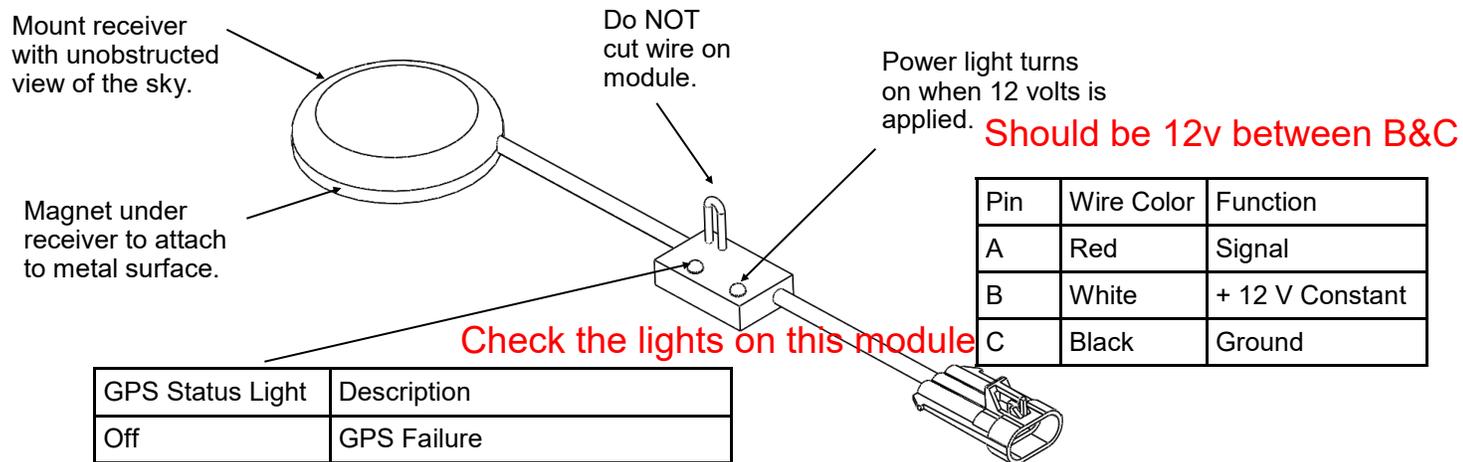

Pin	Wire Color	Function
A	Red	Signal
B	White	+ 12 V Constant
C	Black	Ground

GPS Status Light	Description
Off	GPS Failure
Blinking	Acquiring GPS satellites
On	GPS signal acquired

