## 396-100011

## TT-200



## **Installation Instructions:**

- 1. Remove depth gauge wheels and disc's, taking note of shim placement
- 2. Remove factory seed tube guard
- 3. Lift TT-200 up into position on row unit
- 4. Align roll pin holes and install roll pins
- Re-Install seed tube
- 6. Re-Install disc openers taking care to get the correct shim placement
- 7. Re-Install depth gauge wheels