

## 396-5594Y1


#### PR17/PR30 Section Valve

#### Mounting Bracket Instruction Manual

Kit Number: 520-00-035200

Kit Description: PR17/PR30 Pump Mounted Section Valve Kit w/ 2 KZ

TX2 Series Electric Ball Valves with Fittings

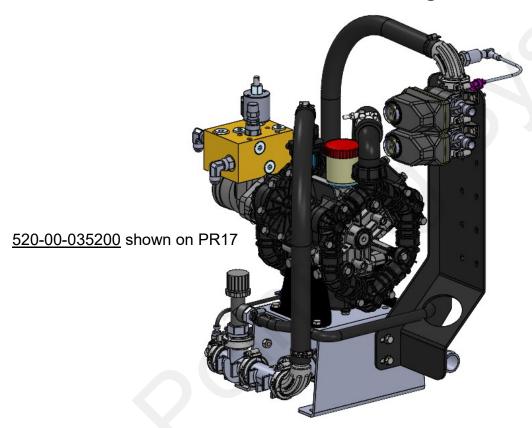

520-00-035300 (3 KZ TX2 Series Electric Ball Valves)

520-00-035400 (4 KZ TX2 Series Electric Ball Valves)

520-00-035500 (5 KZ TX2 Series Electric Ball Valves)

520-00-035600 (6 KZ TX2 Series Electric Ball Valves)


Revised: 6/28/2022



# Parts List PR17/PR30 Pump Mounted Section Valve Kits

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
*1	103-5023Y1	KZ Electric TX2 Series 2 Ball Valve Assembly	1
2	105-100BRBSWPG90	1" Manifold x 1" HB - 90 degree Sweep with 1/4" Gauge Port	1
*3	117-QD075	TX2 Series 3/4" HB x female QD fitting	2
*4	117-QD075-90	TX2 Series 3/4" HB x female QD fitting - 90 degree	2
*5	117-QDCLIP	TX2 Valve QD quick connect pin - Stainless	3
6	280-100-AG200	1" AG200 Bulk	24
7	300-050100-5	5/16" x 1" Hex Head Bolt - G5	4
8	323-05	5/16" Flange Nut	4
9	330-05	5/16" Flat Washer	4
10	350-1608	1" Hose Clamp	2
*11	384-1100	KZ TX Series Valve Mounting Hardware Bag	1
*12	399-EH-116	Silicon Grease Packet for TX2 Electric Valves	1
13	400-5593Y1	PR17/PR30 Section Valve Mounting Bracket - Weldment	1
14	521-08-SV	KZ Section Valve Pre-assembly Bag	1

<sup>\*</sup> Qty will vary for each kit. (Come in assemblies of 2, 3, or 4 valves / 1 fitting per valve / contain 1 extra pin)

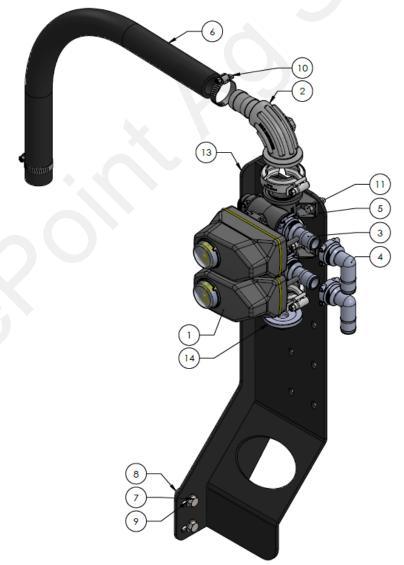


Revised: 6/28/2022




## Step by Step Instructions

 
Step 1


- 1. Remove hardware and support bracket mounted on pump base.
- 2. Mount 400-5593Y1 and support bracket back to pump base using four (4) 5/16" x 1" hex head bolts, nuts, and washers.

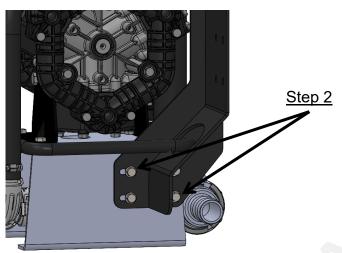





 
- 4. Install 105-BRBSWPG90 or fittings of choice from 521-08-SV pre-assembly bag, as shown.
- 5. Replace valve end caps with 177-QD fitting of choice, using the 117-QDCLIP provided.
- 6. Route 1" hose from flowmeter to top of section valve stack and secure using two (2) 1" hose clamps.

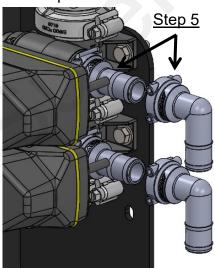



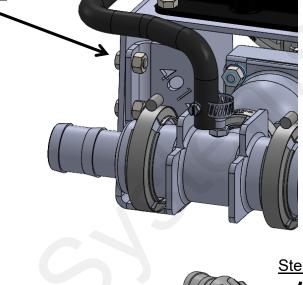

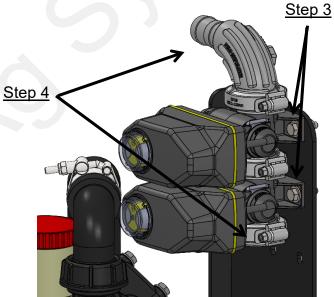

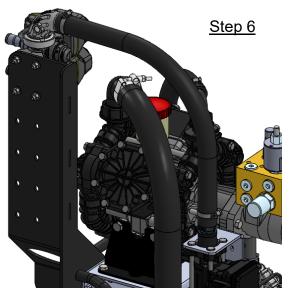




### Suggested Items

Part Number	Description
521-05-050100	2 Wire Pressure Sensor (4 - 20 mA out) with 2 pin 150 MP Tower Connector

Part Number	Description		
521-05-050150	3 Wire Pressure Sensor (0 - 5 V DC) with 3 pin 150 MP Tower Connector		

#### **Recommended Location**


- 1. Using thread sealant, thread in pressure sensor into 105-100BRBSWPG90, as shown.
- 2. Plug pressure sensor connector into the pump harness connector labeled "Pressure".

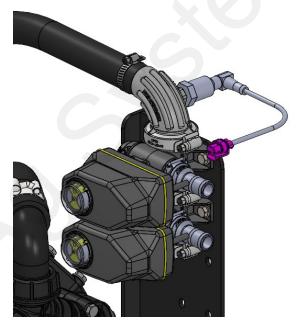

#### Second Install Location

- 1. Replace 105-100BRBSWPG90 with fitting of choice provided in section valve pre-assembly bag. Reroute hose to flowmeter.
- 2. Install 105-100PLG025 using manifold clamps and gaskets, all provided in pre-assembly bag.
- 3. Using thread sealant, thread in pressure sensor into 105-100PLG025, as shown.
- 4. Plug pressure sensor connector into the pump harness connector labeled "Pressure".

This install location works best with up to five (5) valves.

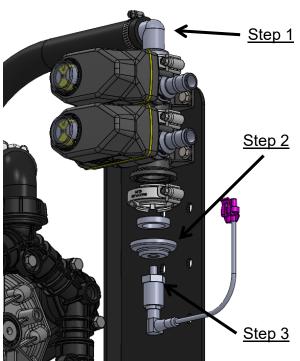

Revised: 6/28/2022