

My Rate is Too High and It Won't Come Down

- (1) Be sure Minimum Flow Limit is 0 (or low enough -- this is GPM not GPA). (Setup > RATES)
- (2) Be sure PWM LOW LIMIT is low enough.
- (3) On hydraulic pump, be sure red manual override button on the hydraulic PWM Valve block is down and locked.
- (4) Be sure Flowmeter Calibration number and units are correct.