



396-001860 Multiple Section LiquiShift Assembly and Mounting

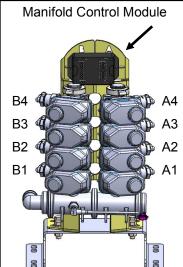


Valve Stack can mount directly to forward/ backward frame. Use optional bracket kit 515-105100 to mount valve stack to lateral frame members.

Feed into the section valve stack using 3/4", 1", or 1-1/2" hose from the pump. Each section valve output hose may be split using tees or crosses to feed the necessary number of banks per section.

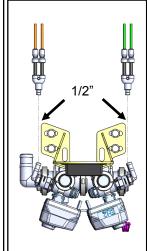


Examples shown: 4 Rows per Section (left) 12 Rows per Section (below)

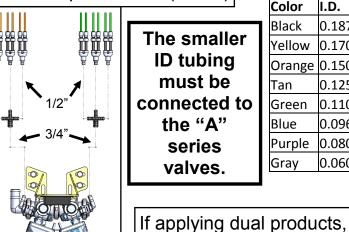


ivietering i ube		
Sizes		
Color	I.D.	
Black	0.187	
Yellow	0.170	
Orange	0.150	
Tan	0.125	
Green	0.110	
Blue	0.096	
Purple	0.080	
Gray	0.060	

Motoring Tubo

Dual metering tube comes pre-assembled in 3, 4, or 6 row assemblies. 1/2" hose barb ends go to the section valves, 3/8" tubing goes to flow indicators.

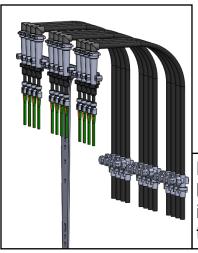

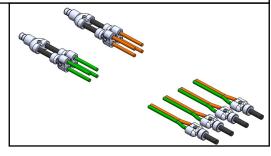

use kit 515-105200 to raise the second valve stack above the first to allow visibility of the valves.

Revised: 7/31/2014

Mount flow indicators in banks (can be on one or multiple brackets). Dual metering tube Y's will attach to bottom of flow indicator. Top of flow indicator outputs through the check valve to the row.




LiquiShift Example Generic Planter Setup Multiple Sections


Flowmeter Kit	Range	Hose Barb Size
500-02-2050	.3-5 GPM	3/4"
500-02-2060	.6-13 GPM	1"
500-02-2070	1.3-26 GPM	1"
500-02-1080	2.6-53 GPM	1-1/2"

Revised: 7/31/2014


Pump mounted in "Over the Tire" location

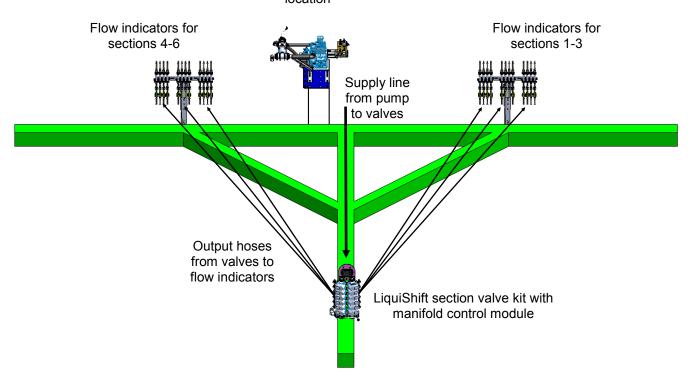

Valves A1 and B1 both feed the pre-assembled metering tube set which goes to the Section 1 flow indicators.

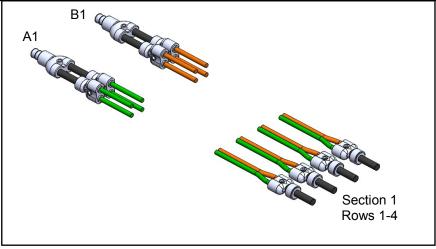

Page 2 © 2014 SureFire Ag Systems, Inc.

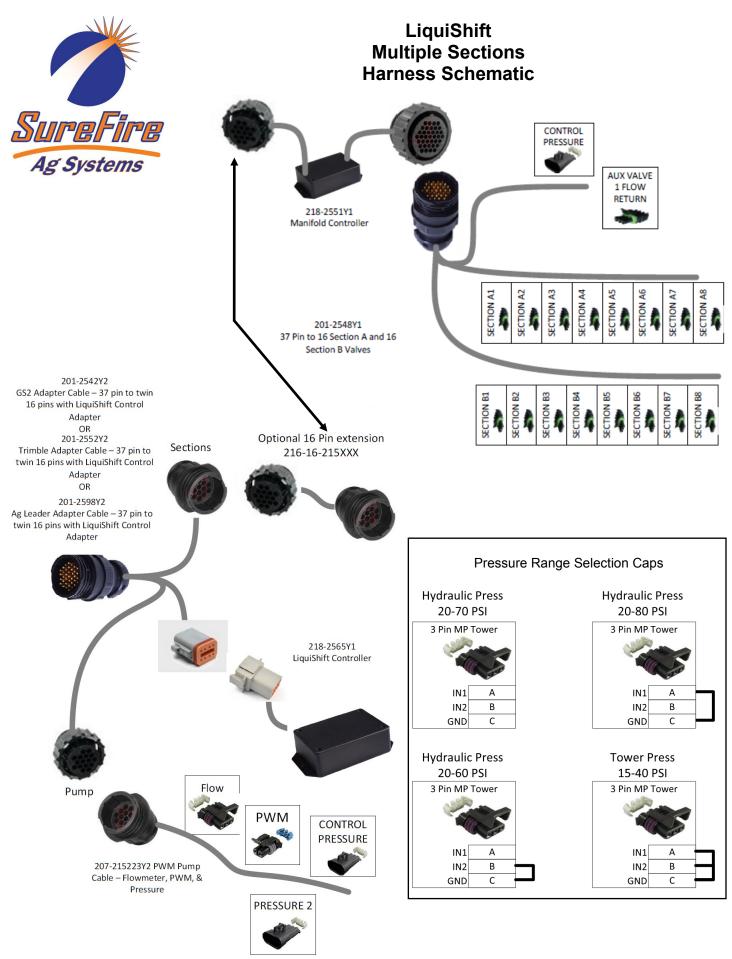

396-001860 LiquiShift Multiple Section

Page 3 © 2014 SureFire Ag Systems, Inc.

Revised: 7/31/2014