

# 396-100007

## TT-002



### **Installation Instructions:**

1. Remove depth gauge wheels and disc's, taking note of shim placement
2. Remove factory seed tube guard
3. Drill a 5/8" hole in the top of the shank of the row unit as shown. This hole is centered on the row unit, left to right, and 1" to the center of the hole from the front of the shank. Not all row units are made the same so you may have to take a punch and drive into this opening to make it slightly larger
4. Slide TT-002 up into position and feed the top of the tube through the hole that was just drilled
5. Align roll pin holes and install new roll pins (supplied). Important: Do not force the holes to line up. Due to slight differences in the planters, the top bend on the tube may have to be adjusted slightly to allow the roll pins to line up without force
6. Re-Install seed tube
7. Re-Install disc openers taking care to get the correct shim placement
8. Re-Install depth gauge wheels