



396-2578Y1 LiquiShift Single Section Banjo Valves Assembly and Mounting

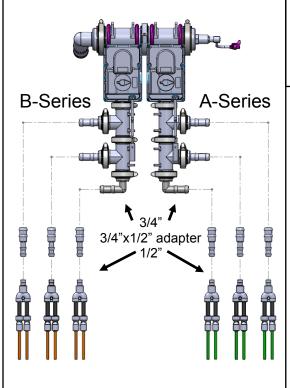

Feed section valves with 1-1/2" hose from pump. Each section valve may be split as necessary to feed the correct number of metering tube assemblies. (12 row example shown at left.)


The smaller ID tubing must be connected to the "A" series valves.


Color	I.D.
Black	0.187
Yellow	0.170
Orange	0.150
Tan	0.125
Green	0.110
Blue	0.096
Purple	0.080
Gray	0.060

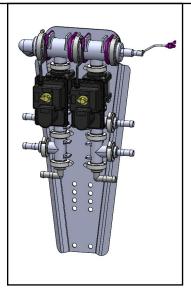

Revised: 7/31/2014

Dual metering tube comes preassembled. Hose barb ends go to section valves, 3/8" tubing goes to flow indicators.

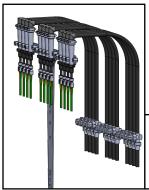

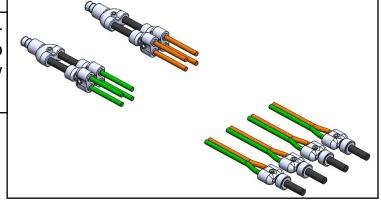


Mount flow indicators in banks (can be on one or multiple brackets). Dual metering tube Y's will attach to bottom of flow indicator. Top of flow indicator outputs through check valve to the row.




LiquiShift Single Section Banjo Example Generic Planter Setup

Flowmeter Kit	Range	Hose Barb Size
500-02-2050	.3-5 GPM	3/4"
500-02-2060	.6-13 GPM	1"
500-02-2070	1.3-26 GPM	1"
500-02-1080	2.6-53 GPM	1-1/2"

Pump mounted in "Over the Tire" location

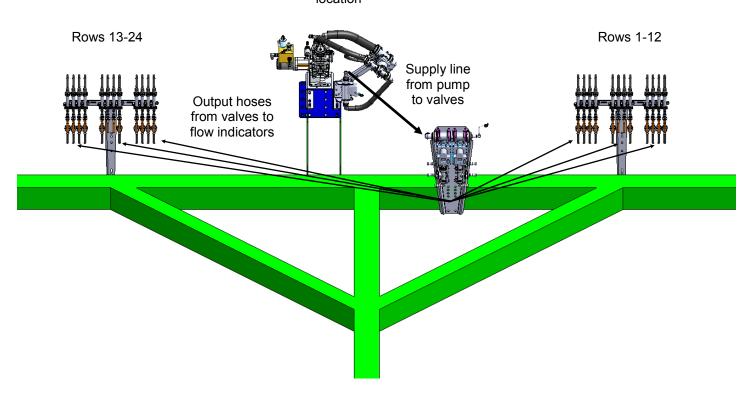

Valves A1 and B1 both feed the pre-assembled metering tube set which goes to the same set of flow indicators.

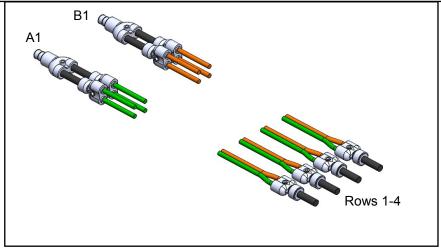


396-2578Y1 LiquiShift Single Section Banjo

Page 2 © 2014 SureFire Ag Systems, Inc.

Revised: 7/31/2014



LiquiShift Single Section Banjo **Harness Schematic**

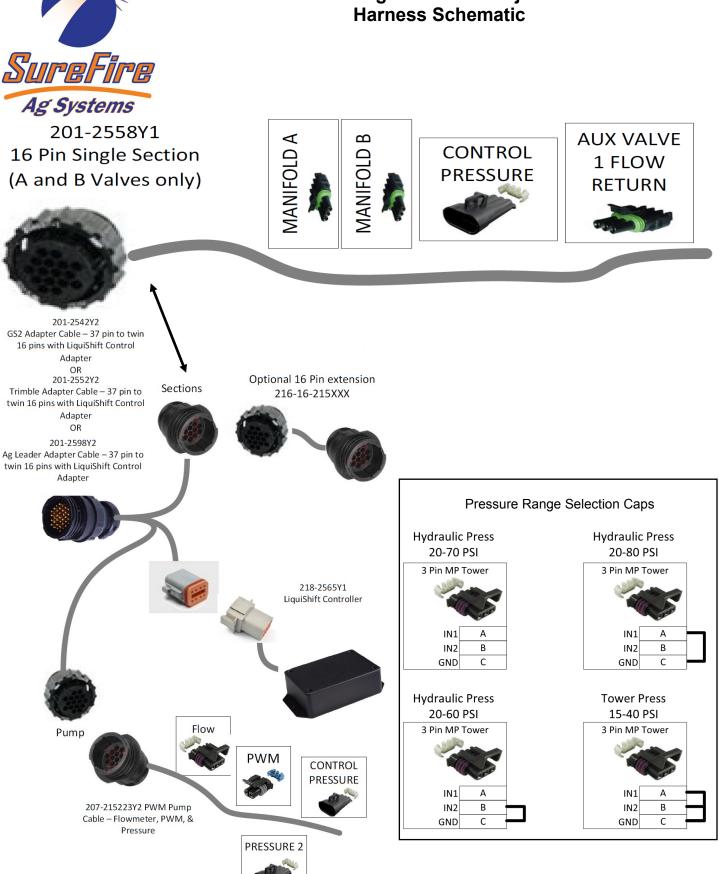

396-2578Y1 LiquiShift Single Section Banjo

Page 3 © 2014 SureFire Ag Systems, Inc.

Revised: 7/31/2014