




396-2889Y1

Plumbing Discharge Kit Installation Instructions

Kit Number: 520-00-103700

Kit Description:


2" Fill Line to 2" Tie In Kit for PR40 and D250 PumpRight

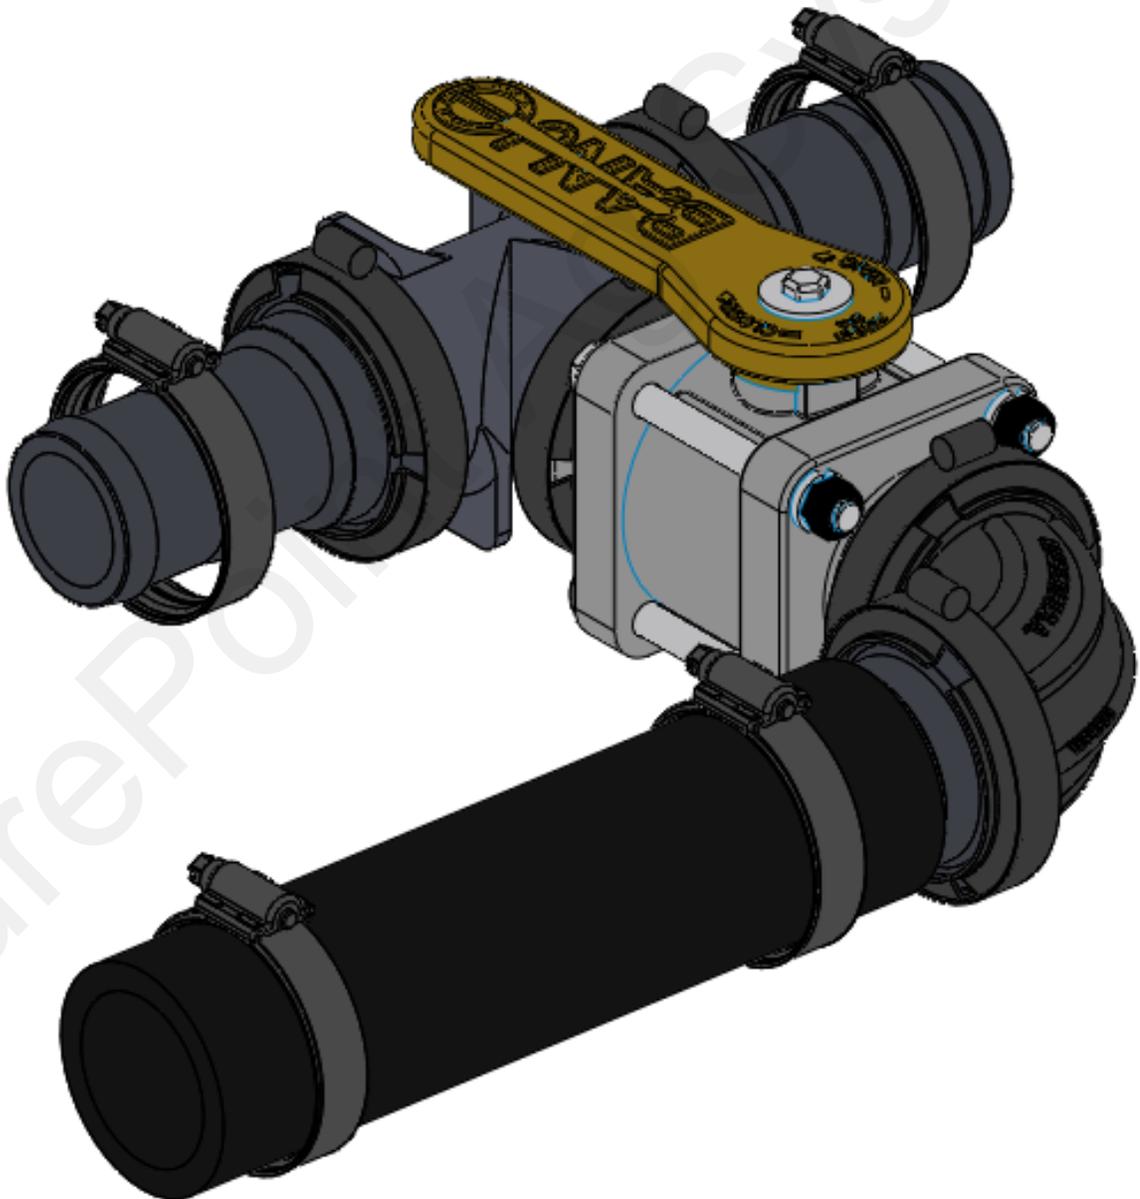



Parts List and Exploded View

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	100-075PLUG	3/4" Pipe Plug	1
2	100-125PLUG	1-1/4" Pipe Plug	1
3	102-200MVCF	2" Manifold Standard Port Poly Valve	1
4	105-150G	1 1/2" EPDM Manifold Gasket for 200 Series	5
5	105-200BRB	2" Manifold x 2" HB	3
6	105-200BRB45	2" Manifold x 2" HB - 45 Degree	1
7	105-200SWP90	2" Manifold Sweep - 90 Degree (Optional)	1
8	105-200TEE	2" Manifold Tee Fitting	1
9	105-FC200	2" Manifold Clamp	5
10	280-200-ENF	2" Enforcer Fertilizer Solution Hose	10'
11	350-PS288	Pressure Seal HD Clamp, Size 288 - 2.125" - 2.625" (2" ENF or WBS)	4


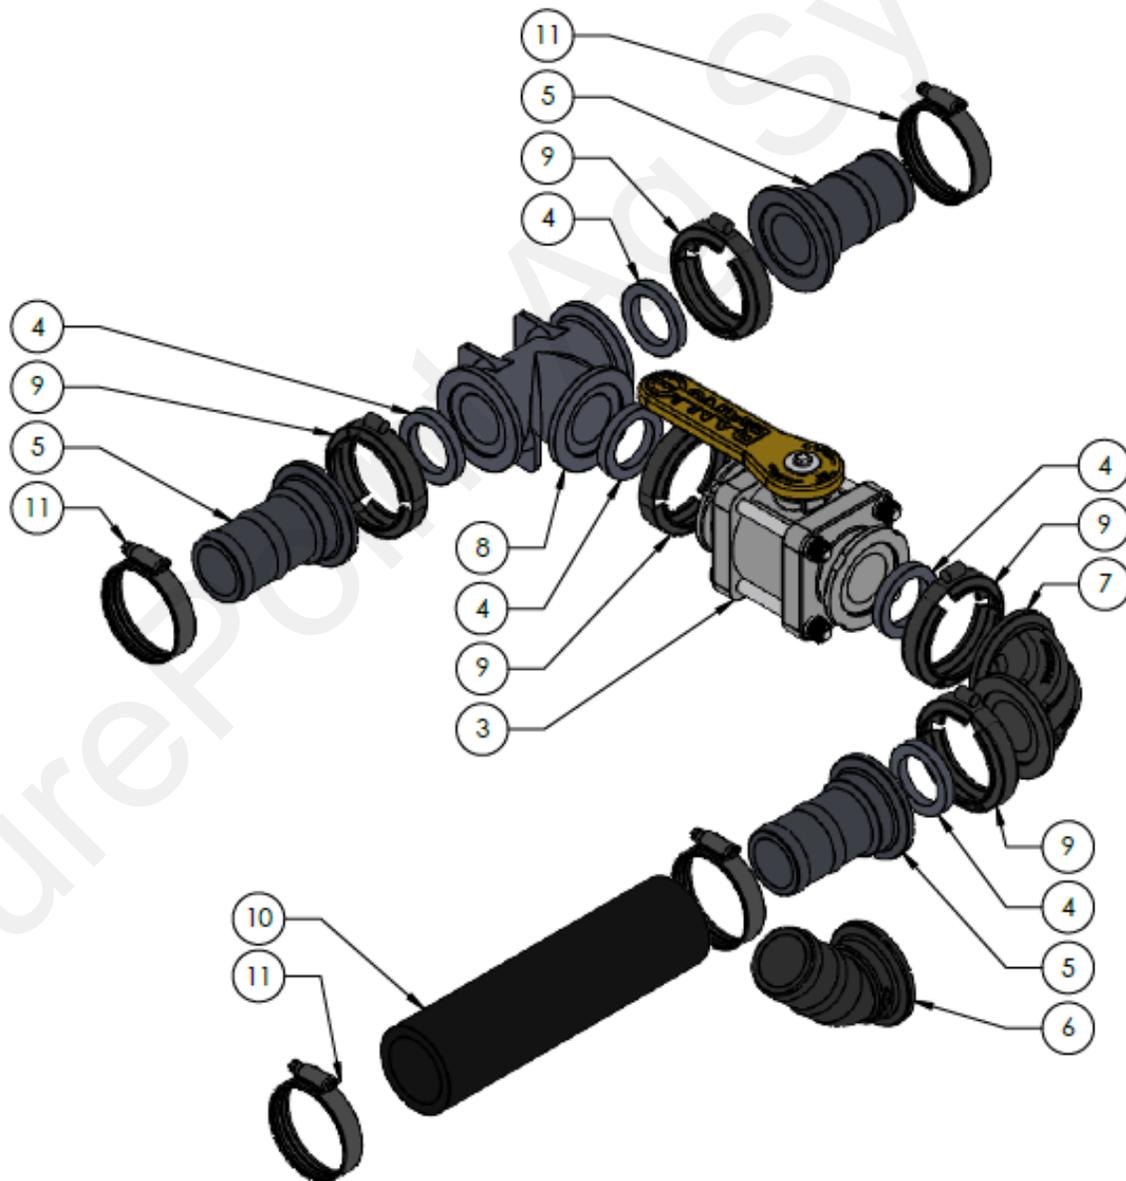




Step by Step Instructions

1. Assemble Discharge Kit as shown on previous page. (Item 7, 90° sweep is optional depending on implement.)
2. Cut 2" fill line and insert the two hose barbs of the discharge kit into fill line. Tighten with hose clamps provided.
3. Included 3/4" and 1-1/4" plugs can be used as necessary to plug unused fill/discharge bung on tank.
4. Route provided 2" hose to PR40 or D250 PumpRight System. Tighten with hose clamps provided.

NOTE: Splice into the fill line where it will be convenient to close the valve while filling the tank.

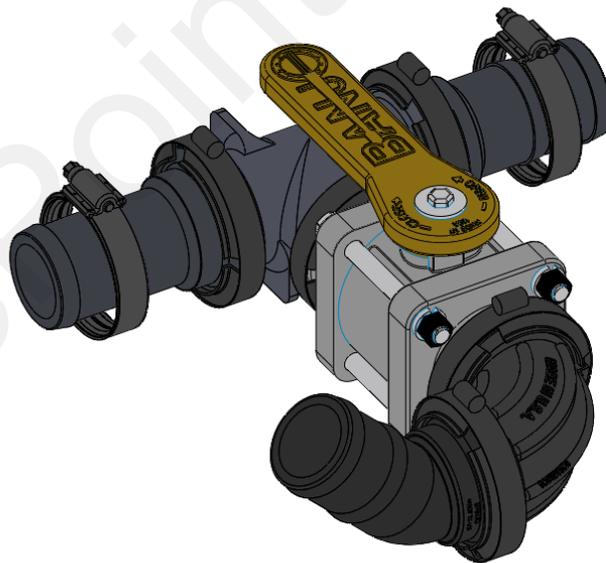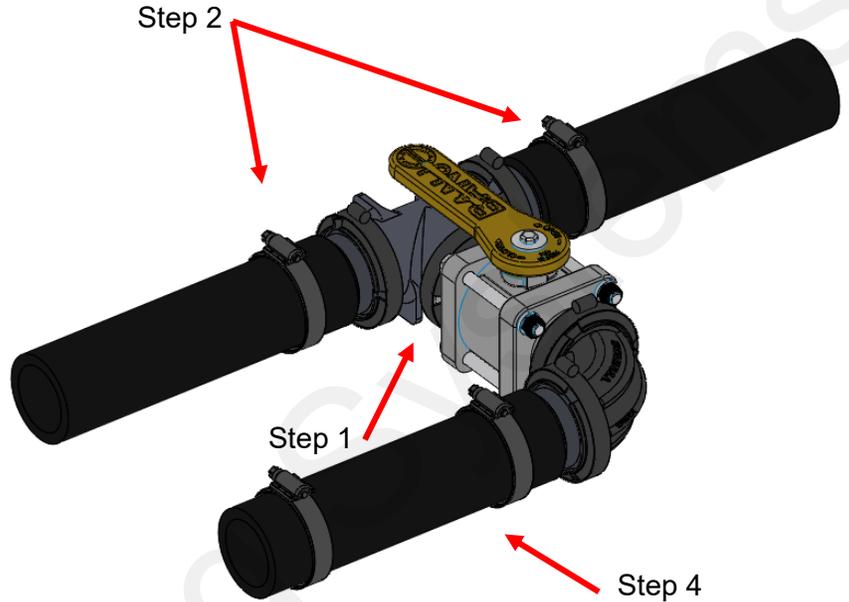

Shown with 200BRB45.