


# 396-001410



## *PumpRight mounting bracket instructions for JD Skiles or similar cone bottom trailer*

PumpRight Bracket kit for JD Skiles Cone Bottom Trailer  
Item Number: 515-03-203100

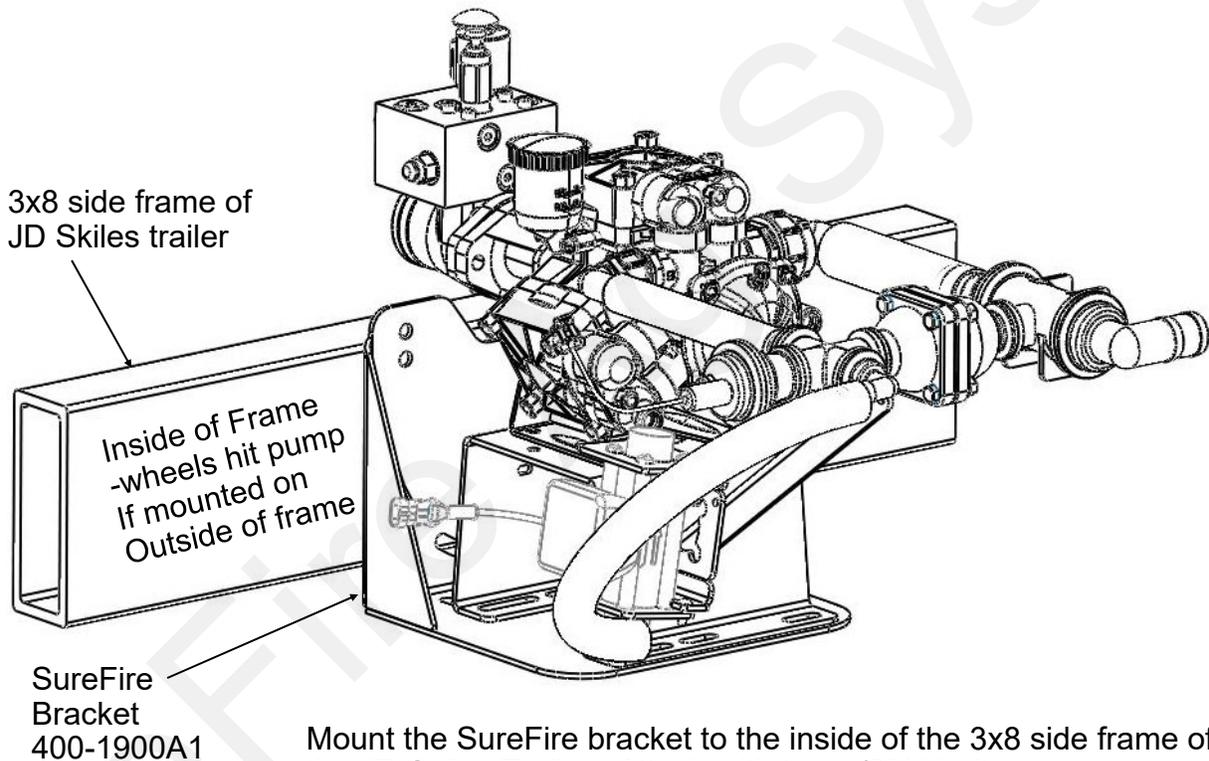

Mount the SureFire bracket to the inside of the 3x8 side frame of the JD Skiles Trailer. Attach with two 1/2" U-bolts.

- On dual cone bottom, centered on the trailer right side between both tanks works best.
- On a single cone bottom, position the bracket far enough rearward to gain clearance under the cone tank for the pump.

Bolt the PumpRight down to the bracket with four 1/2" bolts.

Complete liquid and hydraulic plumbing per other instructions.