




# 396-2888Y1


## 1-1/2" Discharge Plumbing Kit Installation Instructions

**Kit Number: 520-00-103600**

**Kit Description:** *Discharge Kit, 2" or 1-1/2" Fill 1-1/2" Hose, PR17/PR30*

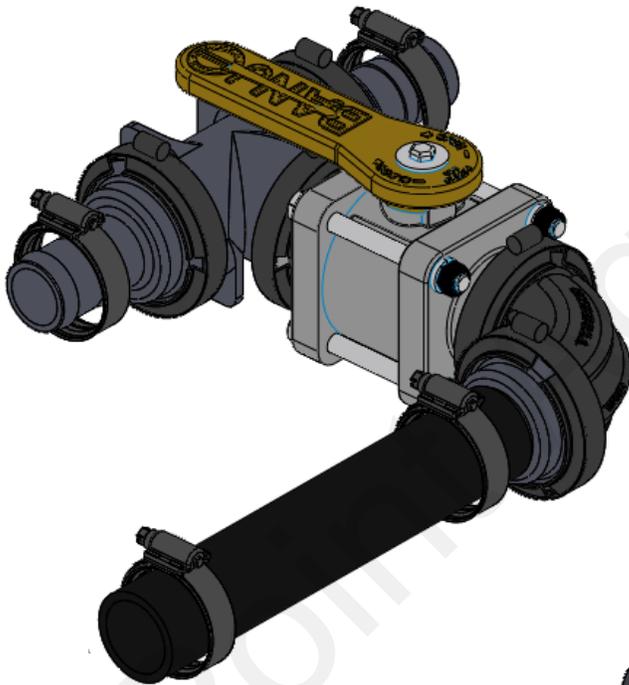

**For use with 1-1/2" Fill Line**

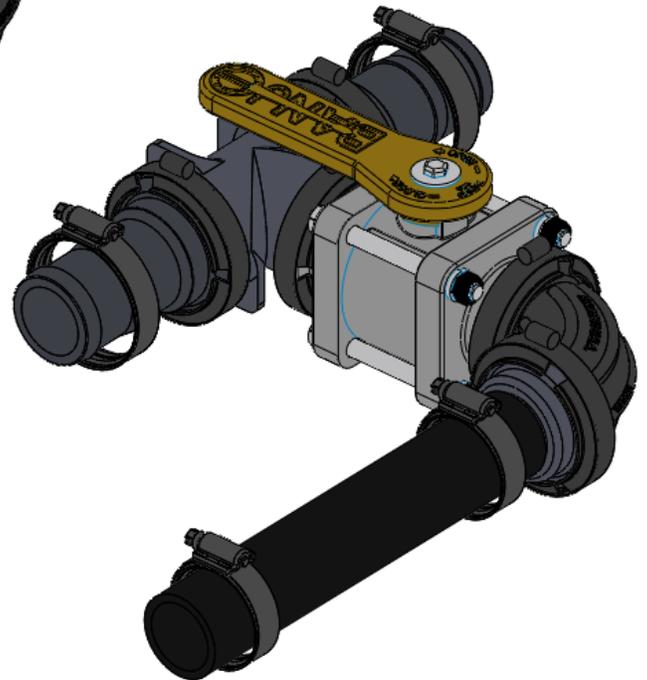


**For use with 2" Fill Line**



# Parts List and Exploded View

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	100-075PLUG	3/4" Pipe Plug	1
2	100-125PLUG	1-1/4" Pipe Plug	1
3	102-200MVCF	2" Manifold Standard Port Poly Valve	1
4	105-150G	1 1/2" EPDM Manifold Gasket for 200 Series	5
5	105-200150BRB	2" Manifold x 1-1/2" HB	3
6	105-200150BRB45	2" Manifold x 1-1/2" HB - 45 Degree	1
7	105-200BRB	2" Manifold x 2" HB	2
8	105-200SWP90	2" Manifold Sweep - 90 Degree (Optional)	1
9	105-200TEE	2" Manifold Tee Fitting	1
10	105-FC200	2" Manifold Clamp	5
11	280-150-ENF	1-1/2" Enforcer Fertilizer Solution Hose	15'
12	350-PS238	Pressure Seal HD Clamp, Size 238 - 1.625" - 2.125" (1-1/4" - 1-1/2" ENF,	4
13	350-PS288	Pressure Seal HD Clamp, Size 288 - 2.125" - 2.625" (2" ENF or WBS hose)	2



Use 105-200150BRB for 1-1/2" Fill Hose.

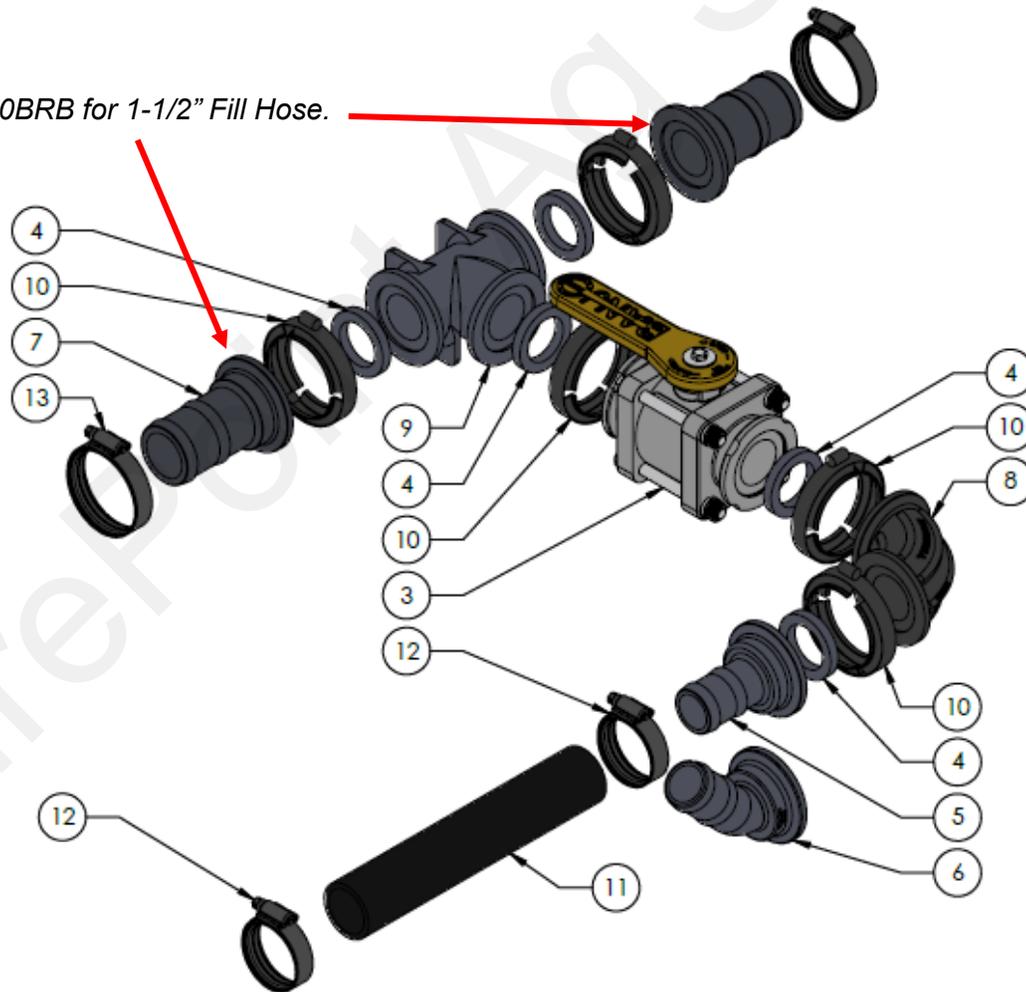



# Step by Step Instructions

1. Assemble Discharge Kit as shown on previous page. (Item 7, 90° coupling is optional depending on implement.)
2. Using the correct size hose barsbs for your fill kit, cut 2" or 1-1/2" fill line and insert the two hose barsbs of the discharge kit into fill line. Tighten with hose clamps provided.
3. Included 3/4" and 1-1/4" plugs can be used as necessary to plug unused fill/discharge bung on tank.
4. Route provided 1-1/2" enforcer hose to PR17 or PR30 PumpRight systems. Tighten with hose clamps provided.

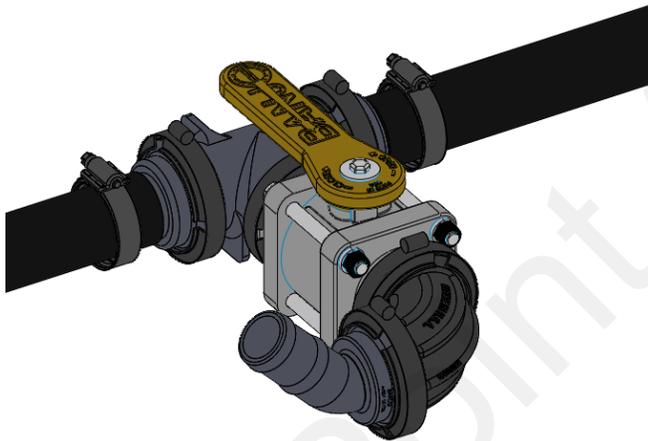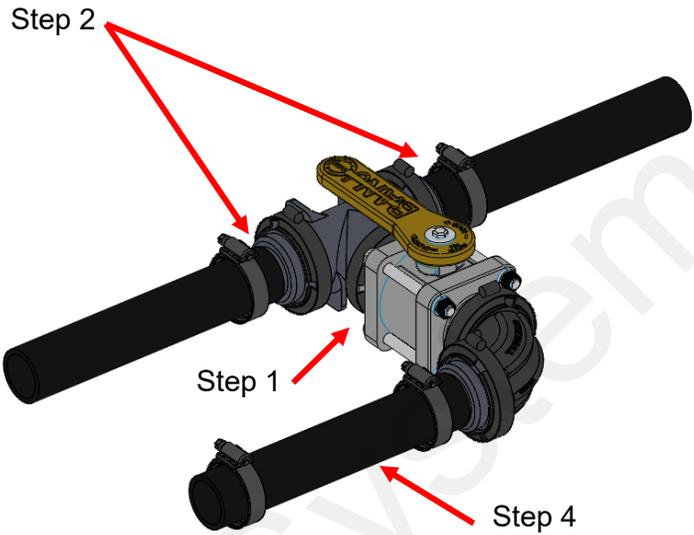

*Shown with optional 200150BRB45, included in kit*

*Recommended assembly if both Fill and Discharge Kits are purchased from SurePoint.*

