



396-4887Y1


QuickDraw 3000 Product Hose Connection Kit

Kit Number: 606-01-400325

Kit Description: QuickDraw Connection Kit for 1-1/2" Hose

Kit Number: 606-01-400350


Kit Description: QuickDraw Connection Kit for 2" Hose

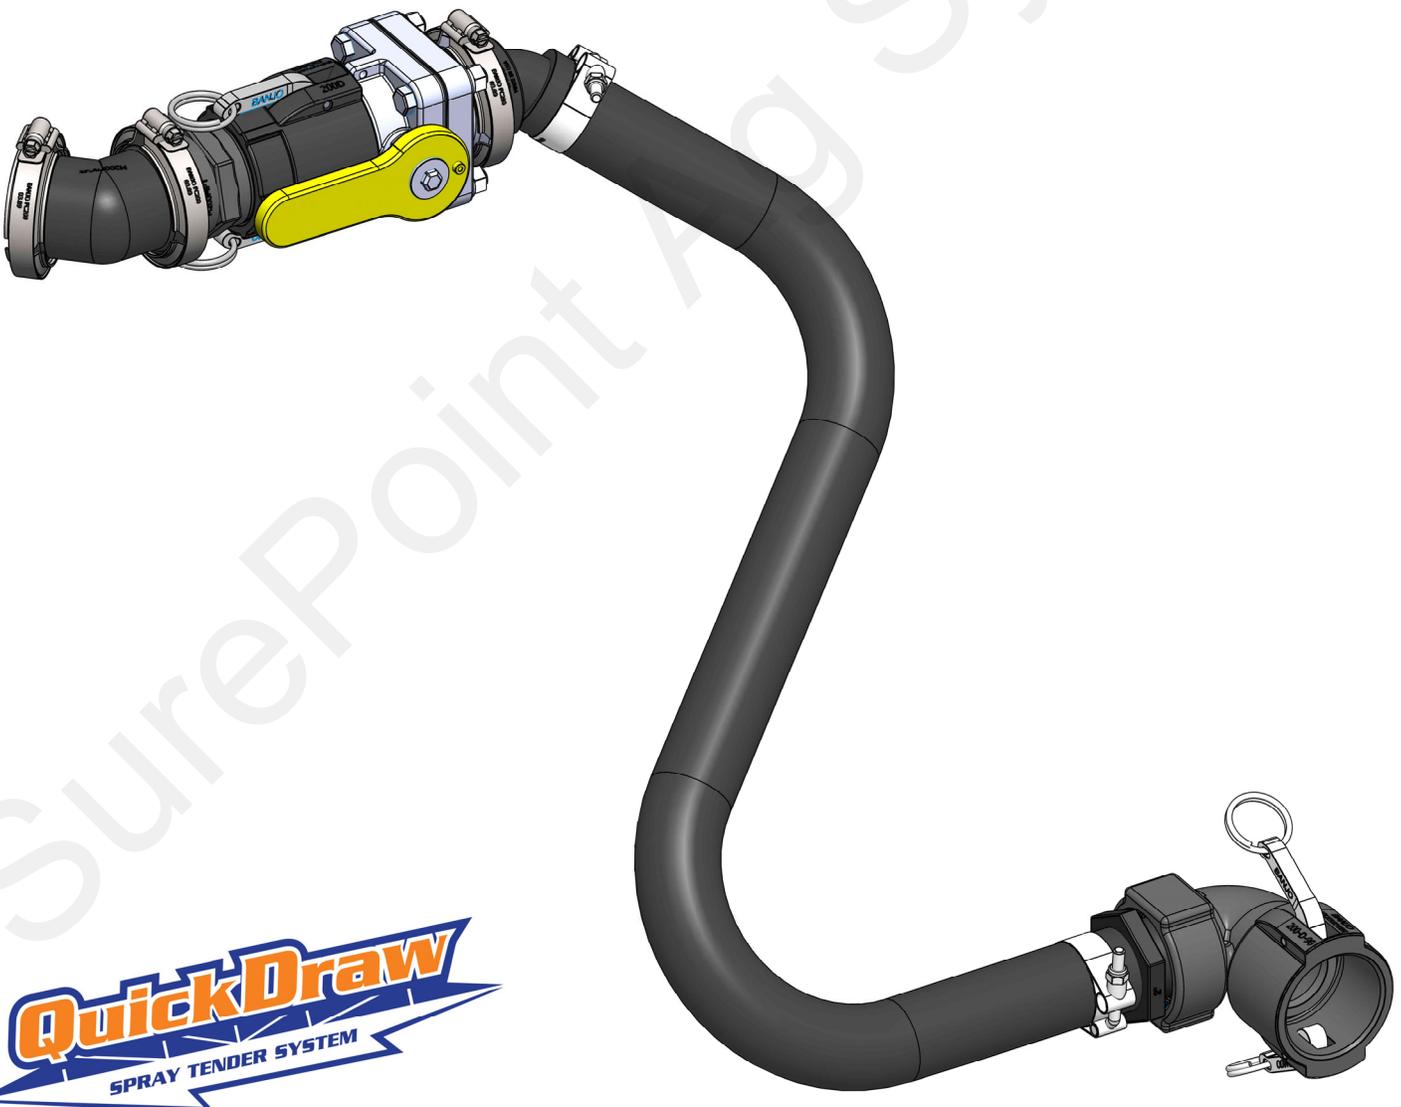



Parts List and Exploded View 606-01-400325 (1-1/2" Hose)

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-----------------|--|------|
| 1 | 101-200150 | 2" MPT x 1-1/2" HB | 1 |
| 2 | 102-200VSFCF | 200 Series Manifold x 2" Male Quick Coupler Standard Port Poly Valve | 1 |
| 3 | 105-150G-H | 1-1/2" EPDM Manifold Gasket for 200 Series Manifold fittings | 4 |
| 4 | 105-200150BRB | 2" Manifold x 1-1/2" HB | 1 |
| 5 | 105-200150BRB45 | 2" Manifold x 1-1/2" HB - 45 Degree | 1 |
| 6 | 105-200CPG45 | 2" Manifold Coupling - 45 Degree | 1 |
| 7 | 105-200MPT | 2" Manifold x 2" MPT | 1 |
| 8 | 105-FC200 | 2" Manifold Clamp | 4 |
| 9 | 106-200D | 2" Female Coupler x 2" FPT | 1 |
| 10 | 106-200D90 | 2" Female Coupler x 2" FPT - 90 Degree | 1 |
| 11 | 280-150-ENF | 1-1/2" Enforcer Fertilizer Solution Hose | 15ft |
| 12 | 350-TC181 | Pressure Seal HD Clamp, Size 238 | 2 |

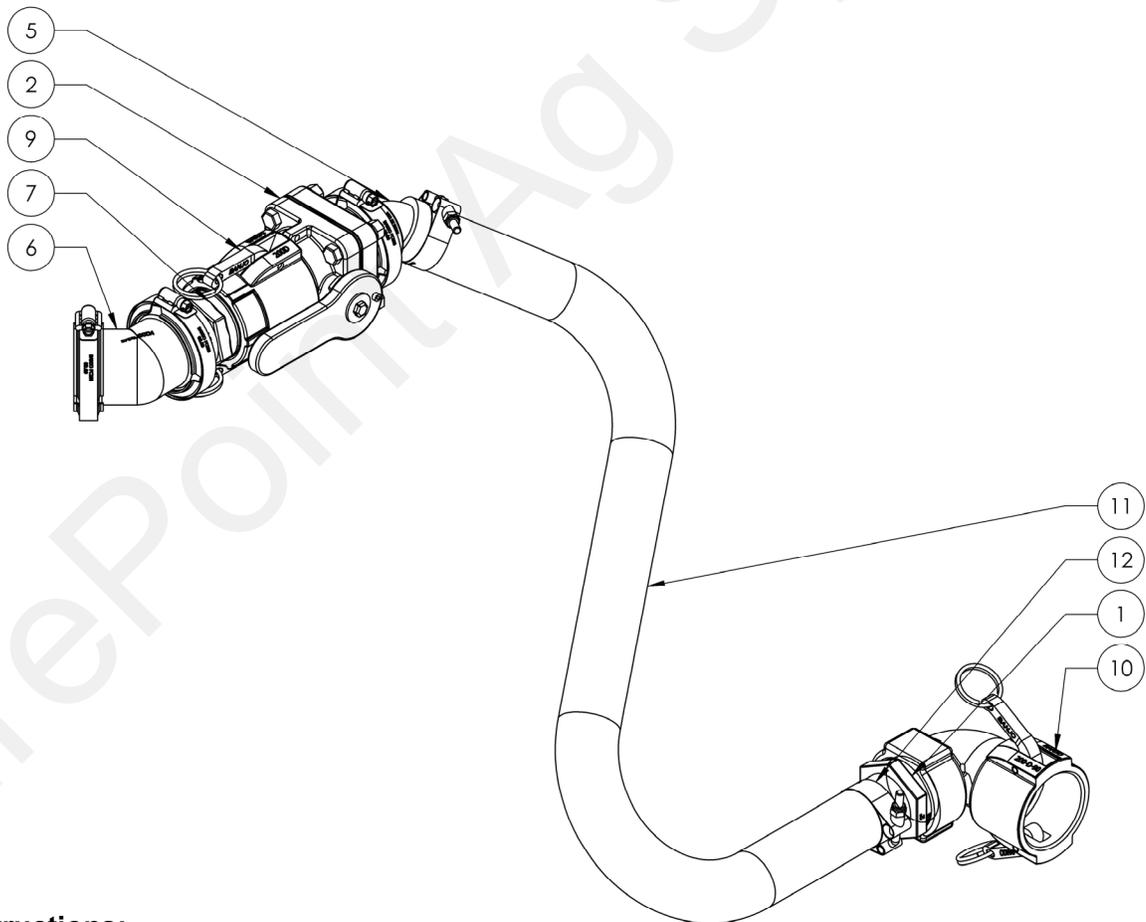


Installation Instructions:

1. Assemble kit as shown. Ensure O-rings and gaskets are in place prior to connecting fittings.
2. Connect 2" manifold fitting to QuickDraw Product valve. Install gasket between the valve and coupling and tighten with manifold clamp.
3. Connect cam-lever coupling to chemical/fertilizer shuttle or tank.



Parts List and Exploded View 606-01-400350 (2" Hose)

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|--------------|--|------|
| 1 | 101-200200 | 2" MPT x 2" HB | 1 |
| 2 | 102-200VSFCF | 200 Series Manifold x 2" Male Quick Coupler Standard Port Poly Valve | 1 |
| 3 | 105-150G-H | 1-1/2" EPDM Manifold Gasket for 200 Series Manifold fittings | 4 |
| 4 | 105-200BRB | 2" Manifold x 2" HB | 1 |
| 5 | 105-200BRB45 | 2" Manifold x 2" HB - 45 Degree | 1 |
| 6 | 105-200CPG45 | 2" Manifold Coupling - 45 Degree | 1 |
| 7 | 105-200MPT | 2" Manifold x 2" MPT | 1 |
| 8 | 105-FC200 | 2" Manifold Clamp | 4 |
| 9 | 106-200D | 2" Female Coupler x 2" FPT | 1 |
| 10 | 106-200D90 | 2" Female Coupler x 2" FPT - 90 Degree | 1 |
| 11 | 280-200-ENF | 2" Enforcer Fertilizer Solution Hose | 15ft |
| 12 | 350-TC231 | Pressure Seal HD Clamp, Size 288 (fits 2" Enforcer and Wire Braided) | 2 |

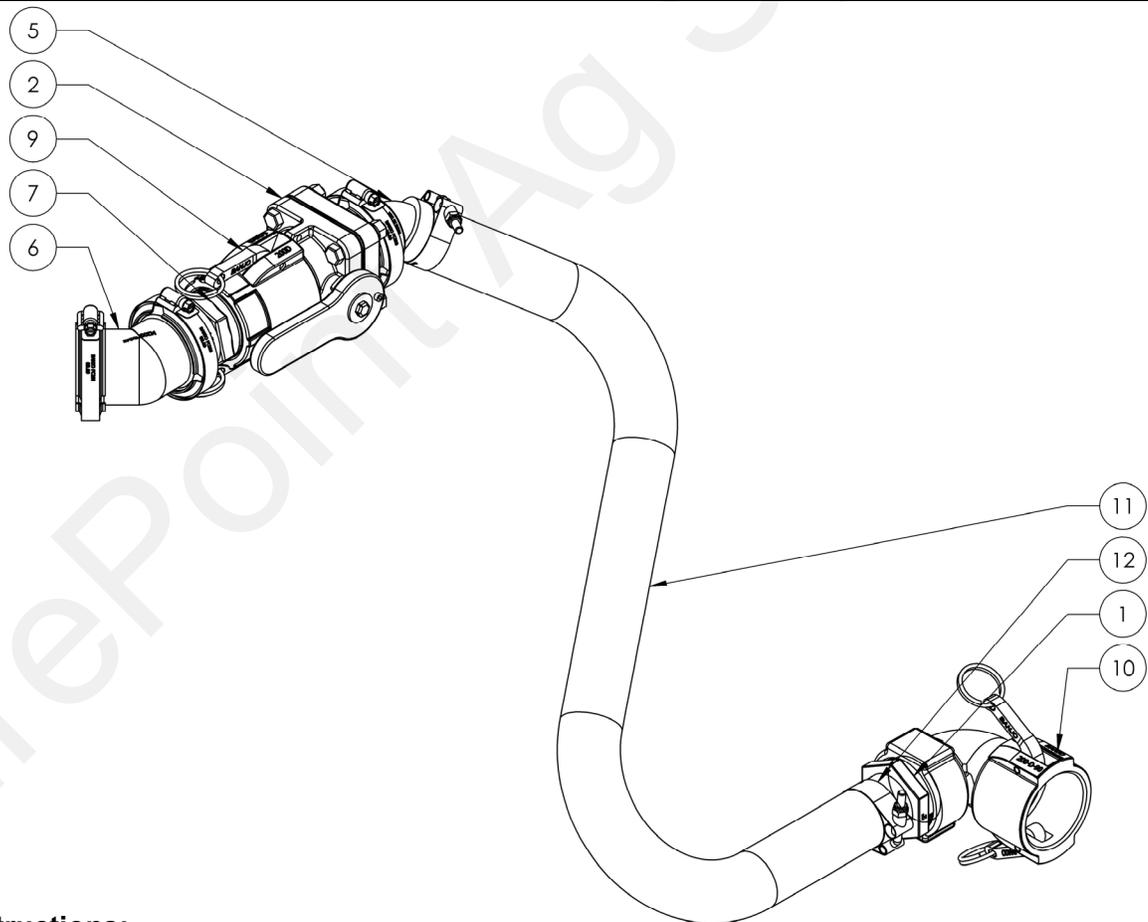

Installation Instructions:

1. Assemble kit as shown. Ensure O-rings and gaskets are in place prior to connecting fittings.
2. Connect 2" manifold fitting to QuickDraw Product valve. Install gasket between the valve and coupling and tighten with manifold clamp.
3. Connect cam-lever coupling to chemical/fertilizer shuttle or tank.



3000

SurePoint FPS Systems