




396-2890Y1

Plumbing Discharge Kit Installation Instructions

Kit Number: 520-00-103800

Kit Description:


3" Fill Line to 2" Tie In Kit for PumpRight

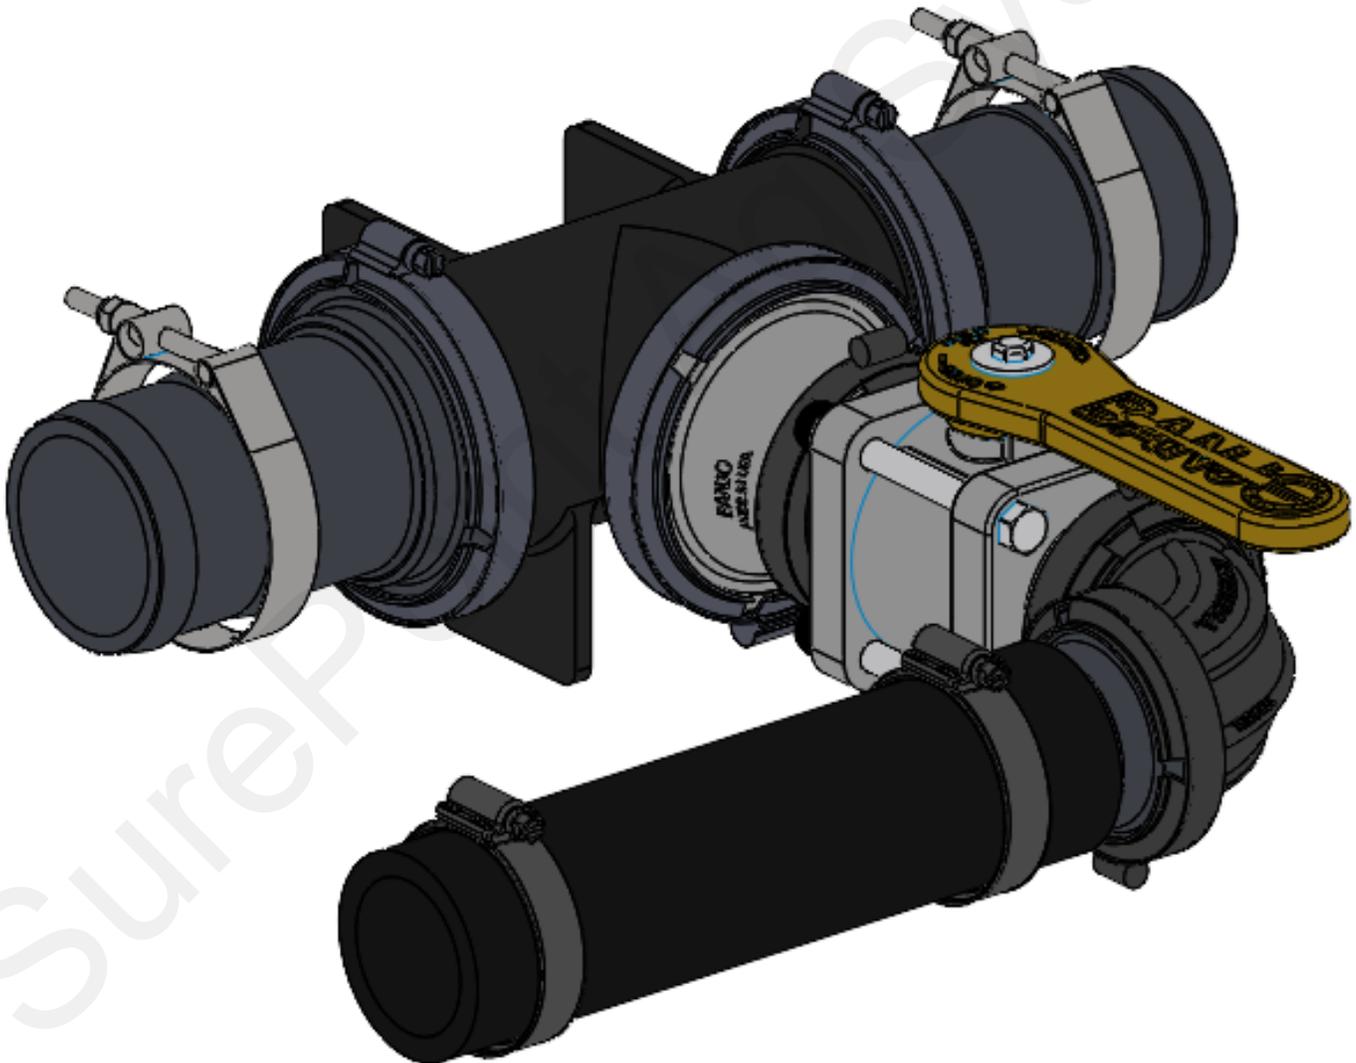



Parts List and Exploded View

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	100-075PLUG	3/4" Pipe Plug	1
2	100-125PLUG	1-1/4" Pipe Plug	1
3	102-200MVCF	2" Manifold Standard Port Poly Valve	1
4	105-150G	1 1/2" EPDM Manifold Gasket for 200 Series	3
5	105-200150BRB	2" Manifold x 1-1/2" HB	1
6	105-200BRB	2" Manifold x 2" HB	1
7	105-200MPT	2" Manifold x 2" MPT	1
8	105-200SWP90	2" Manifold Sweep - 90 Degree	1
9	105-300200CPG	3" Manifold x 2" Manifold - Reducer Coupling	1
10	105-300BRB	3" Flange x 3" HB	2
11	105-300G	3" EPDM Manifold Gasket	3
12	105-300TEE	3" Flanged Tee	1
13	105-FC200	2" Manifold Clamp	3
14	105-FC300	3" Manifold Clamp	3
15	280-200-ENF	2" Enforcer Fertilizer Solution Hose	1
16	350-PS288	Pressure Seal HD Clamp, Size 288 - 2.125" -	2
17	350-TC343	T-Bolt Hose Clamp - 3.43 - 3.75" Diameter	2

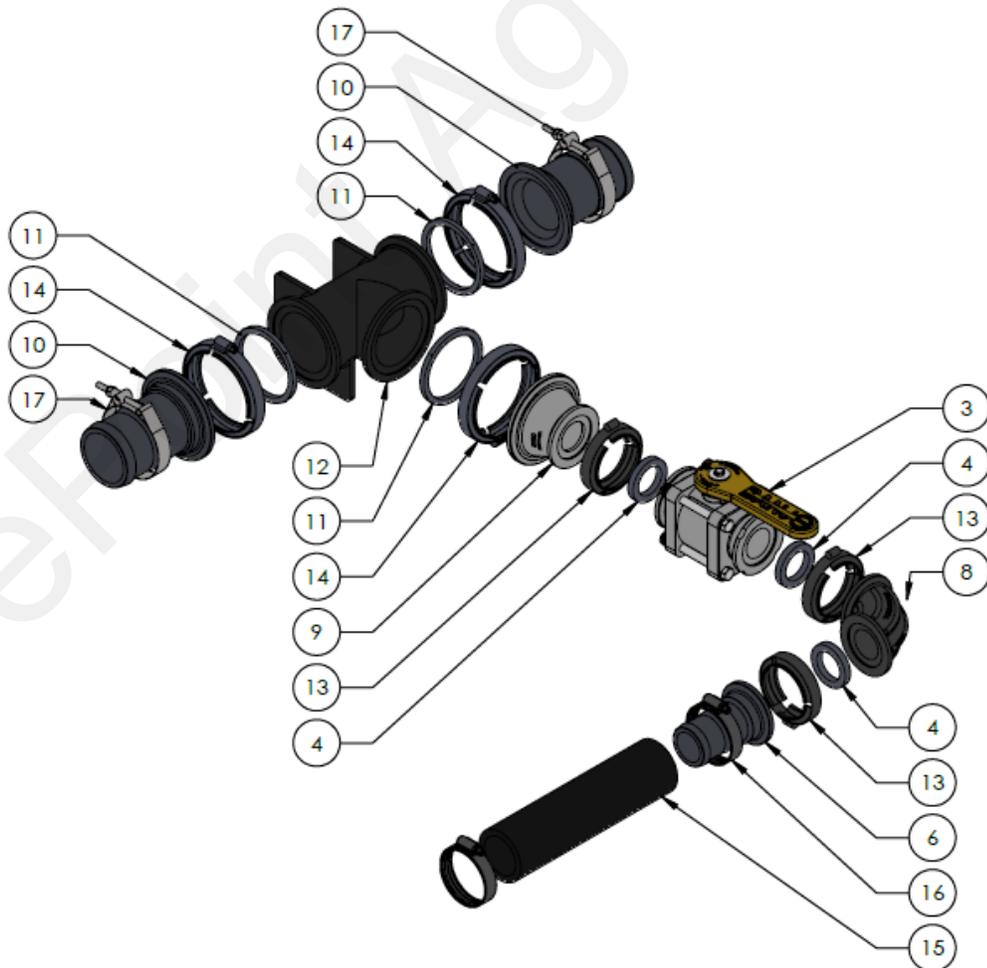




Step by Step Instructions

1. Assemble Discharge Kit as shown on previous page. (Item 5, 90° coupling is optional depending on implement.)
2. Cut 3" fill line and insert the two hose barbs of the discharge kit into fill line. Tighten with hose clamps provided.
3. Included 3/4" and 1-1/4" plugs can be used as necessary to plug unused fill/discharge bung on tank.
4. Route provided 2" hose to PumpRight System. Tighten with hose clamps provided.

NOTE: Splice into the fill line where it will be convenient to close the valve while filling the tank.

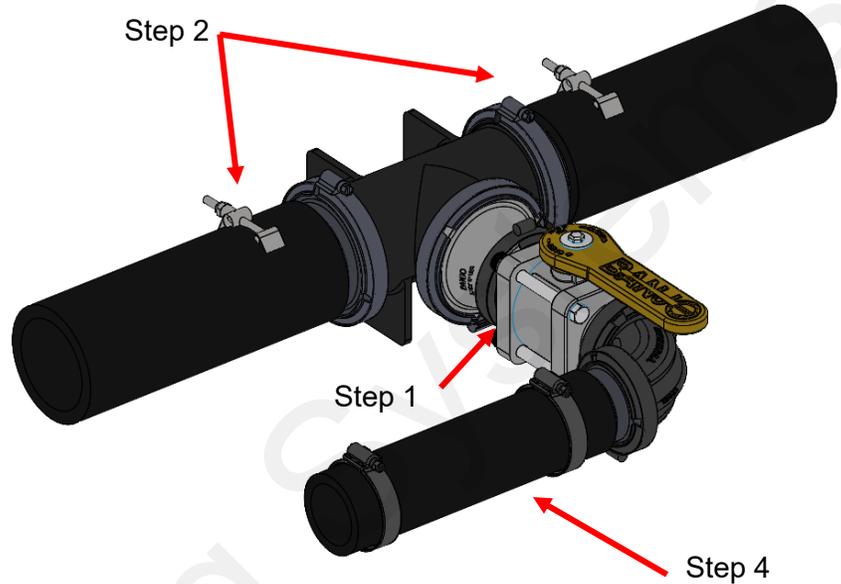

SurePoint Ag Systems