




396-5181Y1

QuickDraw 3" Flange Connection Kit for 3" Pump Installation Instructions

Kit Number: 606-03-100100

Kit Description: QuickDraw 3" Flange connection kit for 3" Pump

Note: Pump shown for reference only.

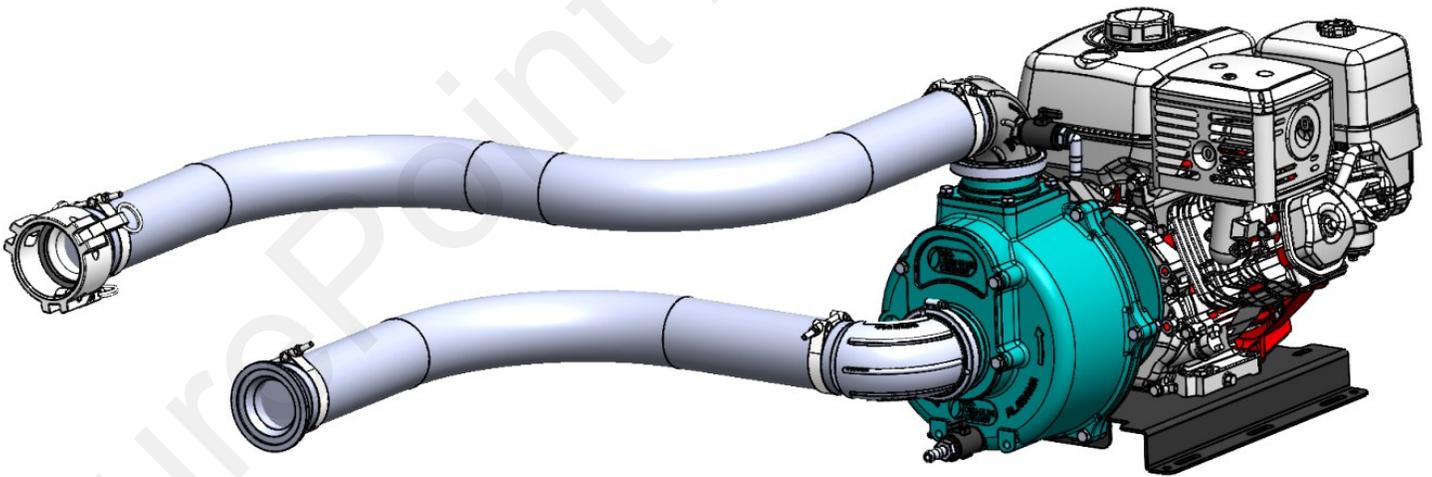




Parts List and Exploded View

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	100-050PLUG	1/2" Pipe Plug	1
2	101-050050-H	1/2" MPT x 1/2" HB	1
3	101-050050-90	1/2" MPT x 1/2" HB - 90 Degree	1
4	102-050050LVMTV	1/2" MPT x 1/2" FPT Micro Valve	1
5	105-300BRB	3" Manifold x 3" HB	3
6	105-300BRBWP90	3" Manifold x 3" HB - 90 Degree Sweep	1
7	105-300G-H	3" EPDM Manifold Gasket	3
8	105-300MPT	3" Manifold x 3" MPT	2
9	105-300SWP90	3" Manifold Sweep - 90 Degree	1
10	105-FC300	3" Manifold Clamp	3
11	106-303C	3" Female Coupler w/ 3 Arms x 3" Hose Shank	1
12	350-TC343	Pressure Seal HD Clamp, Size 400 - 3.12 - 3.75" Diameter (fits 3" Enforcer)	4

Note: Not all parts will be used.

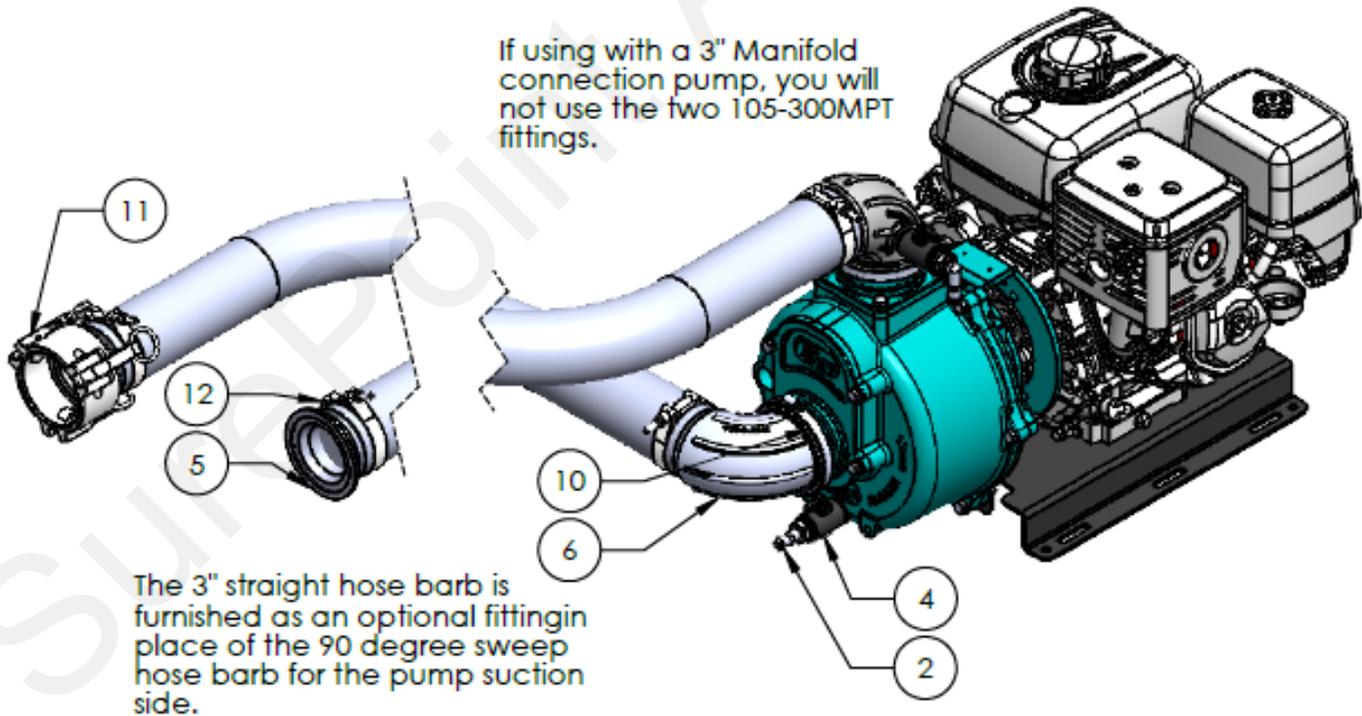



Step by Step Instructions

1. Assemble plumbing fittings on inlet side as shown, using manifold clamps and gaskets.
2. Remove the drain on the pump and install a 102-050050LVMTV drain valve for ease with winterization and priming.

Note: It is recommended by the manufacturer to leave the pump full of RV antifreeze during the winter to eliminate oxidation and corrosion. Always follow the manufacturers manual and recommendations for winterization.

