




# 396-2889Y1

## Plumbing Discharge Kit Installation Instructions

**Kit Number: 520-00-103700**

**Kit Description:**

*2" Fill Line to 2" Tie In Kit for D160 and D250 PumpRight*

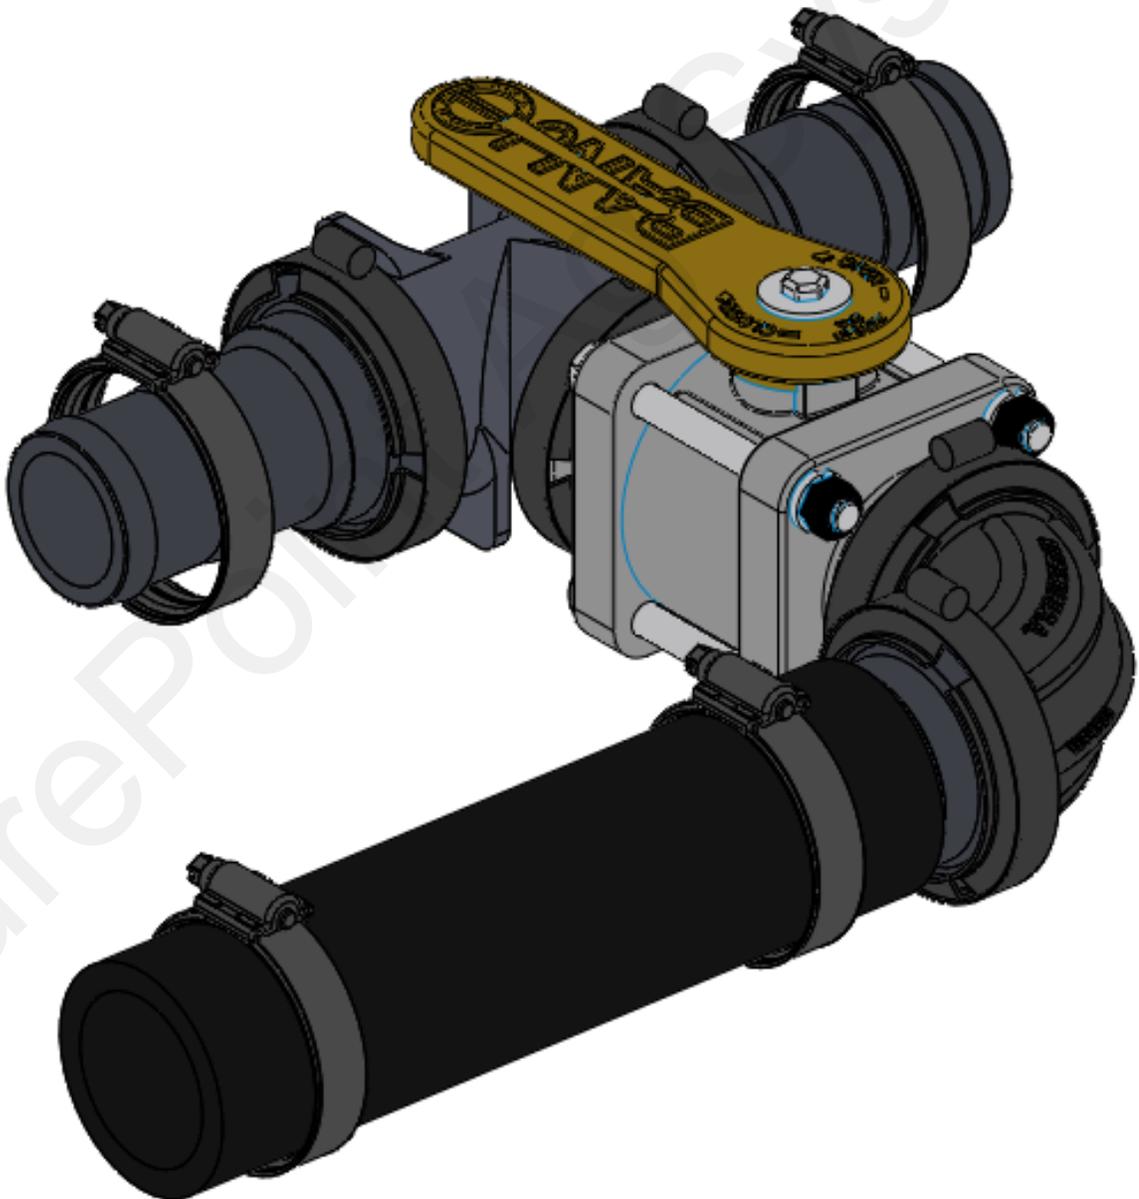







# Step by Step Instructions

1. Assemble Discharge Kit as shown on previous page. (Item 7, 90° sweep is optional depending on implement.)
2. Cut 2" fill line and insert the two hose barbs of the discharge kit into fill line. Tighten with hose clamps provided.
3. Included 3/4" and 1-1/4" plugs can be used as necessary to plug unused fill/discharge bung on tank.
4. Route provided 2" hose to D160 or D250 PumpRight System. Tighten with hose clamps provided.

NOTE: Splice into the fill line where it will be convenient to close the valve while filling the tank.

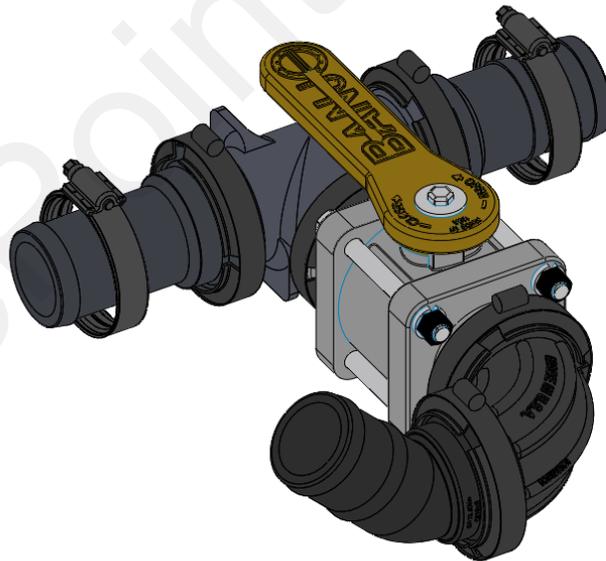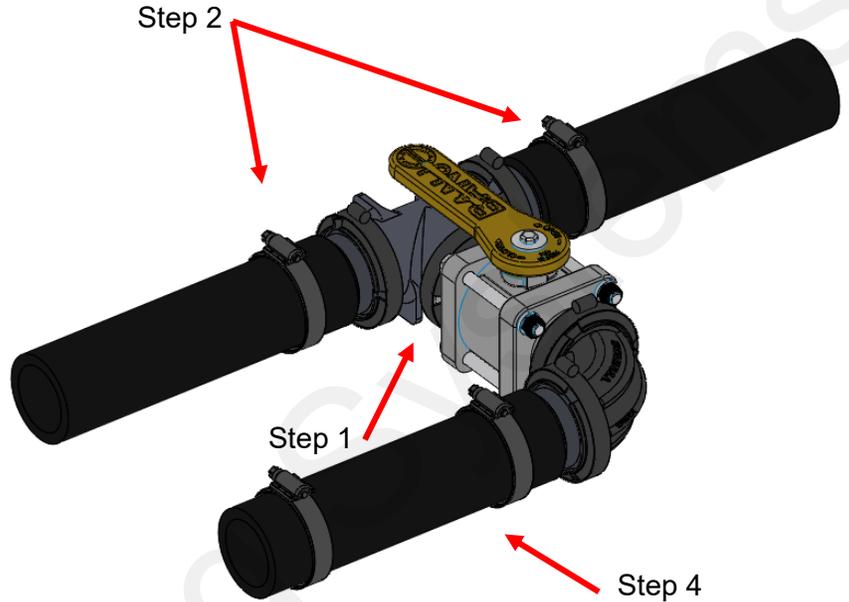

Shown with 200BRB45.