



396-2895Y1

John Deere 2410C

15' Main Frame/40'-0" or 42'-3"

12" Row Spacing


Torpedo 100, 200 and 300

Mounting Instructions



JOHN DEERE

Kit Number: 516-01-450150


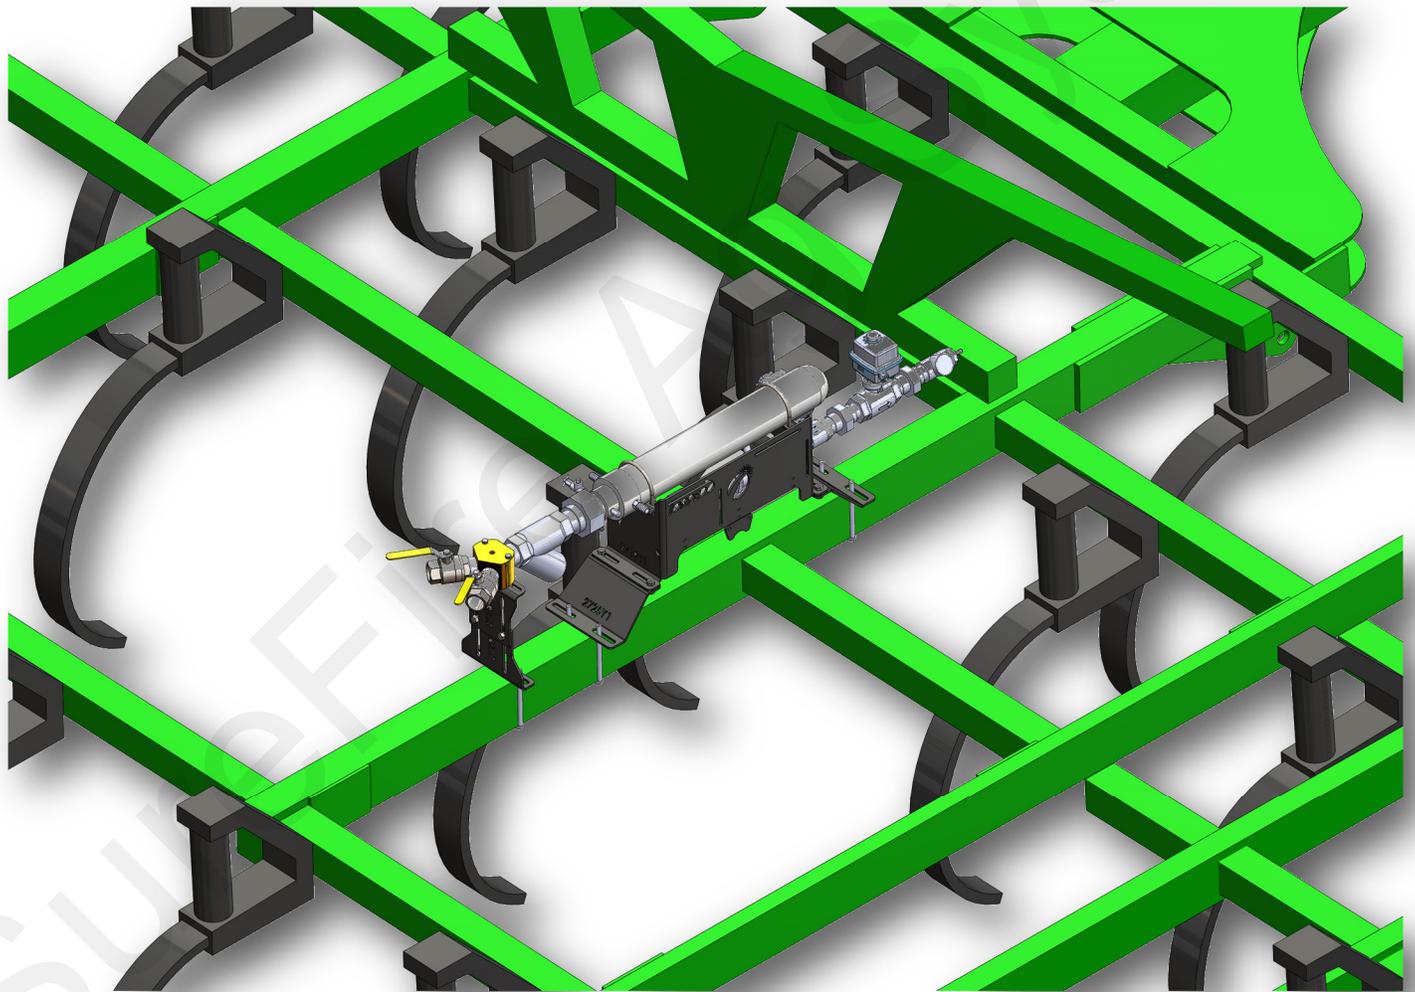





Parts List and Exploded View

Kit Number: 516-01-450150

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	462-2725Y1	Z Mounting Bracket for 2719Y1	2
2	300-080100-5	1/2" x 1" HCS G5	4
3	323-08	1/2" Flange Nut	4
4	380-1015	1/2" x 4" x 7-1/2" Square Bend U-Bolt	2

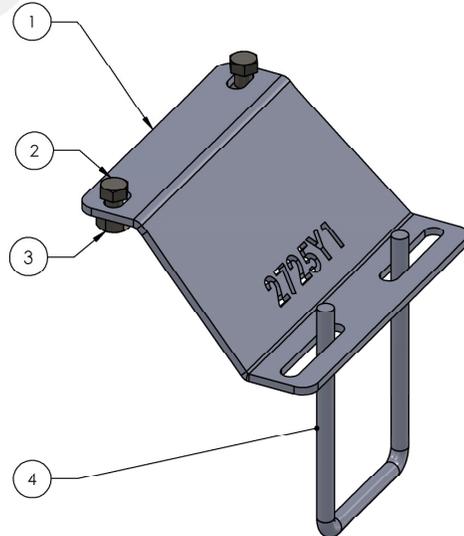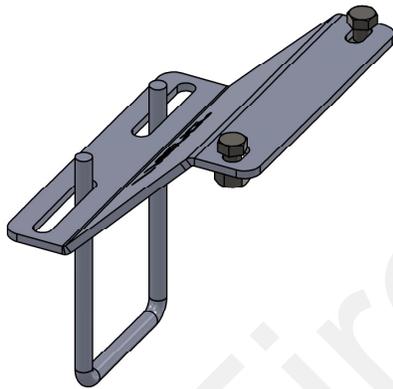

Step by Step Instructions

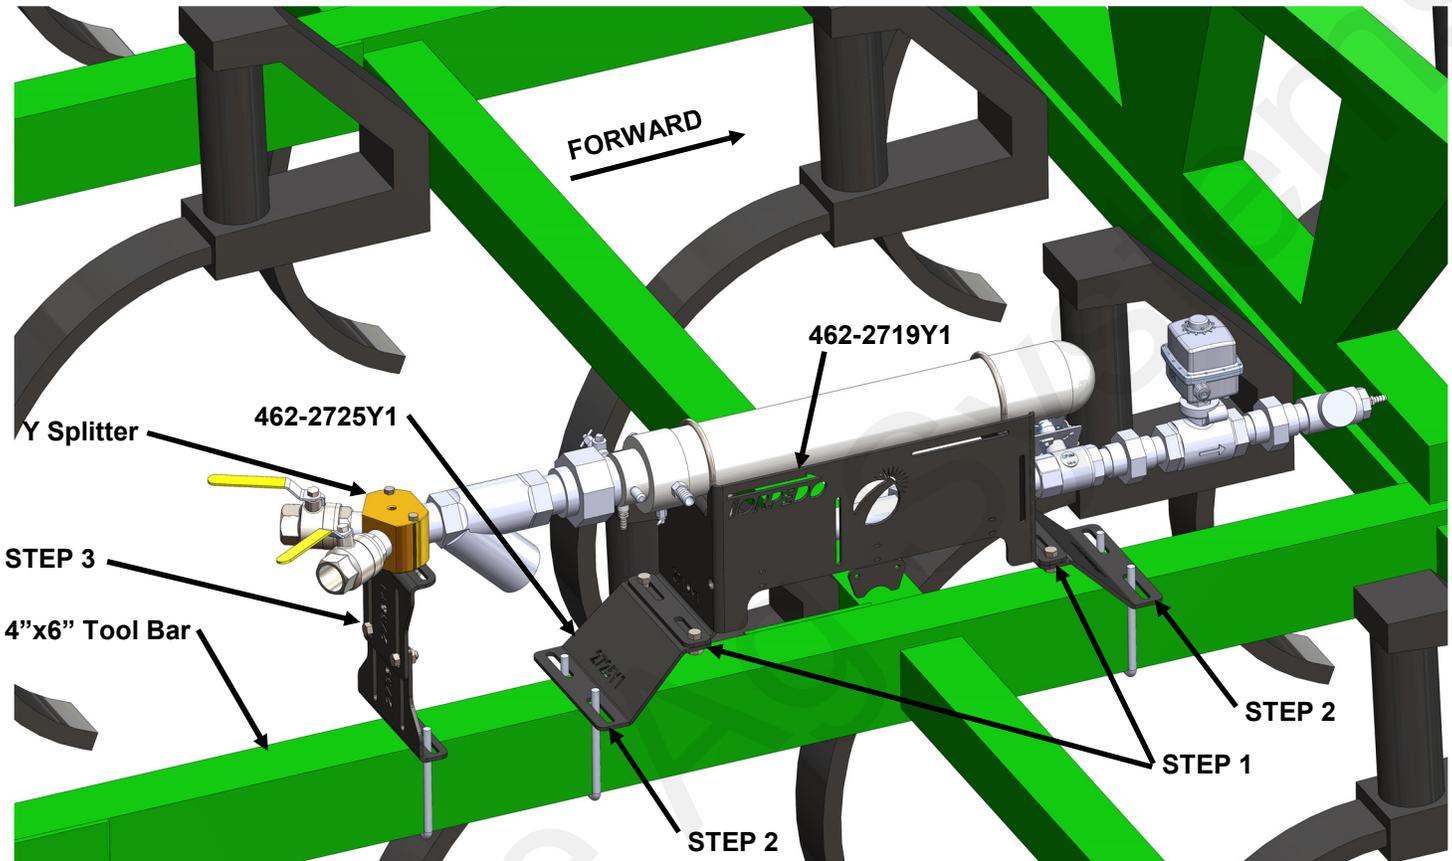

1. Bolt both "Z" Brackets (462-2725Y1) to the Torpedo Bracket (462-2719Y1) before mounting it to the 4"x6" Tool Bar using the provided 1/2" Bolts and Nuts.
2. Mount the Torpedo with "Z" Brackets already attached to the 4"x6" Tool Bar as shown with the provided 1/2" Square Bend U-bolts. Do not tighten the U-bolts until the Torpedo Assembly is in its desired location.
3. For the Torpedo 300 (pictured above), Adjustable Bracket Kit 202-2740Y1 will be included and used to support the Y Splitter as shown using a 1/2"x4"x7 1/2" Square Bend U-bolt (380-1015).