




396-001650

PumpRight Inlet Plumbing Kits (PR17/PR30/PR40/D250)

Includes fittings from hitch to pump & hose


Kit Number: 520-00-1000

Description: PR17 / PR30 Inlet Plumbing Kit with 15' of 1-1/2" Hose and Fittings from Hitch to Pump

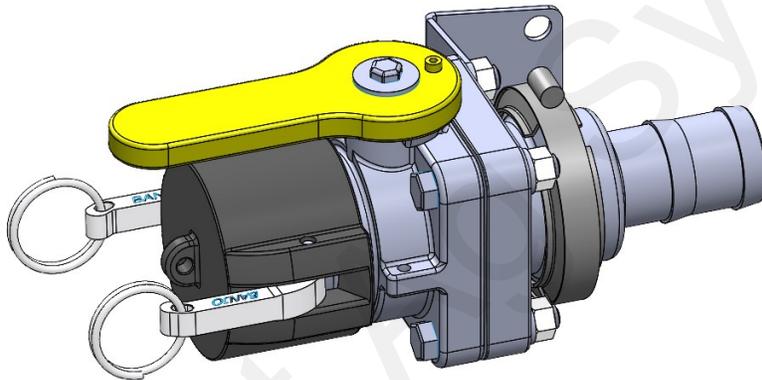

Kit Number: 520-00-100050

Description: PR40 / D250 Inlet Plumbing Kit with 15' of 2" Hose and Fittings from Hitch to Pump

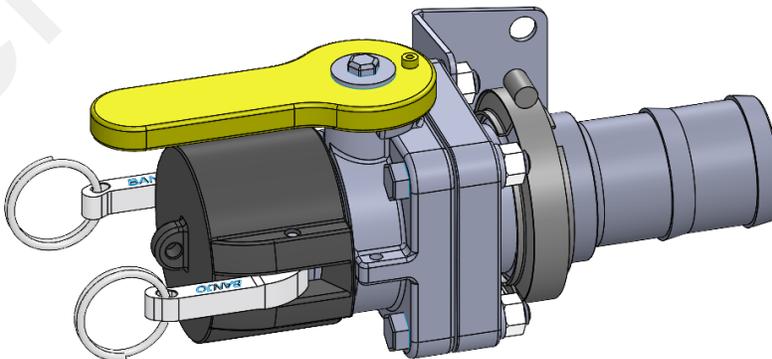




Parts List


Kit: 520-00-1000

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	280-150-ENF	1-1/2" Enforcer Fertilizer Solution Hose	15
2	521-08-1000A	PR17/PR30 Inlet Plumbing Kit Assembly Bag Only	1

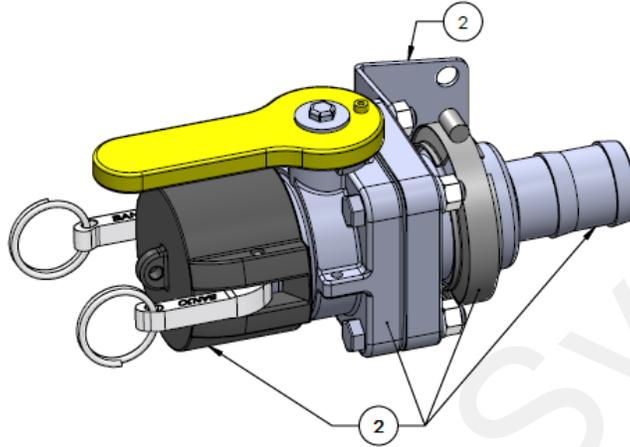

Kit: 520-00-100050


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	102-200VBR-90	2" Mounting Bracket - 90 Degree	2
2	102-200VBR	2" Mounting Bracket - Straight	1
3	102-200VSFCF	200 Series Manifold x 2" Male Quick Coupler Std Port Valve	1
4	105-150G-H	1-1/2" EPDM Gasket	1
5	105-200BRB	2" Manifold x 2" HB	1
6	105-FC200	2" Manifold Clamp	1
7	106-200CAP	2" Cap	1
8	280-200-ENF	2" Enforcer Fertilizer Solution Hose	20
9	350-PS288	Pressure Seal HD Clamp, Size 288 - 2.125" - 2.625" (2" ENF or WBS hose)	2
10	384-1004	Hardware Kit - Qty 6 Size 12 x 1-1/4" Self Drilling Screws with Qty 4 5/16" Fender Washers	1
11	384-1095	Hardware Kit - 3/8" Hex Cap Bolts and 3/8" Flange Nuts	1

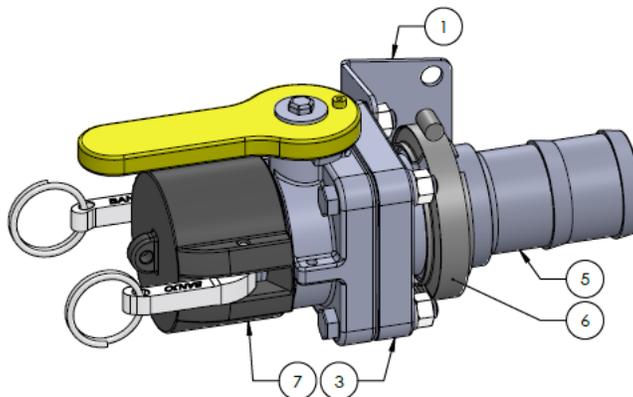



Step by Step Instructions

1. Remove nuts on Poly Valve as required to fasten valve to mounting bracket of choice. Re-install nuts and wrench tighten.
2. Pre-assemble inlet plumbing components as shown. (Hose barb size will vary between kits)
3. Mount plumbing assembly and mounting bracket to hitch using the hardware provided.
4. Push 1-1/2" or 2" hose onto hose barb fitting and route to the pump. Secure using provided clamps.

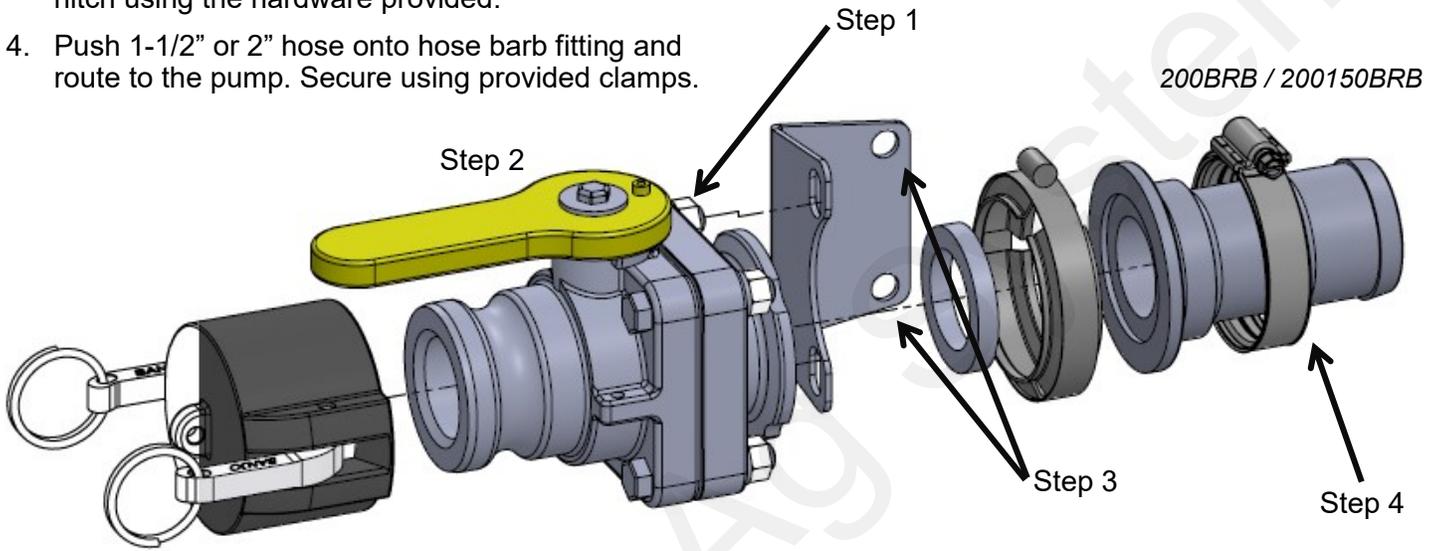



Note: Kits are designed to be able to unhook the fertilizer carts from the planter.



Suggested Items Mounting Brackets

1. Remove nuts on Poly Valve as required to fasten valve to 400-3187Y1 bracket. Re-install nuts and wrench tighten.
2. Using two (2) 1/2" x 1-1/2" hex head bolts, flat washers, and nuts, attach inlet plumbing assembly and bracket to the rear hitch as show.
3. Route hose to pump and secure using provided hose clamps.

Part Number: 400-3187Y1

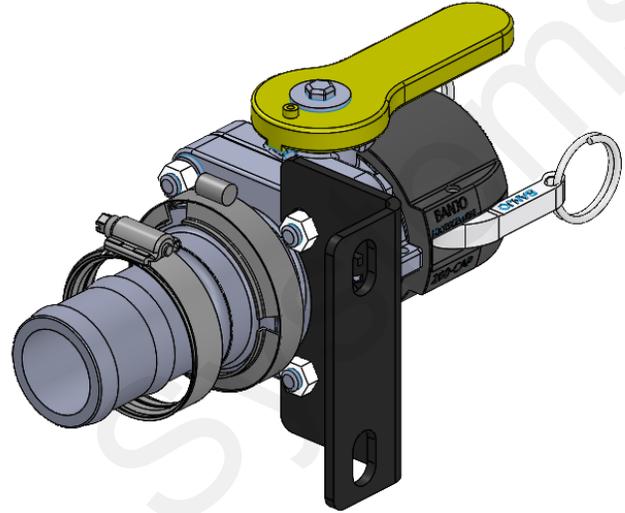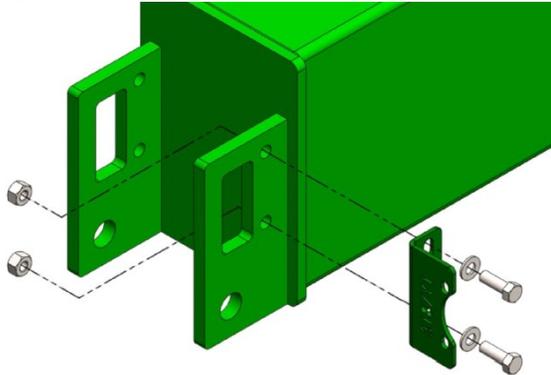

Mounting on lower step of rear platform

1. Attach 400-2605Y1 to 400-3177Y1 using four (4) 3/8" x 1" carriage bolts and flange nuts.
2. Remove nuts on Poly Valve as required to fasten valve to 400-2605Y1. Re-install nuts and wrench tighten.
3. Pre-assemble fill kit components as shown.
4. Mount inlet plumbing assembly and bracket to the rear step of John Deere 1770NT or 1775NT using existing hardware.
5. Push enforcer hose onto hose barb fitting. Route hose to pump and secure using the provided hose clamps.

Part Number: 400-2605 / 400-3177Y1

