




# 396-001660

## Two Tank Fill Kit for Diaphragm Pump Installation Instructions

**Kit Number: 520-00-2010**

**Kit Description:** *Plumbing Kit - 2 Tank fill Kit for diaphragm pump*

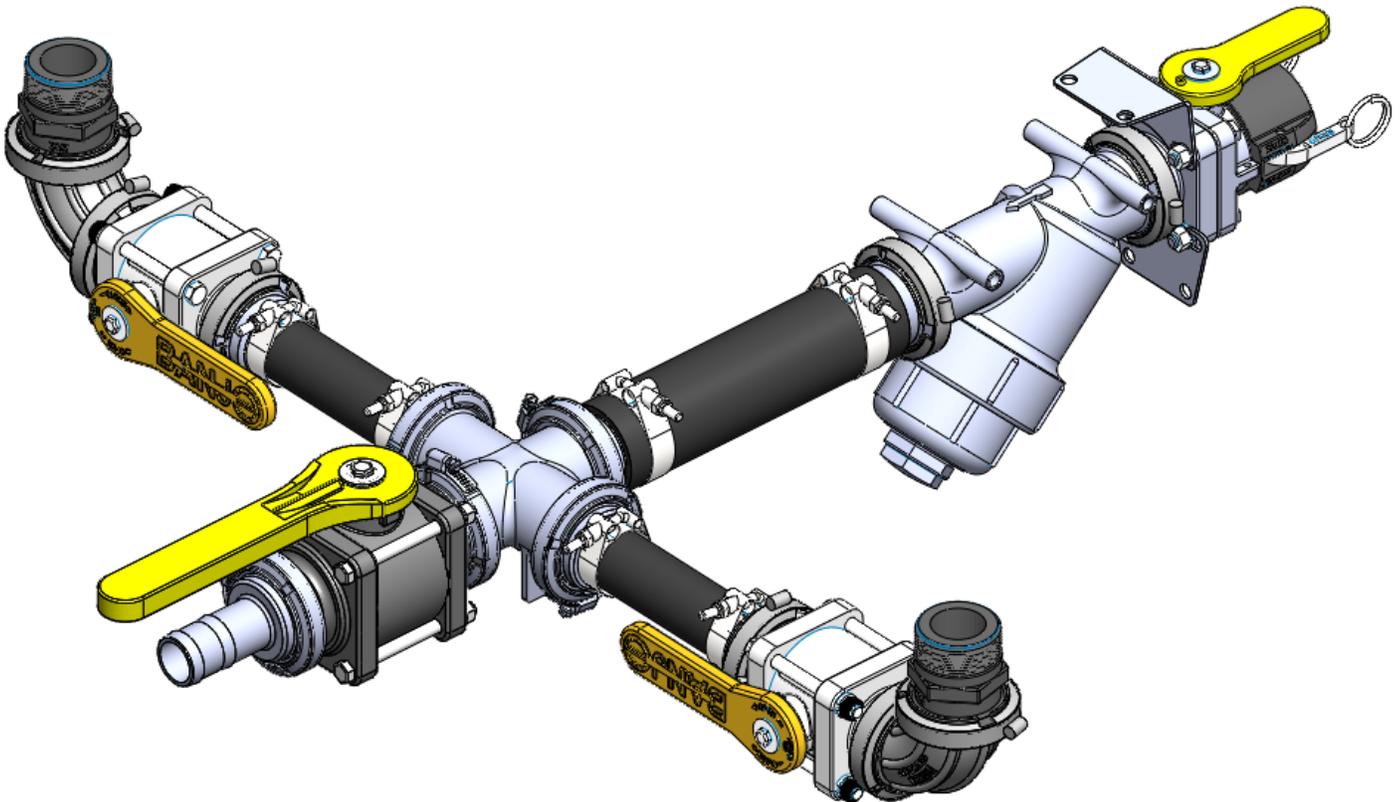

Shown with optional strainer.




# Parts List and Exploded View

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	102-200MVCF	2" Manifold Standard Port Poly Valve	2
2	102-200VBR-90	2" Mounting Bracket - 90 Degree	2
3	102-200VBR	2" Mounting Bracket - Straight	1
4	102-200VSFCF	200 Series Manifold x 2" Male Quick Coupler Std Port Valve	1
5	102-220MVCF	2" Full Port Flange Ball Valve	1
6	105-150G-H	1 1/2" EPDM Gasket	8
7	105-200125MPT	2" Manifold x 1-1/4" MPT	2
8	105-200150BRB	2" Manifold x 1 1/2" HB	3
9	105-200150MPT	2" Manifold x 1-1/2" Male	2
10	105-200BRB	2" Manifold x 2" HB	1
11	105-200G-H	2" EPDM Manifold Gasket for 220 Series Manifold Fittings	5
12	105-200MPT	2" Manifold x 2" MPT	2
13	105-200SWP90	2" Manifold Sweep - 90 Degree	2
14	105-220150BRB	2" Full Port Manifold x 1 1/2" HB	3
15	105-220150BRB90	2" Full Port Manifold x 1 1/2" HB - 90 Degree	2
16	105-220BRB	2" Full Port Manifold x 2" HB	1
17	105-220CR	2" Full Port Manifold Cross	1
18	105-FC200	2" Manifold Clamp	8
19	105-FC220	2" Full Port Manifold Clamp	5
20	106-200CAP	2" Cap	1
21	280-150-ENF	1-1/2" Enforcer Fertilizer Solution Hose	20
22	280-200-ENF	2" Enforcer Fertilizer Hose	20
23	350-TC181	Pressure Seal HD Clamp, Size 238 (fits 1 1/4" - 1 1/2" Enforcer, Wire Braided or AG200)	4
24	350-TC231	Pressure Seal HD Clamp, Size 288 (fits 2" Enforcer and Wire Braided)	2

\*Fittings included for 1-1/4", 1-1/2" or 2" tank opening.


# Parts List and Exploded View

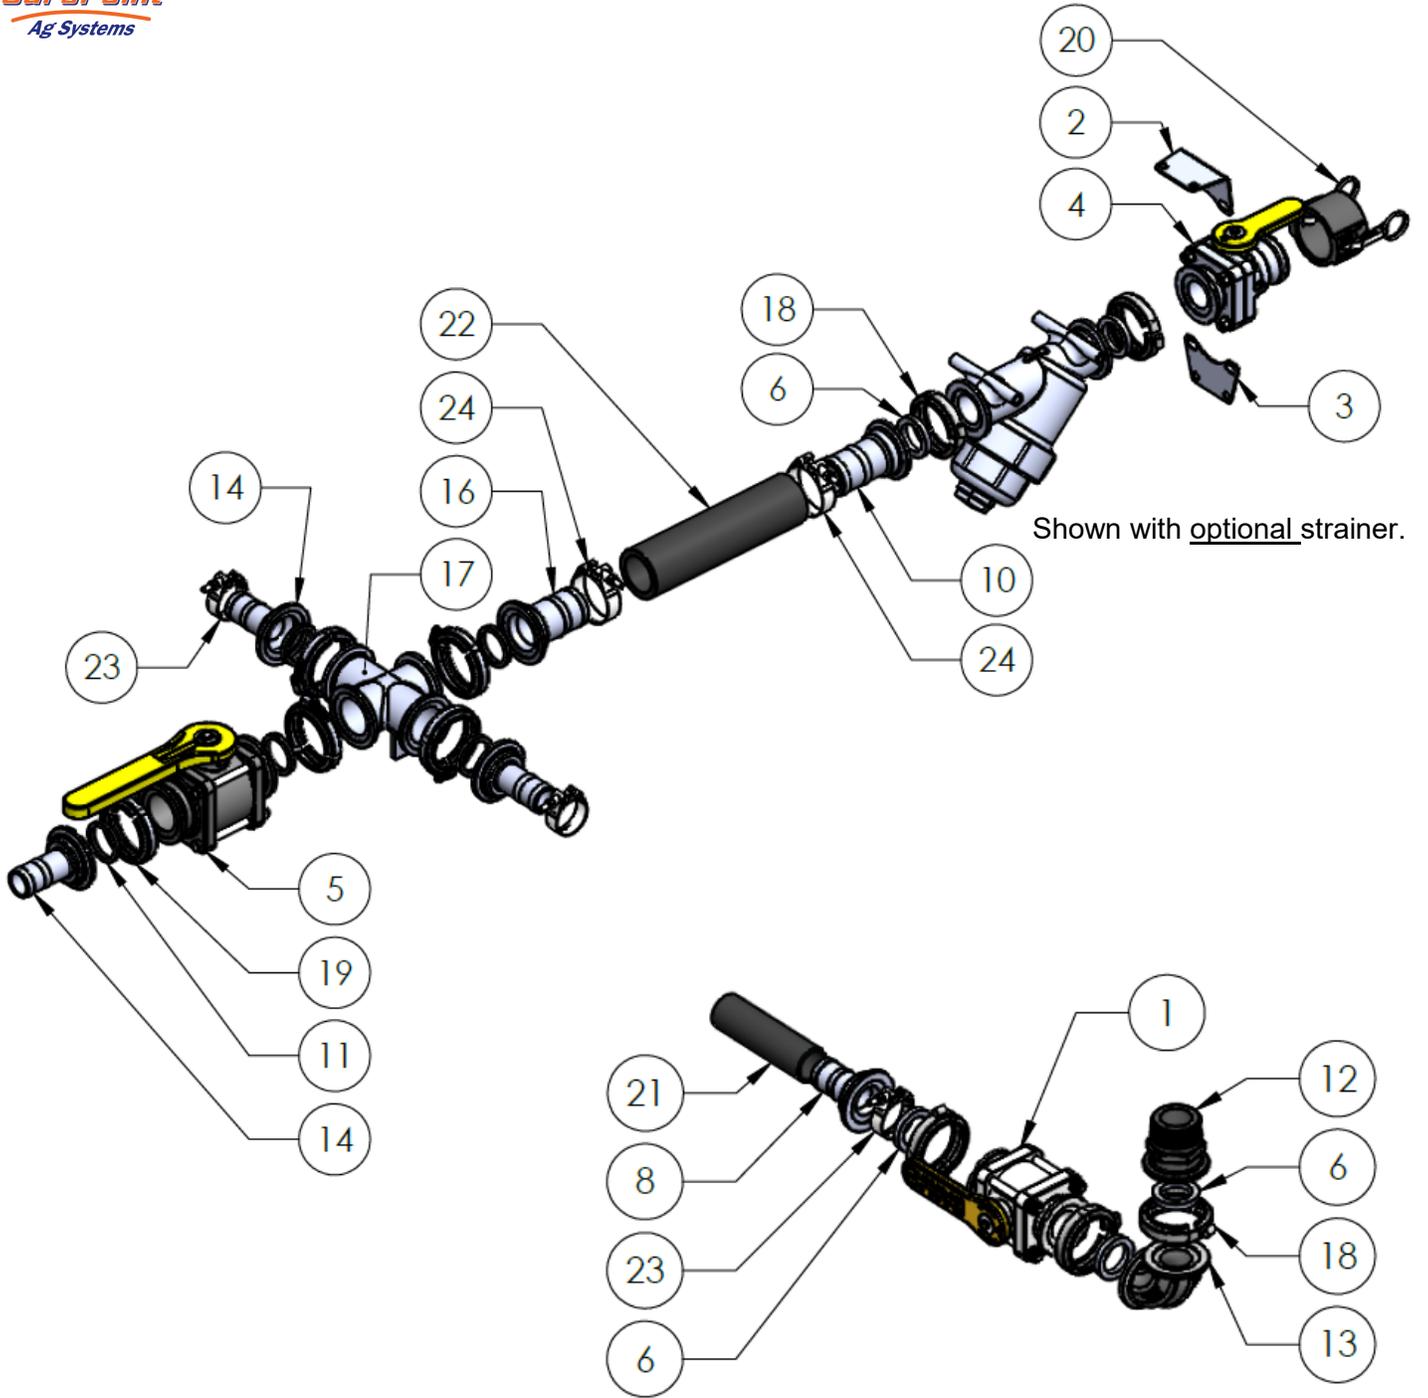




# Step by Step Instructions

1. Remove nuts on Poly Valve as required to fasten mounting brackets to valve and replace nuts, tighten. *(Often, only one bracket is used to mount the fill valve. Straight and 90° bracket are shown to illustrate both options.)*
2. Using hardware kits fasten poly valve mounting brackets to implement.
3. Continue to assemble fill kit assembly as shown.

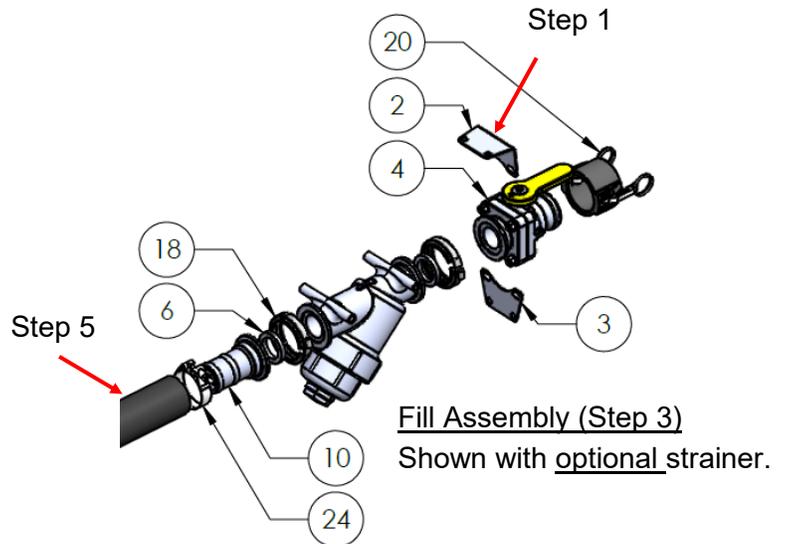

4. Assemble 2" Manifold Tee assembly as shown.
5. Route 2" hose from fill assembly hose barb to Manifold Tee hose barb and tighten with hose clamps

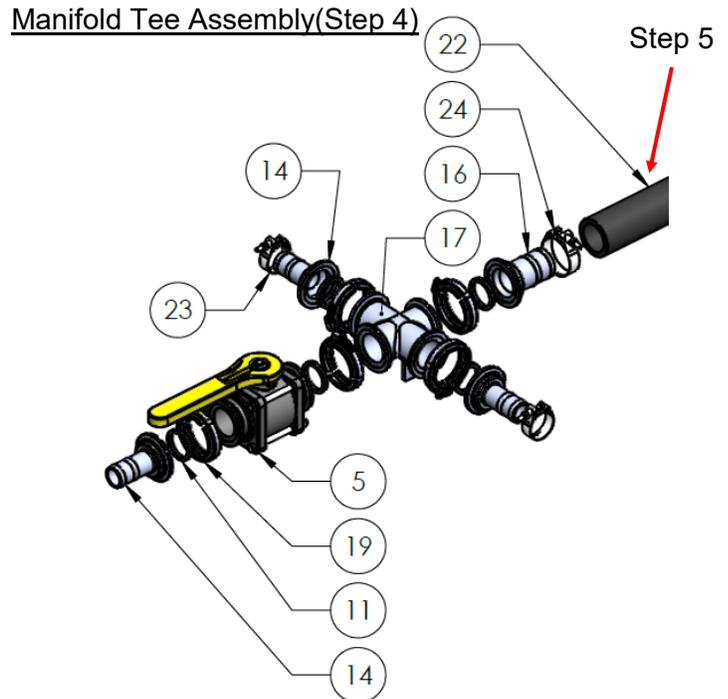

6. Thread 2", 1-1/2" or 1-1/4" Manifold x MPT fitting into tank opening.
7. Assemble tank valve manifold fittings as shown.
8. Route 1-1/2" hose from manifold tee assembly hose barb to tank opening hose barb and tighten using two hose clamps.

