




# 396-5494Y1

## SurePoint Ag Systems Split Flow Plumbing Installation Instructions

**Kit Number: 520-00-060150**

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	132-40436-05	RadialLock Cap with 3/8" QC	1
2	282-02-038	3/8" Poly Tubing - 6" Length	1
3	113-19-038025025	Y Divider - 3/8" QC x 1/4" QC x 1/4" QC	1
4	Metering Tube	Length and Color Selected for Your Application	2
5	113-15-038025	QC Reducer - 3/8" QC x 1/4" QC	2
6	113-01-038038	3/8" Stem x 3/8" Hose Barb	2
7	350-0605	SS Hose Clamp - #6	4

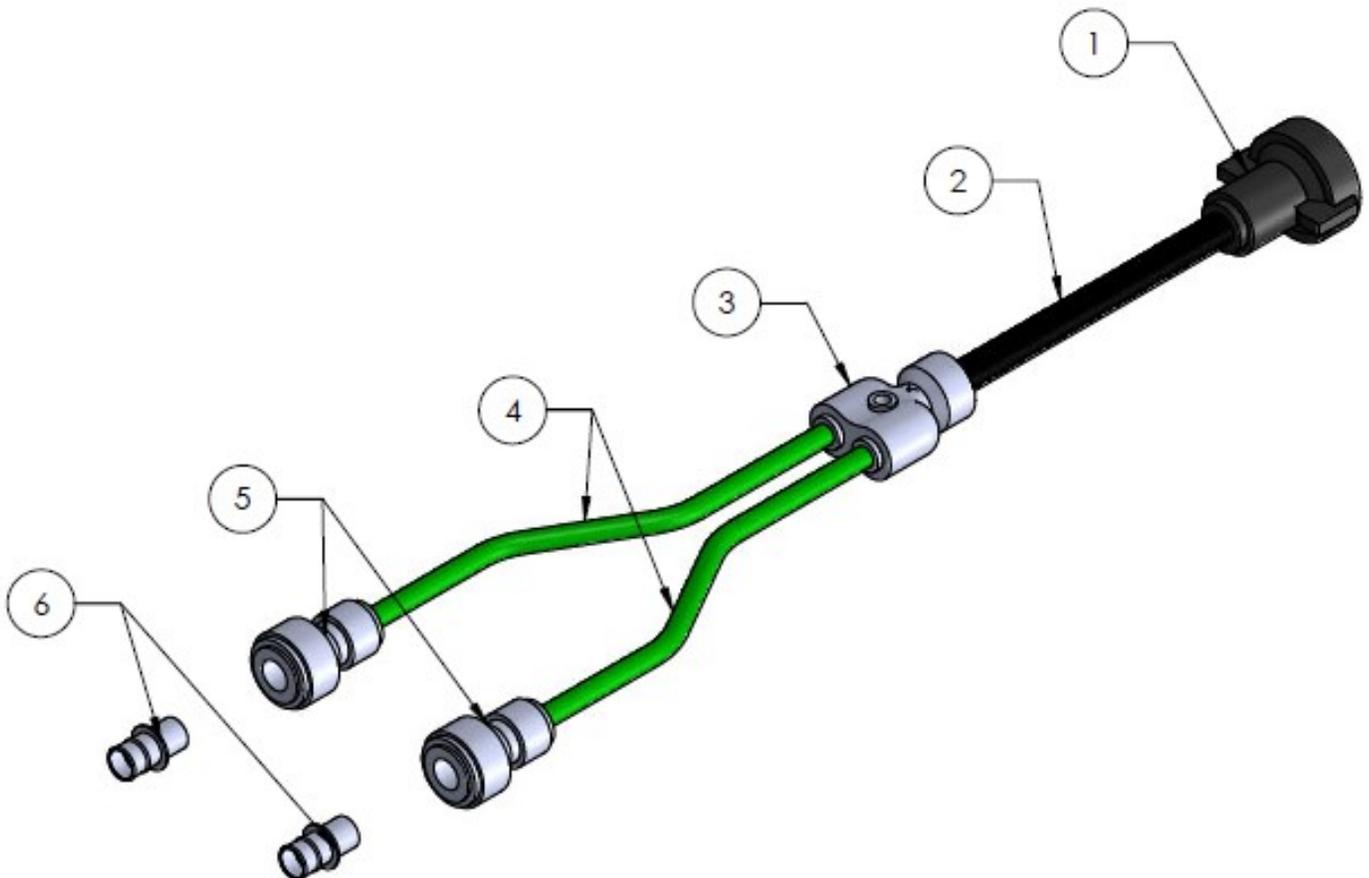



# Step By Step Instructions

1. Use the picture below for reference. If applicable, replace the RadialLock cap on the check valve with the provided RadialLock cap in the plumbing kit. For Gen 3 LiquiShift, the provided RadialLock cap will not be used. Insert the 3/8" x 6" poly tubing into the outlet of the RadialLock cap or zip valve. Place the 3/8" x 1/4" x 1/4" Y-Divider on the end of the poly tubing and route the provided metering tubes from the Y-Divider. The metering tube you receive will be precut from 24" to 48" based on your application. **DO NOT CUT METERING TUBE** or it will negatively affect the performance of your system.
2. Push-To-Connect the 3/8" x 1/4" reducer fittings directly to the stainless steel tubes, or use the provided 3/8" Stem to Hose Barbs to route 3/8" hose to the stainless steel tubes. Slide the hose over the placement tube and secure with provided hose clamps. Route hoses and tubes in a way that prevents them from coming in contact with debris in the field.

