



### Options For Connecting to Flow Meters

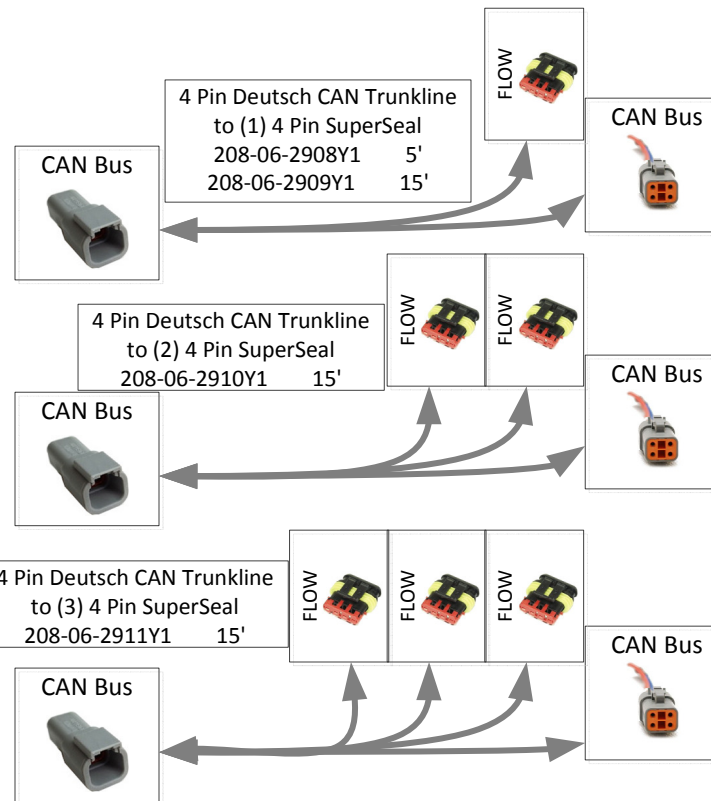


4Pin to 3Pin Deutsch CAN Bus  
Terminator 208-6-2912Y1

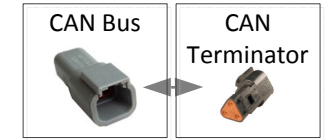

These CAN Bus lines can be daisy-chained together, but the end of the Bus needs to have the terminator on the end (208-06-2912Y1). There can NOT be any open ends of the Bus

### Example for a 24 Row 3 Section System

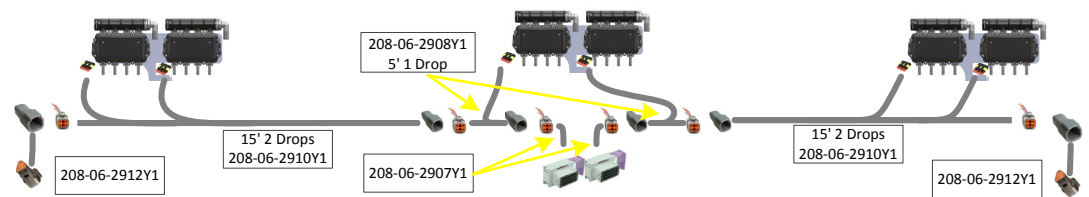

Project:	396-2918Y1	Drawn By:	Dirk Ricker
Filename:	MultiRow Flow Overview Schematic	Date:	3/6/2015
Copyright 2015 SureFire Ag Systems		Page of Pages	1 of 1

Drawn By:	Dirk Ricker
Date:	3/6/2015
Page of Pages	1 of 1