




396-3339Y1

Irrigation Injection Mounting Bracket Installation Instructions

Kit Number: 546-XX-XXXXXX

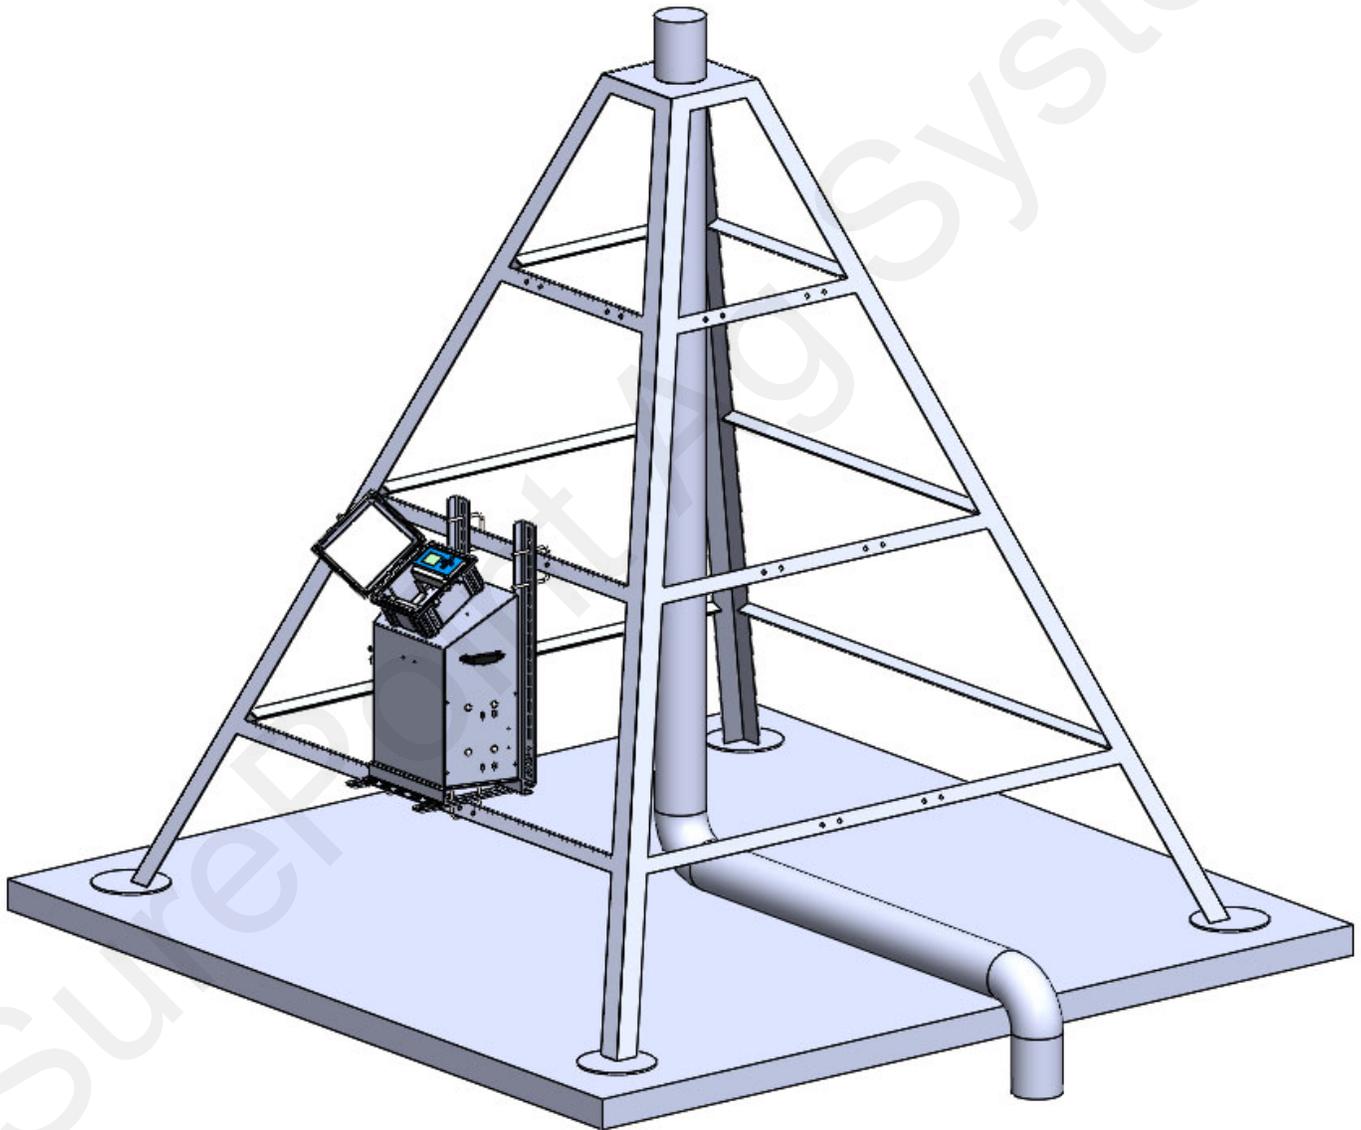




Step by Step Instructions

Center Pivot Mounting Instructions:

1. Using four (4) 3/8" square bend u-bolts, mount each mounting brackets to center pivot angle iron as shown.
2. Mount Marksman cabinet using four (4) 3/8" x 1" bolts, washers and flange nuts.

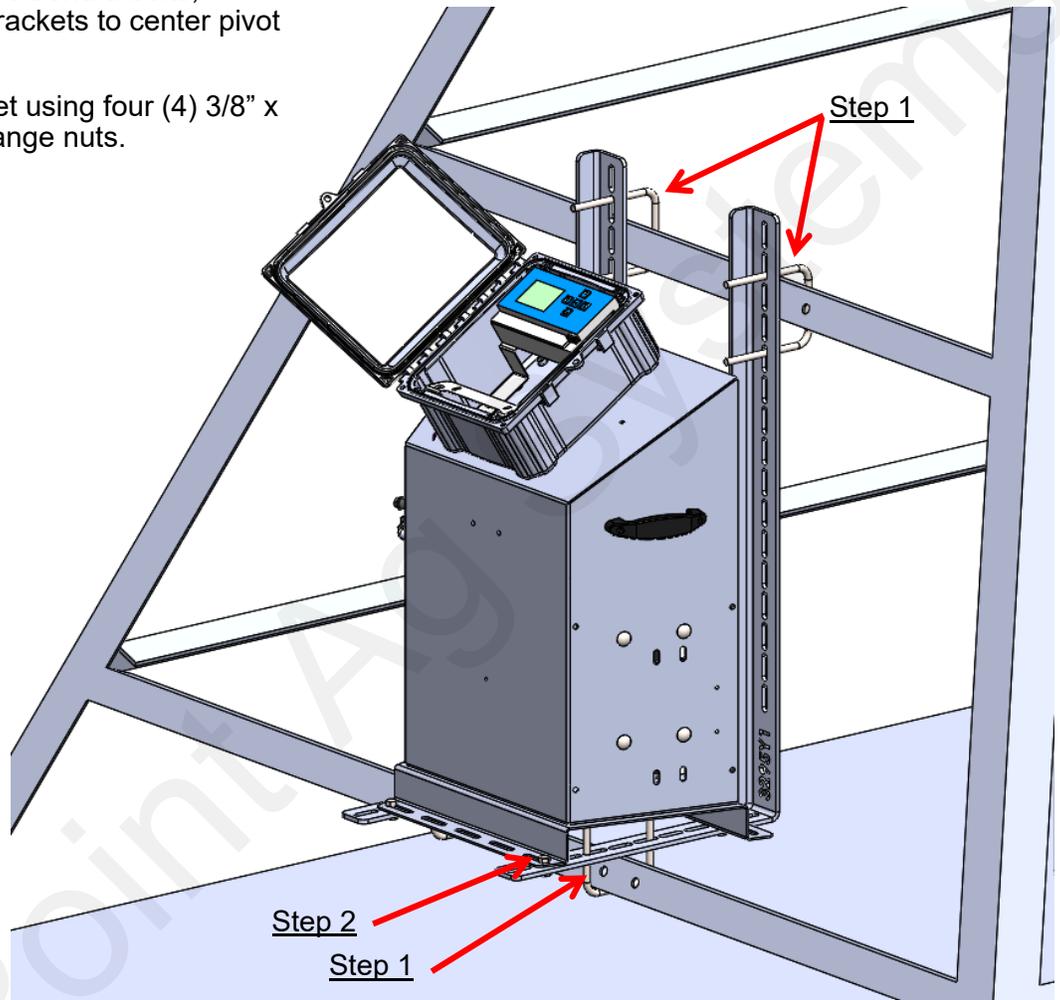




Step by Step Instructions

Other Mounting Options:

1. Using 3/8" x 1" bolts or 3/8" square bend u-bolts, mount each mounting bracket to T-Post or existing structure.
2. Using 3/8" x 1" bolts, attach support brace as shown.
3. Mount Marksman cabinet using four (4) 3/8" x 1" bolts, washers and flange nuts.

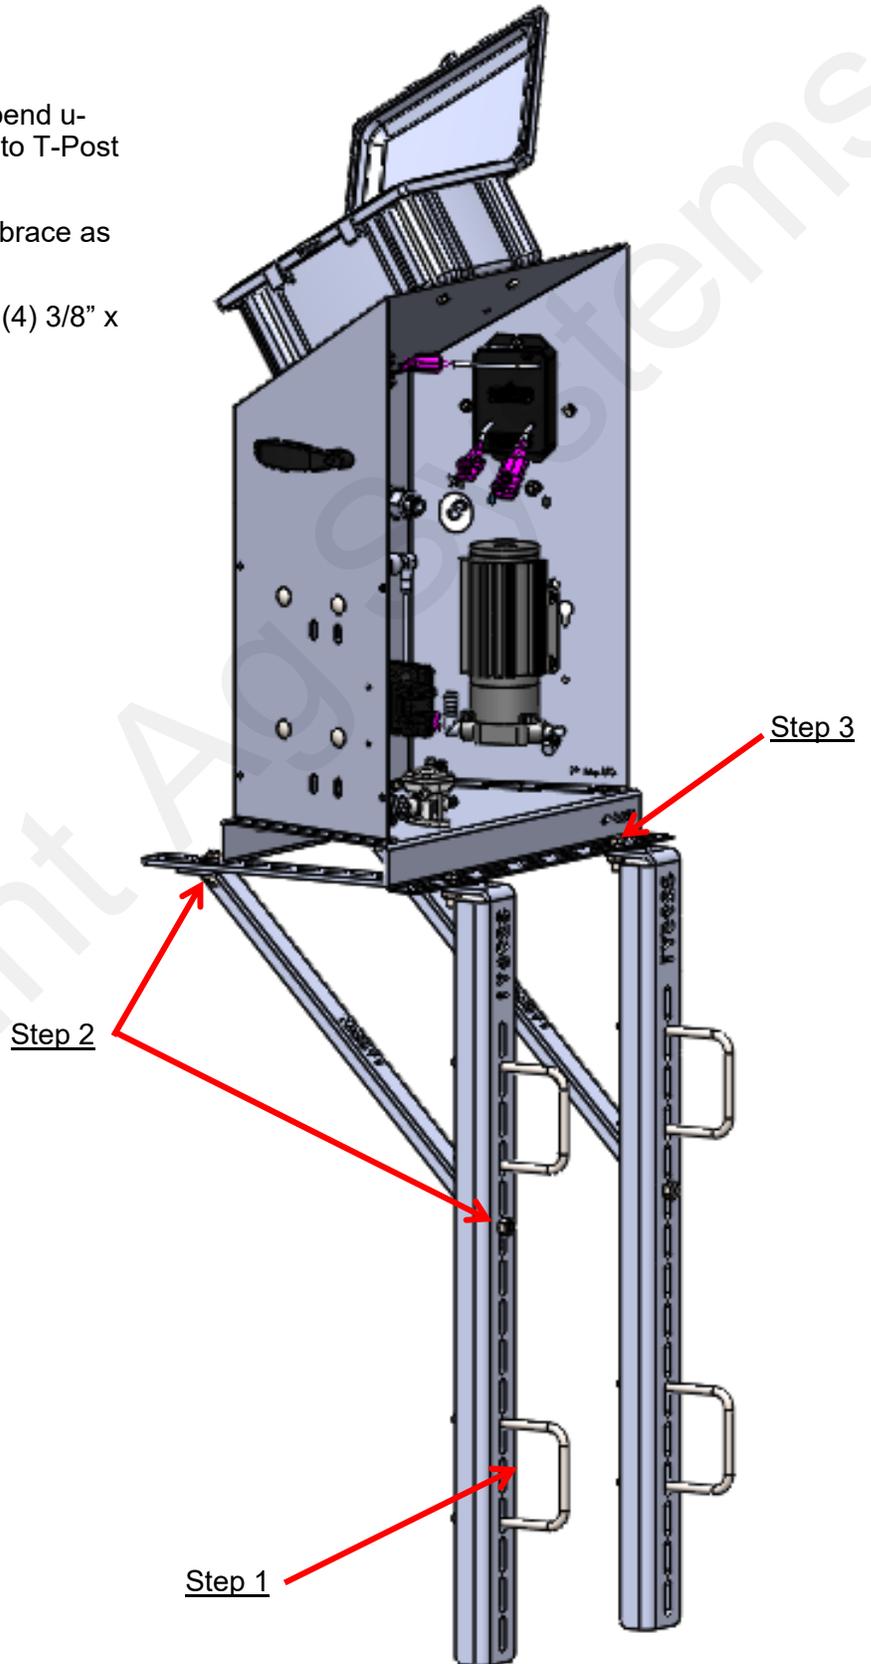



Parts List and Exploded View

SurePoint Ag Systems