




# 396-5549Y1

## Dual Product Parallel Arm

### Valve Mounting Bracket Instructions


**Kit Number: 515-01-300200**

Kit Description: SS Parallel Linkage Dual Product Zip Valve Mounting Bracket Kit

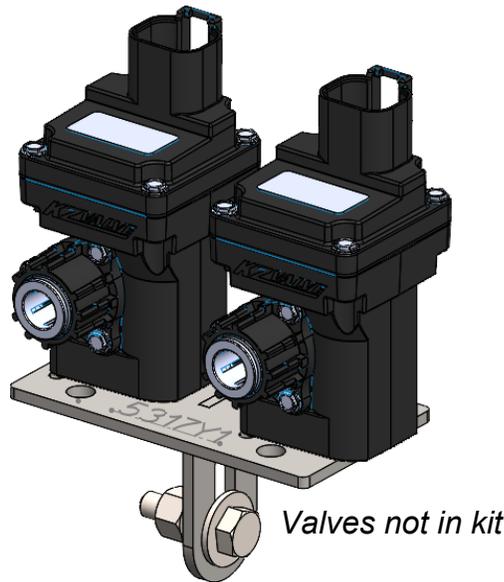

**Kit Number: 515-01-400150**

Kit Description: Sentinel Row Control Dual Product Parallel Arm Mounting Kit

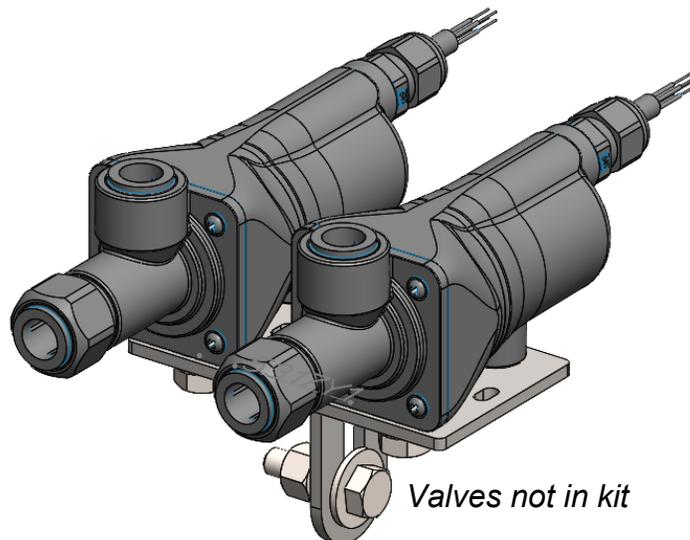




# Parts List and Installation Instructions


## 515-01-300200

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	384-1190	Base Level Hardware bag for Check Valve and Zip Valve	1
2	400-5317Y1-SS	Dual Product Parallel Arm Valve Mounting Bracket	2
3	757-97349A200	Size 6 Thread Forming Screw for Plastic - SS	13

*Kit contains items to mount 4 valves*

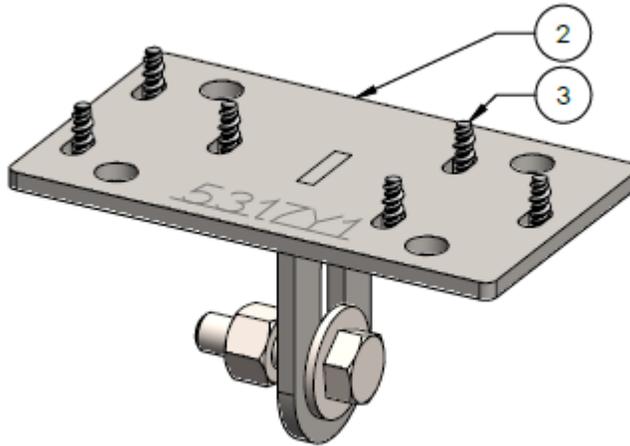

1. Attach Zip Valves to the mounting bracket using the provided Thread Forming Screws. *Do not overtighten.*
2. Attach the mounting bracket to parallel arm using the hardware provided in kit 384-1190.

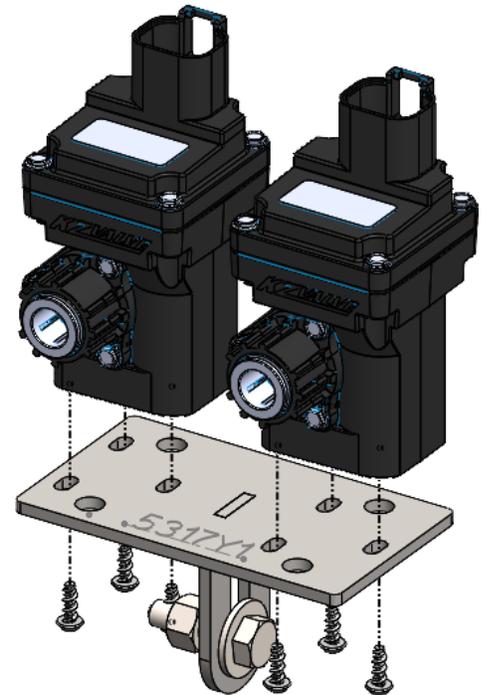




# Parts List and Installation Instructions

## 515-01-400150

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	300-040006-5	1/4" x 3/8" Hex Head Bolt - G5	8
2	331-04	1/4" Lock Washer	8
3	384-1190	Base Level Hardware bag for Check Valve and Zip Valve Mounting (for 2 Zips)	1
4	400-5317Y1	Dual Product Parallel Arm Valve Mounting Bracket	2

*Kit contains items to mount 4 valves*

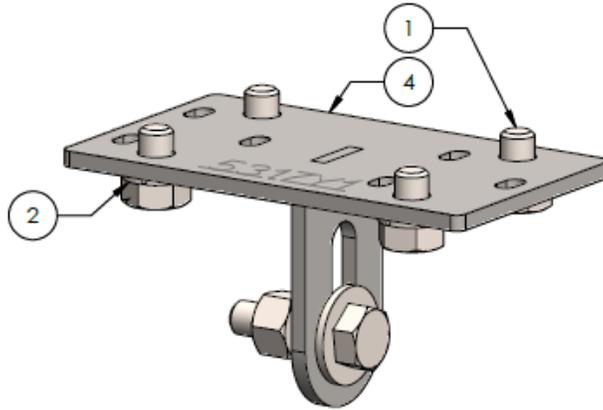

1. Attach Sentinel Row Control Valves to the mounting bracket using the provided hardware.
2. Attach the mounting bracket to parallel arm using the hardware provided in kit 384-1190.

