

SB-24-10002

03.21.2024



Title: Moving 2 in Venturi Valve to Inlet of Venturi

Product Line: Spray Tender

Model: Quickdraw 3000

Level: Public

Author: Andy Boyle


Overview:

- The following changes are being made to QuickDraw 3000 Cabinets built after 2019
 - Moving 2" Venturi Valve to inlet side of Venturi provides two benefits;
 - Allow Carrier Flow Meter Auto Cal Feature (QD 3000 Controller Required) to function.
 - Allows for increase rinse efficacy of the venturi.
 - New Suction Hose PN 285-125-WBS-27 is longer to accommodate the new placement of the 2" Venturi Valve. New hose can be purchased for customers that wish to move their 2" Venturi Valve to the inlet side of the inlet side of the venturi.



Change 1.25" suction hose to longer length.

Move 2" valve, currently after the venturi to opposite side of venturi (inlet).

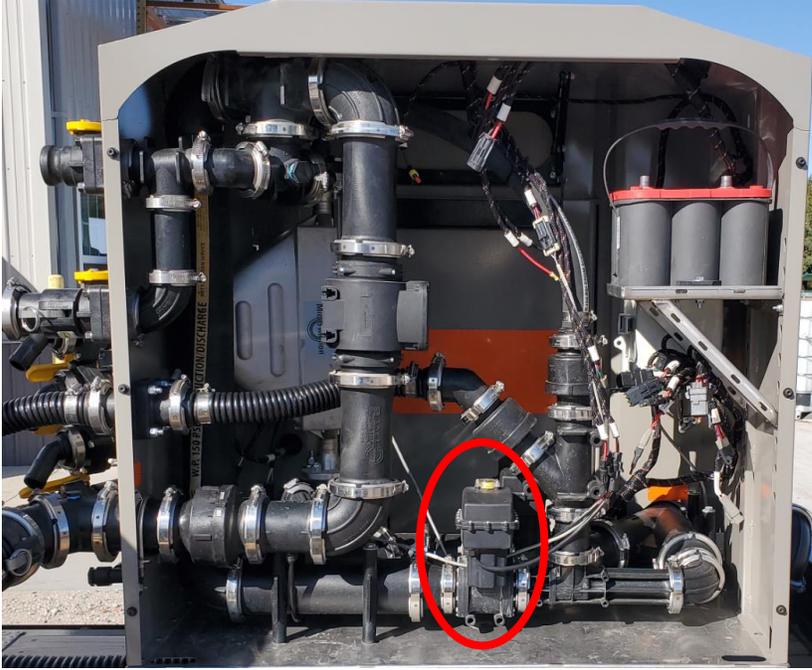

Picture shows modified plumbing. Note the new valve and venturi location.