


396-4034Y1




General Instructions for Gen2 PumpRight Pumps & PWM Hydraulic Valve

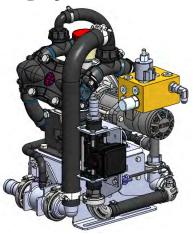

	Number of Diaphragms	Max Flow GPM	Max GPA on 40' at 6 MPH	Max GPA on 60' at 6 MPH
PR17	3	17	35	23.5
PR30	3	30	62	41
PR40	4	40	82	55
D250	6	55	100	75
PR80	4	80	150	100

PumpRight pumps are available in 4 models to fit your implement size and application rate. At maximum flow, all pumps use 8-9 GPM of hydraulic oil with our standard 4.0 CID motor. To minimize the oil requirement consider using the next larger size pump.

520-00-3050 PR17 & PR30 **Accessories Bag**

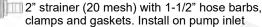



1-1/2" T-Bolt Hose Clamp Strainer and Pump Inlet Connections 1-1/2" - 1-1/4" Hose Clamp

Use one on flowmeter outlet hose



2" Manifold x 1 1/2" Hose Barb 90 -Optional for pump inlet instead of straight barb



1" MPT x 3/4" Hose Barb - Optional substitute on flowmeter outlet to use 3/4" hose

520-00-3055 PR40 & D250 **Accessories Bag**



2" strainer (20 mesh) with 2" hose barbs, clamps and gaskets. Install on pump inlet



🗞 2" T-Bolt Hose Clamp - Qty 3 Strainer and Pump Inlet Connections



2" Manifold x 2" Hose Barb, 90° - Optional for pump inlet instead of straight barb



2" Manifold, 90° Elbow- Optional, use to mount strainer directly to pump plumbing

520-00-3060 PR80 - 2" Inlet **Accessories Bag**



2" Full port strainer (16 mesh) with 2" hose barbs. clamps and gaskets. Install on pump inlet



2" HD hose clamps for strainer / pump inlet connections




2" full port sweep elbow and hose barb sweep elbow provided for flexibility on pump or strainer inlet.

520-00-3065 PR80 - 3" Inlet Accessories Bag



3" strainer (20 mesh) with 3" hose barbs, clamps and gaskets. Install on pump inlet

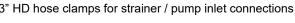



3" full port sweep elbow and hose barb sweep elbow provided for flexibility on pump or strainer inlet.

3" x 2" Full Port reducer coupling to connect to PR80 Pump Inlet



All accessory bags include a Priming Air Bleed Valve Kit - Install on pump per instructions in kit



All accessory bags include a 3/8" MPT plug and a 3/4" MPT x 3/4" Hose Barb - Plug threaded hole in bottom of the inlet side tee if recirculating back to the tank or agitating.



Operator should read this manual before operating the system.



Table Of Contents

SAFETY

J	AFELI	
•	Safety Notices2-3	
C	Components - Liquid	
•	Flowmeter Kits 4-6	
•	Pump Priming and Air Bleed Valve7	
•	Recirculation and Agitation 8	
_		
l	nstallation Overview	
•	Mounting9	
•	Hydraulics	
•	Plumbing Connections	
	laintenance & Dante	
IV	laintenance & Parts	
•	Recommended Care and Maintenance	
•	PumpRight Valves and Diaphragms 17-18	
•	PR17 Plumbing Assemblies	
•	PR17 Pump Parts Breakout	
•	PR30 Plumbing Assemblies	
•	PR30 Pump Parts Breakout	
•	PR40 Plumbing Assemblies	
•	PR40 Pump Parts Breakout	
•	D250 Plumbing Assemblies	
•	D250 Pump Parts Breakout	
•	PR80 Pump Assemblies	









© 2012-2020 SureFire Ag Systems, All Rights Reserved





TAKE NOTE! THIS SAFETY ALERT SYMBOL FOUND THROUGHOUT THIS MANUAL IS USED TO CALL YOUR ATTENTION TO INSTRUCTIONS INVOLVING YOUR PERSONAL SAFETY AND THE SAFETY OF OTHERS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN INJURY OR DEATH.



THIS SYMBOL MEANS ATTENTION!

BECOME ALERT!

YOUR SAFETY IS INVOLVED!

Note the use of the signal words DANGER, WARNING and CAUTION with the safety messages. The appropriate signal word for each has been selected using the following guidelines:



DANGER: Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations typically for machine components which, for functional purposes, cannot be guarded.



WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.



CAUTION: Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE is used to address safety practices not related to personal safety.







Hydraulic Fluid and Equipment Safety

This system uses hydraulic equipment with hydraulic fluid under extremely high pressure.

Hydraulic fluid escaping under pressure can have sufficient force to penetrate the skin causing serious injury. Keep all hoses and connections in good serviceable condition. Failure to heed may result in serious personal injury or death. Avoid the hazard by relieving the pressure before disconnecting lines or performing work on the system.

Make sure hydraulic fluid connections are tight and all hydraulic hoses and lines are in good condition before applying pressure to the system. Use a piece of paper or cardboard, NOT BODY PARTS, to check for suspected leaks. Wear protective gloves and safety glasses or goggles when working with hydraulic systems. DO NOT DELAY!

Check hydraulic hoses and fittings frequently. Loose, broken, and missing hardware can cause equipment to not perform properly and can result in serious injury or death.

Hydraulic systems can be hot and cause burns. Before working on any system, wait until the fluid has cooled.

If an accident occurs, see a doctor familiar with this type of injury immediately. Any fluid injected into the skin or eyes must be treated within a few hours or gangrene may result.



A Word to the Operator

It is YOUR responsibility to read and understand the safety messages in this manual. YOU are the key to safety.

SAFETY IS YOUR RESPONSIBILITY.



PR17 & PR30 Electromagnetic Flowmeter Kits

0.13 - 2.6 GPM Item Number 500-02-2082 (PR17)

0.3 - 5 GPM Item Number 500-02-2085 (PR17)


0.6 - 13 GPM Item Number 500-02-2090 (PR17 & PR30)

1.3 - 26 GPM Item Number 500-02-2095 (PR30)

Kits include flowmeter, adapter harness, mounting bracket, hose barb fittings & hose clamps.


-Before doing any arc welding on the implement, unplug the cable to the flowmeter, or damage to the flowmeter may result.

-Do not power wash the flowmeter. High pressure spray directed at the back edge of the face plate or at the wire connector may allow water into the flowmeter electronics.

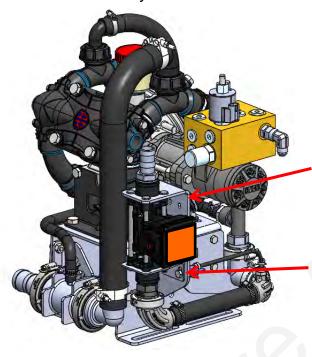

Mounting Bracket, 410-4015Y1 (QTY 1) (not used for PR40 and D250 Pump)

Mounting Bracket, 400-3826Y1 (QTY 1) (not used for PR40 and D250 Pump)

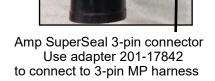

Components Liquid

The current version of the SureFire Electromagnetic flowmeter has a black molded body and an orange sticker. The meter has a molded in 3-pin Superseal connector for improved sealing.

SureFire has adapter harnesses available to adapt to other flow meter connections.

Electromagnetic flowmeters are superior to traditional turbine flowmeters in two basic ways. First, they have no moving parts. This translates into no wear items or potential for contaminants to jam a spinning turbine.

Second, electromagnetic flowmeters detect the flow by electrically measuring the velocity of the liquid, which makes them independent of viscosity or density of the fluid measured. They are extremely accurate using the standard calibration number. SureFire still recommends you perform a catch test to verify the system is properly installed and configured.

Flowmeter Model	Pulses per gallon	FPT Size	Hose Barb In kit
0.13 - 2.6 GPM	3000	3/4"	1"
0.3 - 5 GPM	3000	3/4"	1"
0.6 - 13 GPM	2000	3/4"	1"
1.3 - 26 GPM	2000	1"	1"


The flowmeters will accurately read higher than the rated range.

Earlier model flowmeters (meters with white labels with black text) have different calibration numbers. The flow cal number (pulses per gallon) is printed on the serial number sticker on the side of the flowmeter.




PR40 & D250 Electromagnetic Flowmeter Kit

2.6 - 53 GPM Item Number 500-02-2080

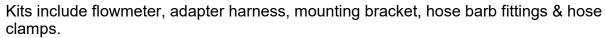



- -Before doing any arc welding on the implement, unplug the cable to the flowmeter, or damage to the flowmeter may result.
- -Do not power wash the flowmeter. High pressure spray directed at the back edge of the face plate or at the wire connector may allow water into the flowmeter electronics.

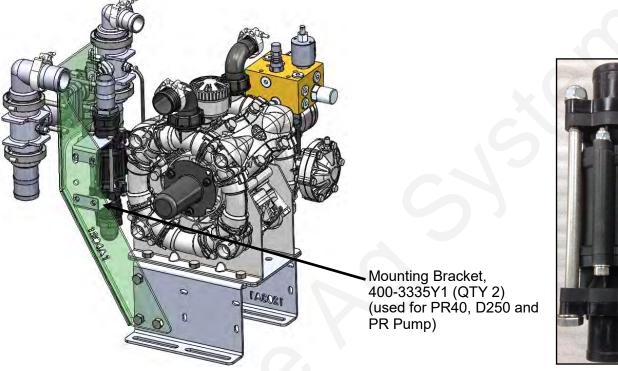



The current version of the SureFire Electromagnetic flowmeter has a black molded body and an orange sticker. The meter has a molded in 3-pin Superseal connector for improved sealing.

Amp SuperSeal 3-pin connector Use adapter 201-17842 to connect to 3-pin MP harness

SureFire has adapter harnesses available to adapt to other flow meter connections.

Electromagnetic flowmeters are superior to traditional turbine flowmeters in two basic ways. First, they have no moving parts. This translates into no wear items or potential for contaminants to jam a spinning turbine.

Second, electromagnetic flowmeters detect the flow by electrically measuring the velocity of the liquid, which makes them independent of viscosity or density of the fluid measured. They are extremely accurate using the standard calibration number. SureFire still recommends you perform a catch test to verify the system is properly installed and configured.

Flowmeter Model	Pulses per Gallon	FPT Size	Hose Barb In kit
2.6—53 GPM	2000	1-1/4"	1-1/2"
1.3—26 GPM	2000	1"	1"

The flowmeters will accurately read higher than the rated range.


Earlier model flowmeters (meters with white labels with black text) have different calibration numbers. The flow cal number (pulses per gallon) is printed on the serial number sticker on the side of the flowmeter.



PR80 Electromagnetic Flowmeter Kit


5 - 106 GPM

Item Number 500-02-2100

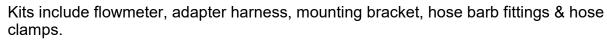



- -Before doing any arc welding on the implement, unplug the cable to the flowmeter, or damage to the flowmeter may result.
- -Do not power wash the flowmeter. High pressure spray directed at the back edge of the face plate or at the wire connector may allow water into the flowmeter electronics.

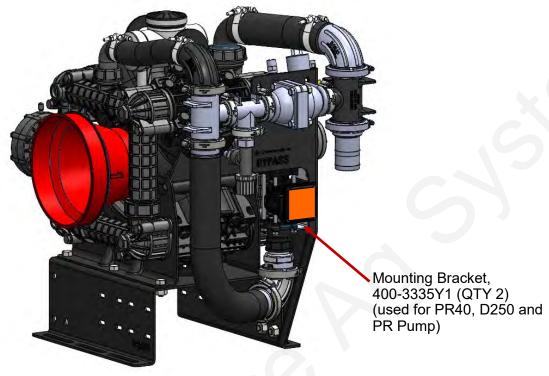



d Amp SuperSeal 3-pin connector
Use adapter 201-17842
to connect to 3-pin MP harness

The current version of the SureFire Electromagnetic flowmeter has a black molded body and an orange sticker. The meter has a molded in 3-pin Superseal connector for improved sealing.

SureFire has adapter harnesses available to adapt to other flow meter connections.

Electromagnetic flowmeters are superior to traditional turbine flowmeters in two basic ways. First, they have no moving parts. This translates into no wear items or potential for contaminants to jam a spinning turbine.

Second, electromagnetic flowmeters detect the flow by electrically measuring the velocity of the liquid, which makes them independent of viscosity or density of the fluid measured. They are extremely accurate using the standard calibration number. SureFire still recommends you perform a catch test to verify the system is properly installed and configured.

Flowmeter Model	Pulses per	Connection	Hose Barb
	Gallon	Size	In kit
5—106 GPM	568	2" F.P Flange	2"

Pump Priming and Air Bleed Valve

An air bleed valve is included with each pump to aid in system priming. It is shipped in the pump accessories bag and must be installed during system installation.



For best results, close the recirculation knob and open the air bleed valve when priming the pump.

Why use an air bleed valve:

Most fertilizer systems are equipped with a 4 or 10 lb. check valve on the end of each hose delivering fertilizer to the ground. These valves do not let air escape from the system, unless it is pressurized. PumpRight liquid pumps are not good air compressors. Therefore, the pump can struggle to prime due to air trapped on the outlet side of the pump.


The air bleed valve is a small 1/4" valve that when opened lets air escape from the pump outlet at zero pressure. Open until liquid comes out and then close the valve.

Be sure the air bleed valve tube does not become plugged with dirt or it will not allow air to bleed.

How to install the air bleed valve:

Remove the 1/4" plug from the quick connect fitting on the pump outlet side (see pictures below). Next, insert the 1/4" tubing in the quick connect fitting. Run the 1/4" tubing to an easily accessible spot on your equipment. Next, cut the tubing and push the 1/4" valve onto the tubing. Finally, run the tubing to a low location where any fertilizer that escapes will run on the ground.

Be sure the air bleed valve tube does not become plugged with dirt or it will not allow air to bleed.

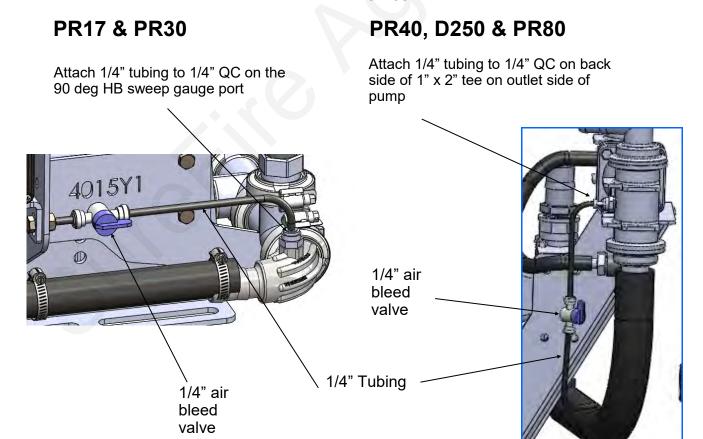

Recirculation & Agitation

A recirculation valve is standard on all PumpRight models outlet plumbing assemblies.



For best results, close the recirculation knob when priming the pump.

Opening the Recirculation valve will NOT lower the pressure required to push the product to the rows.

How Recirculation Works:

When running a PumpRight pump at less than 20% of it's maximum flow, it sometimes improves system stability to allow the pump to run faster. Opening the recirculation valve diverts some pump flow before the flowmeter, causing the pump to run faster. The application rate is still measured by the flowmeter and everything that passes through the flowmeter is applied to the ground. If the pump is surging at a low flow rate, open the recirculation regulation valve until the pump runs smoothly. **Start with a quarter to a half turn.**

OPENING THE VALVE LOWERS THE MAXIMUM RATE THAT CAN BE APPLIED TO THE GROUND. Close the valve if a higher rate is required.

How to modify for tank agitation:

If tank agitation is required, the recirculation valve can be re-plumbed to divert flow to the tank. All that is required is to remove the 1/2" recirculation hose from the pump. Then replace the 3/8" MPT x 1/2" HB on the inlet side of the pump with a 3/8" plug which is included in your PumpRight accessories bag. Finally, install a longer 1/2" hose from the recirculation valve back to the tank.

PR17 & PR30

Recirculation Regulation Valve

PR40, D250 & PR80

Recirculation hose attaches to back of 2" x 1" tee

102-23520-3/4
Start with a quarter to a half turn open.

on pump inlet

1/2" recirculation hose

Recirculation Regulation Valve 102-23520-3/4 Start with a quarter to a half turn open. recirculation hose

1/2"



PumpRight Pump Installation

Mounting

- 1. Mount pump in your preferred location. The PumpRight pump has excellent suction and priming ability, so it can be mounted away from or above fertilizer tanks.
- 2. SureFire has U-Bolts available to mount the pump directly to multiple bar sizes shown below. Each U-bolt kit includes 1 bolt and 2 flange nuts.
- **3.** If the U-Bolts will not work, order the universal backer plate kit, number 515-203000 which will clamp to any size tube from 4" 8" wide.





PumpRight Hydraulic Connections

PWM Valve

Load Sense Port—For power beyond hydraulic use only.




Manual Override - Turn and lift the manual override to check for proper hydraulic connections. Override will completely open valve, so limit tractor hydraulic flow to valve. (May need to clean packed dirt to allow movement of override knob.)

Push down and turn 1/2 turn CW to return to operating position.

PWM Valve Connector - 2-Pin MP Shroud
Troubleshooting Tip:
To check coil, an ohmmeter
placed on the two pins should
show 7-9 ohms.

Pressure line from Tractor

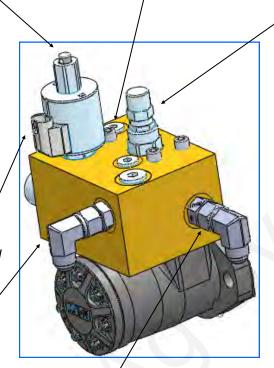

Return oil to Tank - Check valve included on return port

Bypass Valve—Remove the cap to access a bypass needle valve. This valve is shipped from the factory closed. The only case when valve should be open is when running in series with other hydraulic motors.

Depending on your tractor and exact hydraulic plumbing scenario your pump may turn very slowly when it should stop. To stop the pump completely, open the bypass valve slightly.

(Always loosen the lock nut before adjusting the needle valve. Do not overtighten needle valve.)



Hydraulic oil under extremely high pressure. Do not use hand or any other skin to check for or to stop hydraulic leaks. Be sure pressure is relieved before loosening hydraulic fittings. Replace worn hoses immediately. Seek medical care immediately if hydraulic oil is shot into the eye or the skin.

Pump Rotation Check Valve

A check valve is included on the outlet port of the hydraulic valve. This prevents the pump from running in the wrong direction. If run in the wrong direction, liquid will be pumped, however, the hydraulic valve will not be able to control the flow. The check valve can be identified by the Part Number 1108R stamped on it and a flow direction arrow.

How it Works with Power Beyond Hydraulics

This valve is designed to work with power beyond hydraulics. This configuration will not require a standard tractor remote hydraulic valve. The load sense port and hose described next will typically not be needed if other hydraulic ports are in use. If the load sense is needed, do this: First, remove the load sense plug and install a #6 male boss x #6 JIC adapter fitting, SureFire PN 161-01-6MB-6MJ. Then run a 3/8" or 1/4" hydraulic hose back to the tractor. This hose will connect to the load sense port on the tractor. The load sense line will signal the tractor hydraulic system to supply the flow needed by the pump to meet your application rate. The SureFire valve has an internal load sense check valve, which is required for power beyond hydraulics.. The bypass valve (see above) must be closed to use power beyond hydraulics or else an unlimited amount of oil will be continuously circulated.



PumpRight Hydraulic Connections

Hydraulic Hose

SureFire recommends 1/2" hydraulic hose for both pump inlet and outlet. The hoses will need #8 JIC female swivel fittings.



See the manual for your system for additional hydraulic plumbing information.

Where do I get hydraulic flow for my PumpRight?

This question is often asked as many implements use up all the hydraulic connections on a tractor. SureFire has some recommendations as to what works best.

Best Option - Dedicated PumpRight Circuit

If you have a tractor remote available, attach the tractor remote valve directly to the PumpRight pressure and return ports. DO NOT try to avoid this method simply to save another set of hydraulic hoses running to the tractor. Operating the PumpRight on it's own circuit is the simplest for installation and operation. It guarantees the PumpRight won't negatively affect any other hydraulic components on your equipment.

Alternate Option - In Series with John Deere CCS Fan or Bulk Fill Seed Fan

If you do not have a tractor remote valve available, this may be your best method. You can plumb the PumpRight after the seed distribution fan. If using this method, the SureFire PWM bypass valve must be open (see previous page for instruction & picture). If bypass is left closed, the SureFire valve will limit the speed of the seed distribution fan.

For example, the John Deere CCS fan uses around 7 GPM of oil. This will limit the PumpRight maximum flow (8-9 GPM oil necessary for maximum flow). See the charts on the next page for adjusted maximum pump flow. See section G for flow charts to determine your necessary flow rate.

<u>DO NOT plumb the PumpRight in series with a vacuum fan</u>. The vacuum fan uses just a few GPM of oil. Also, problems will be caused by excessive pressure at the vacuum fan motor.

Two PumpRights

The preferred method is to plumb the two pumps in series. <u>DO NOT plumb two pumps after the CCS fan.</u> Excessive pressures may damage the CCS fan motor. Run the pressure line from tractor to first pump inlet. Plumb from the outlet of Pump 1 to the Inlet of Pump 2, then from Pump 2 outlet back to the tractor. Open the bypass needle valve on both pumps so each valve controls motor speed independently. Run the flow setting procedure on the next page to minimize the hydraulic flow based on the pump that requires more hydraulic motor flow.



Hydraulic oil under extremely high pressure. Do not use hand or any other skin to check for or to stop hydraulic leaks. Be sure pressure is relieved before loosening hydraulic fittings. Replace worn hoses immediately. Seek medical care immediately if hydraulic oil is shot into the eye or the skin.



PumpRight Hydraulic Oil Flow Requirements

(Requirements for 4.0 CID Motor—standard SureFire motor beginning in 2016— Earlier motor was 4.9 CID which uses 20% more oil)



Setting Tractor Hydraulic Remote Speed

PumpRight pumps require a constant hydraulic oil flow from the tractor. The amount of oil needed varies with pump size and speed. The chart at right shows the necessary oil flow for each pump model at varying fertilizer flows.

Use this procedure to determine the correct setting on your tractor hydraulic flow.

- 1. Run the fertilizer system in the field at the maximum rate and ground speed.
- 2. Turn down the hydraulic flow slowly while watching the pump flow (Volume / Minute).
- 3. Observe when the Volume / Minute begins to drop.
- 4. Turn the hydraulic flow back up slightly.

This setting will provide the Pump Right pump just enough oil for your application rate.

If running with the bypass open (only recommended when 2 motors are operated in series) this process will minimize the oil circulated in the bypass loop, leaving more oil flow for other hydraulic functions.

NOTICE

The pump is rated at a maximum of 550 RPM. Spinning the pump over 550 RPM may cause pump failure.

The system will spin the pump faster than that if precautions are not taken to limit the speed. This could happen if the strainer becomes plugged or blocked and the controller attempts to speed the pump up to achieve the desired Rate. It could also happen if a high pressure situation occurs that opens the Pressure Relief Valve (PRV) and the pump speeds up to try to achieve the Rate.

Monitor the pump RPM. If the pump begins to speed up, check for a blocked strainer or other issue.

Set the Pump RPM High Limit and Maximum Pressure Alarm as shown in Section F of the system manual.

Another way to limit the maximum pump speed is to set the High PWM Limit just above what is needed for regular operation. If the pump tries to speed up above that, check for blocked strainer or other issue.


Model PR17 - 3 Diaphragms				
Fertilizer Flow		Hydraulic Oil		
(GPM)	(RPM)	Flow (GPM)		
5	137	2.4		
10	275	4.8		
15	412	7.1		
17	467	8.1		
	R30 - 3 Diaph	_		
Fertilizer Flow				
(GPM)	(RPM)	Flow (GPM)		
5	85	1.5		
10	170	2.9		
15	255	4.4		
20	340	5.9		
25	425	7.4		
30	510	8.8		
Model P	R40 - 4 Diaph	ragms		
Fertilizer Flow				
(GPM)	(RPM)	Flow (GPM)		
10	115	2.0		
20	229	4.0		
30	344	6.0		
40	458	7.9		
Model D	0250 - 6 Diaph	ragms		
Fertilizer Flow		Hydraulic Oil		
(GPM)	(RPM)	Flow (GPM)		
10	86	1.6		
20	172	3.2		
30	258	4.8		
40	343	6.4		
50	429	8.0		
55	472	8.6		
Model P	Model PR80 - 4 Diaphragms			
10	57	1.0		
20	114	2.0		
30	170	2.9		
40	227	3.9		
50	284	4.9		
60	340	5.9		
70	397	6.9		
80	454	7.9		





PR17 & PR30 Liquid Plumbing Connections



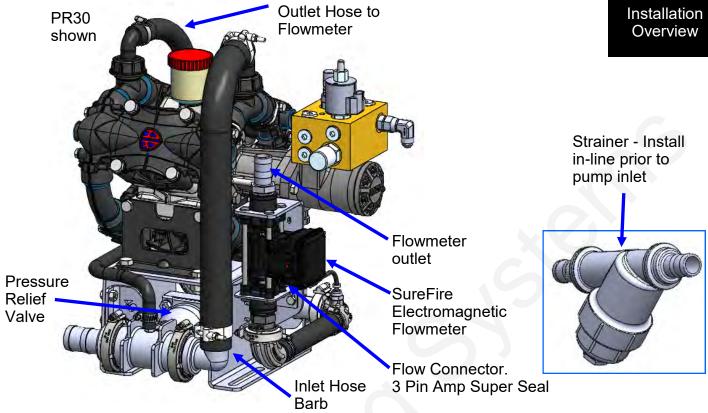


Inlet: The PR17 and PR30 PumpRight are shipped with a 1 1/2" inlet hose barb. Attach this to the hose from your supply tank and strainer . A 1 1/2" 90 degree hose barb is included and can be substituted.

Inlet Strainer: A 20 mesh strainer is included in the pump kit. The manifold strainer includes two hose barbs so it can be mounted anywhere in the inlet line. If space allows, the strainer can be mounted directly to the inlet plumbing assembly as shown below.

Outlet: The outlet is plumbed directly to the flowmeter with 1" hose. As shown above, the flowmeter may be mounted directly to the PumpRight pump. The flowmeter outlet is a 1" hose barb. The outlet hose should be a minimum of 24" long with a gentle curve prior to any fittings for optimum flowmeter performance. The flowmeter outlet will attach to your manifold(s) or section valves. A 3/4" hose barb is included in the bag of parts and can be substituted on the flowmeter outlet.


Pressure Relief Valve (PRV): The PRV is a 100 psi relief. If there is a restriction that creates over 100 psi in the system, the PRV will open allowing the excess flow to pass back to the inlet side of the pump. This protects the pump and fertilizer system from damage.

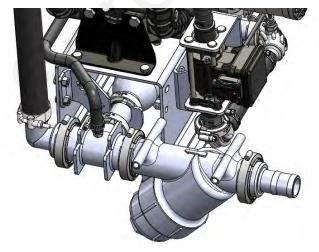



These pumps can deliver liquid at high pressure (290 PSI). Be sure the 100 PSI Pressure Relief Valve (PRV) is installed and functioning so system pressure will be kept under 100 PSI. Check hoses, hose clamps, and liquid fittings regularly and repair or replace loose connections.



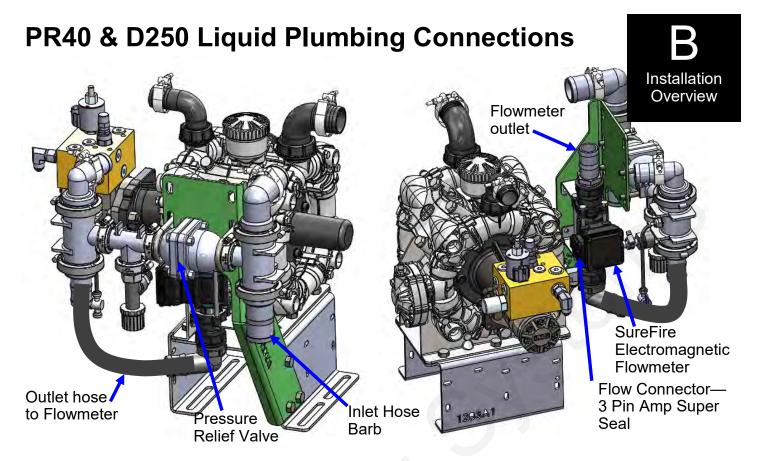

Inlet: The PR40 and D250 PumpRight are shipped with a 2" inlet hose barb. Attach this to the hose from your supply tank and strainer. A 2" 90 degree hose barb is included and can be substituted.

Inlet Strainer: A 20 mesh strainer is included in the pump kit. The manifold strainer includes two hose barbs so it can be mounted anywhere in the inlet line.

Outlet: The outlet is plumbed directly to the flowmeter with 1 1/2" hose. As shown above, the flowmeter may be mounted directly to the PumpRight pump. The flowmeter outlet is a 1 1/2" hose barb. The outlet hose should be a minimum of 24" long with a gentle curve prior to any fittings for optimum flowmeter performance. The flowmeter outlet will attach to your manifold(s) or section valves.


Pressure Relief Valve (PRV): The PRV is a 100 psi relief. If there is a restriction that creates over 100 psi in the system, the PRV will open allowing the excess flow to pass back to the inlet side of the pump. This protects the pump and fertilizer system from damage.



These pumps can deliver liquid at high pressure (290 PSI). Be sure the 100 PSI Pressure Relief Valve (PRV) is installed and functioning so system pressure will be kept under 100 PSI. Check hoses, hose clamps, and liquid fittings regularly and repair or replace loose connections.

PR80 Liquid Plumbing Connections



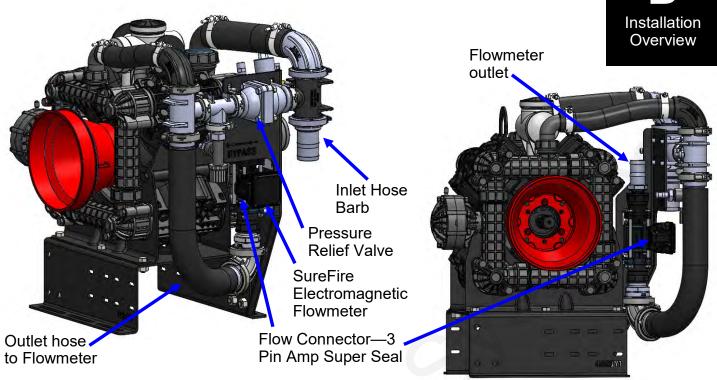

Inlet: The PR80 PumpRight is shipped with a 2" inlet hose barb. Attach this to the hose from your supply tank and strainer. A 2" 90 degree hose barb is included and can be substituted. In high flow scenarios, use a 3" inlet hose and replace the 2" hose barb with a 3" reducer coupling.

Inlet Strainer: A 16 or 20 mesh strainer is included in the pump kit. The manifold strainer includes two hose barbs so it can be mounted anywhere in the inlet line. If space allows, the strainer can be mounted directly to the inlet plumbing assembly as shown in image to the left.

Outlet: The outlet is plumbed directly to the flowmeter with 2" hose. As shown above, the flowmeter may be mounted directly to the PumpRight pump. The flowmeter outlet is a 2" hose barb. The outlet hose should be a minimum of 24" long with a gentle curve prior to any fittings for optimum flowmeter performance. The flowmeter outlet will attach to your manifold(s) or section valves.

Pressure Relief Valve (PRV): The PRV is a 100 psi relief. If there is a restriction that creates over 100 psi in the system, the PRV will open allowing the excess flow to pass back to the inlet side of the pump. This protects the pump and fertilizer system from damage.



These pumps can deliver liquid at high pressure (290 PSI). Be sure the 100 PSI Pressure Relief Valve (PRV) is installed and functioning so system pressure will be kept under 100 PSI. Check hoses, hose clamps, and liquid fittings regularly and repair or replace loose connections.

Recommended Care and Maintenance



Air Bladder

PumpRight pumps (PR 40, D250 and PR80) have an air bladder to smooth the pump output flow. It is recommended to run this bladder at the greater of 15 PSI or 25% of working pressure. Due to the small size of the air bladder, **very little air is needed.** SureFire recommends charging a portable air tank to the correct pressure, then attach to the bladder valve to charge the air bladder to the same pressure as your air tank.

Winterization

SureFire recommends flushing your fertilizer pump and complete system with adequate amounts of water first. Next, use RV antifreeze to winterize your system by pumping an adequate amount through all components. At the beginning of the next season, begin with water to verify the system is in working order with no leaks.

Change Pump Oil Annually

PumpRight pumps use an internal oil lubricated crankshaft and connecting rod design. The oil is held in an external reservoir with level indicators. SFA Part #: 291-02-2160-0038 oil is recommended for the pump, supplied by SureFire Ag. This is a non-detergent SAE30 weight oil. If not available, hydraulic jack oils are a similar non-detergent formulation. Annual oil changes are recommended.

To fill or drain the pump completely, the pump shaft must be turned slowly by hand. The hydraulic motor will have to be removed to do this.

On some pump models, the pump will have to be removed from the mounting bracket and lifted slightly to allow access to the oil plug.

When refilling the pump with oil, the shaft will again have to be rotated to fill the pump to its required oil volume.



CRANKCASE OIL CAPACITIES			
Model Capacity Model Capacity			
PR17	13 oz	PR40	56 oz
PR30	28 Oz	D250	98 oz
		PR80	148 oz

Diaphragm & Valve Replacement

PumpRight pumps are designed to allow very simple replacement of the two main pumping components; the diaphragms and the inlet & outlet valves. It is a good practice to replace these every 3 or 4 years (or every 1000 hours). It is a small job that helps ensure reliable operation during the busy season.



PumpRight Valves & Diaphragms

Diaphragm Pump Service Kits

1 Kit contains 1 diaphragm and 2 valves to service a single pumping diaphragm.

Order multiple kits to service all the diaphragms in your specific pump per chart below...



& Parts

QTY in Kit	Part Number	Description		
	PR17 Pump Service Kit - 3 Diaphragm			
KIT#:	KIT #: 291-13-100100 (pump requires 3 kits)			
1	291-13-1040083	BlueFlex Diaphragm (PR17)		
2	291-13-2429051	Valve		
2	291-13-3460380	Gasket / O-ring		

PR30 Pump Service Kit - 3 Diaphragm			
KIT #: 291-13-100150 (pump requires 3 kits)			
1	291-13-550081	BlueFlex Diaphragm	
2	291-13-2429051	Valve	
2	291-13-3460380	Gasket / O-ring	

	PR40 Pump Service Kit - 4 Diaphragm			
KIT #: 291-13-100150 (pump requires 4 kits)				
1	291-13-550081	BlueFlex Diaphragm		
2	291-13-2429051	Valve		
2	291-13-3460380	Gasket / O-ring		

D250 Pump Service Kit - 6 Diaphragm			
KIT #: 291-02-100500 (pump requires 6 kits)			
1	291-13-550081	BlueFlex Diaphragm	
2	291-02-9910-759051	Valve	
2	291-02-680070	Gasket / O-ring	

	PR80 Pump Service Kit - 4 Diaphragm			
KIT #: 291-13-100250 (pump requires 4 kits)				
1	291-13-304083	BlueFlex Diaphragm		
2	291-13-3049050	Valve		
2	291-13-3040200	Gasket / O-Ring		







PumpRight Valves & Diaphragms


Diaphragm Pump Service Kit Replacement Instructions

Visit www.surefireag.com or www.support.surefireag.com for PumpRight Diaphragm Pump Repair and Maintenance Video

Diaphragm & Valve Service Steps:

- 1. Remove inlet and outlet plumbing connections by unscrewing ring nut on inlet and outlet fitting.
- 2. Use extreme caution when removing and replacing drain plug, so that threads are not stripped and o-ring is not damaged. Remove drain plug from bottom of pump to drain oil from pump. Rotate pump shaft to remove all oil. Replace drain plug making sure o-ring is in place. Tighten plug to 180 In.Lbs.
- 3. Remove pump manifold(s) using a 13 mm wrench.
- 4. Remove and replace complete valve assembly.
- 5. Remove the pump head.
- 6. Remove the diaphragm bolt, support washer and diaphragm. Turn the pump shaft to up stroke to replace diaphragm.
- 7. Install new diaphragm (LIQUID side up), then replace washer and bolt.
- Turn pump to downstroke to seat new diaphragm into the sleeve groove.
- 9. Replace pump head and manifold(s).
- 10. Refill crankcase with SAE30 non detergent oil (PumpRight Oil or hydraulic jack oil). Turn the pump shaft and top off sight glass.


NOTE: See individual Part Breakout Charts for Bolt/Nut **Torque Specs.**

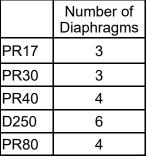


Typical Manifold—2 per pumpinlet and outlet

Maintenance

& Parts

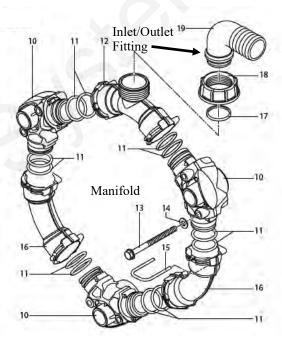

Typical Valve Assembly

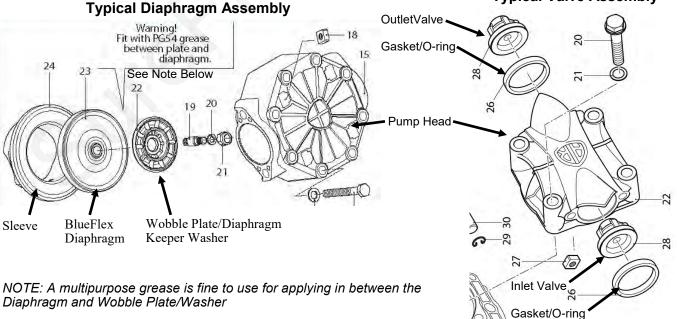


Diaphragm and Wobble Plate/Washer



Complete PR17 Pump Assembly w/ Hydraulic Motor and PWM Valve Kit: 500-01-4700



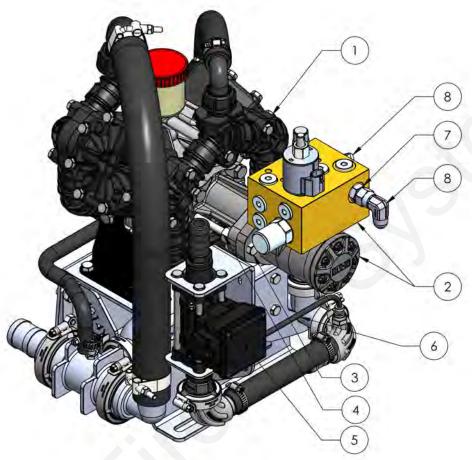


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
1	500-40-200017	PR17 Pre-Build Assembly (Minus Flowmeter and Hydraulics)	1	See Page 19
2	164-FTA1609	4.0 CID Hydr Motor with PWM Valve, Speed Sensor, and Bypass Valve, CW Rotation	1	See Page 42
2	164-FTA0994	4.0 CID Hydraulic Motor with PWM Valve and Bypass Valve, CW Rotation	ı	Occ r agc 42
3	300-080200-5	1/2" x 2" G5 Bolt	2	
4	321-08	1/2" Nylock Nut	2	
	500-02-2082	EMag PR17 Flowmeter Kit (.13 - 2.6 GPM) - 1" HB		
5	500-02-2085	EMag PR17 Flowmeter Kit (.3 - 5 GPM) - 1" HB	1	See Page 21
	500-02-2090	EMag PR17/PR30 Flowmeter Kit (.6 - 13 GPM) - 1" HB		
6	521-00-100250	Pump Priming and Air Bleed Assembly	1	
7	161-01-8MB-8MJ	Adapter - #8 male O-Ring Boss to #8 male JIC	1	
8	161-02-8MJ-8FJX-90	Elbow - #8 female JIC to #8 male JIC - 90	2	

PR17 Pump Pre-Build Assembly (Minus Flowmeter and Hydraulics) Kit: 500-40-200017





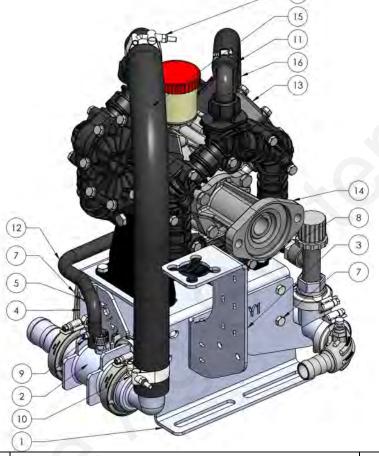

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
1	400-1117A4	Diaphragm Pump Bracket	1	
2	520-00-3013	Plumbing Assembly - PR17/30 Hydraulic Diaphragm Pumps	1	
3	410-4015Y1	PR17/30 - Flow Meter Support Bracket	1	
4	410-4014Y1	PRV Support Bracket - PR17/30	1	
5	323-05-SS	5/16" Flange Nut SS	6	
6	323-06-SS	3/8" Flange Nut SS	4	
7	300-050012-SS	5/16" x 3/4" HCS SS	6	
8	300-060012-SS	3/8" x 3/4" HCS SS	4	
9	350-0605	SS Hose Clamp - Size 6 - 7/8" Diameter	2	
10	350-TC181	T-Bolt Hose Clamp - 1.81 - 2.06" Diameter (fits 1 1/2" Enforcer or AG200)	2	
11	350-1608	1" Hose Clamp	2	
12	280-05-AG200-25L	1/2" AG200 - PR17/30 - 25" L	1	
13	290-02-PR17	PR17 Poly BlueFlex Diaphragm Pump - 17 GPM - 290 PSI	1	
14	291-02-AR55375	Flange Adapter Kit - PR17	1	
15	280-150-ENF-25L	1-1/2" Enforcer Hose - PR17	1	
16	280-100-AG200-25L	1" AG200 Hose - PR17 - 25 inches	1	


See Page 20

See Page 22



PR17 & PR30 Pump Plumbing Assembly Kit: 520-00-3013



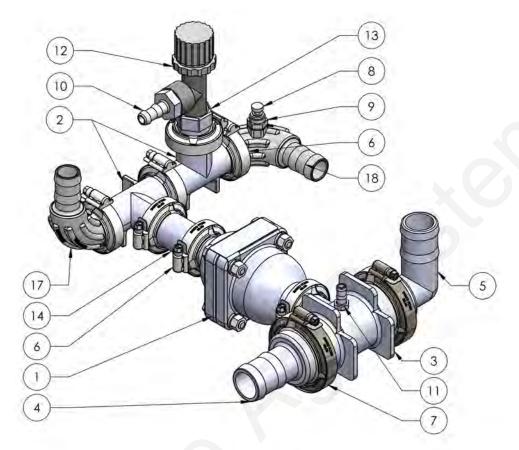

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	102-MPRV100-100	Pressure Relief Valve - 100 PSI	1
2	105-100TEE	1" Manifold Tee	2
3	105-200100TEE038	2" Standard Port Manifold x 1" Flanged Tee	1
4	105-200150BRB	2" Manifold x 1-1/2" Hose Barb	1
5	105-200150BRB90	2" Manifold x 1-1/2 Hose Barb - 90°	1
6	105-FC100	1" Manifold Clamp	7
7	105-FC200	2" Manifold Clamp	2
8	113-05-025	Plug - 1/4" QC	1
9	113-06-025025	QC to MPT - 1/4" QC x 1/4" MPT	1
10	101-075050	3/4" MPT x 1/2" HB	1
11	101-038050	3/8" MPT x 1/2" HB	1
12	102-23520-3-4	3/4" Throttling Valve with out spring - 150 PSI	1
13	105-100075FPT	1" Manifold x 3/4" FPT	1
14	105-100CPG	1" Manifold Coupling	1
15	105-100G	1" EPDM Manifold Gasket	7
16	105-150G	1 1/2" EPDM Gasket	2
17	105-100BRBSWP90	1" Flange X 90° Sweep Hose Barb	1
18	105-100BRBSWPG90	1" Manifold x 1" Hose Barb - 1/4" Gauge Port - 90 Degree Sweep	1



PR17 Flowmeter Kits

Kit: 500-02-2082 EMag PR17 Flowmeter Kit (.13 - 2.6 GPM)

Kit: 500-02-2085 EMag PR17 Flowmeter Kit (.3 - 5 GPM)


Kit: 500-02-2090 EMag PR17/PR30 Flowmeter Kit (.6 - 13 GPM)





ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	105-100075MPT	1" Flange X 3/4" Male Thread	1
2	105-100BRBSWP90	1" Flange X 90° Sweep Hose Barb	1
3	105-100G	1" EPDM Manifold Gasket	1
4	105-FC100	1" Manifold Clamp	1
5	400-3826Y1	SS Flowmeter Mounting Bracket	1
6	300-050012-SS	5/16" x 3/4" HCS SS	2
7	323-05-SS	5/16" Flange Nut SS	2
8	101-075100	3/4" MPT x 1" HB	1
	204-01-46211CUF00	Electro Magnetic Flow meter 0.13-2.6 GPM	
9	204-01-46211CUF01	Electro Magnetic Flow meter 0.3-5 GPM	1
	204-01-46211CUF02	Electro Magnetic Flow meter 0.6-13 GPM	
10	280-100-AG200-8L	1" AG200 Hose	1
11	350-1608	1" Hose Clamp	2

PR17 Diaphragm Pump Parts Breakdown

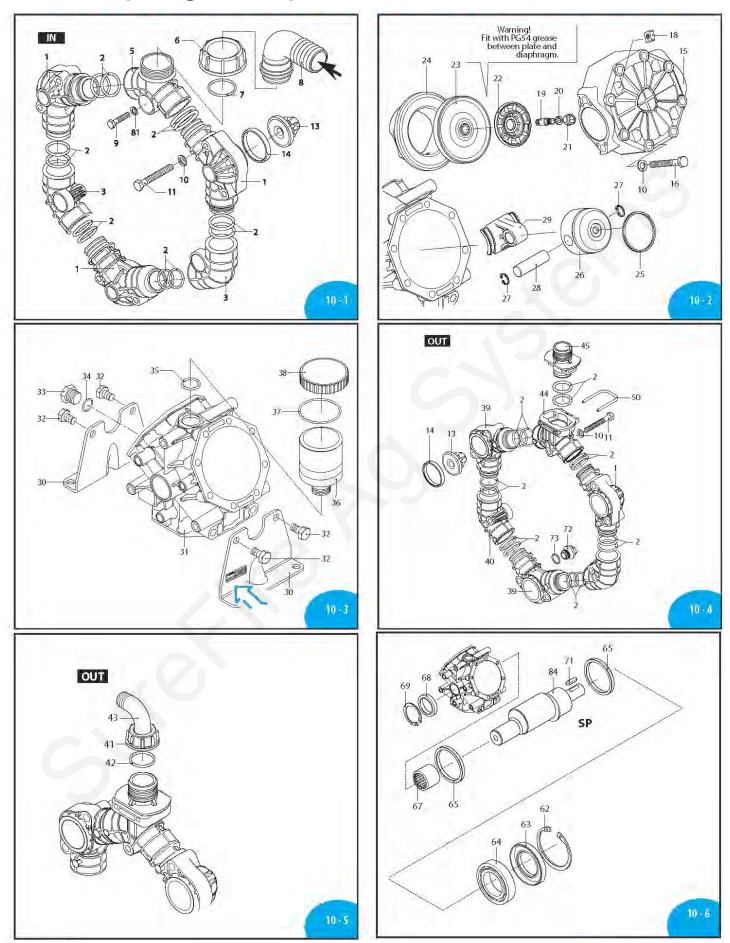

PR17 Diaphragm Pump Parts List

	291-13-3240030	PR17 Inlet & Outlet Male	_
2		Manifold	5
	291-13-390292	PR17 Manifold O-Ring - Inlet and Outlet	24
3	291-13-3240040	PR17 Inlet & Outlet Female Manifold	4
5	291-13-3240050	PR17 Inlet Manifold - Threaded	1
6	291-02-9910-750670	Ring Nut for 1 1/2" Outlet	1
7	291-13-1880460	O-Ring 29 x 3 Viton	1
8	291-13-50267	Poly Elbow 1 1/2" - Outlet	1
9	291-13-3240280	PR17 Metric Bolt For Female Manifolds M8 x 55 T106*	6
10	291-13-3120760	PR17 SS Washer For M8 x 75 & M8 x 80 Bolts	36
11	291-13-380211	PR17 Metric Bolt For Male Manifolds M8 x 75 T88*	12
13	291-13-2429051	Valve For PR17, PR30, and PR40	6
14	291-13-3460380	Valve Gasket For PR17, PR30, and PR40	6
15	291-13-3240020	PR17 Pump Head	3
16	291-13-621771	PR17 Metric Bolt For Pump Head M8 x 80 T124*	24
18	291-13-3120510	Square Nut for M8 Bolts	12
19	291-13-3240101	PR17 Hub Pin T265*	3
20	291-13-320622	PR17 Hub Pin Washer	3
21	291-13-2240670	PR17, PR30, & PR40 Hub Pin Nut T221*	3
22	291-13-3240110	PR17 Diaphragm Plate	3
23	291-13-1040083	PR17 Blueflex Diaphragm	3
24	291-13-3240130	PR17 Diaphragm Sleeve	3
25	291-13-650190	PR17 Piston Ring	3
	291-13-1040120	PR17 Piston	3
	291-13-1040270	PR17 Piston Pin Snap Ring	6
	291-13-1040070	PR17 Piston Pin	3
29	291-13-3240120	PR17 Piston Connecting Rod	3
30	291-13-3240090	PR17 Black Metal Mounting Foot	2

291-13-100100 PR17 Diaphragm Service Kit

#	Description	QTY	#	Description	QTY
13	Valve	2	23	Diaphragm	1
14	Valve Gasket	2	(pump requires 3 kits)		its)

291-13-100700 PR17 O-RIng Kit

#	Description	QTY	#	Description	QTY
2	Manifold O-Ring	24	37	Sight Glass Cap O-RIng	1
7	O-Ring 29x3 Viton	2	42	Outlet 1" Ring Nut O-Ring	1
34	Oil Drain Plug O-Ring	1	73	Outlet Male Manifold Plug O-Ring	1
35	Sight Glass to Pump O-Ring	1			

#	Item Number	Item Description	QTY
31	291-13-3240010	PR17 Pump Housing	1
32	291-13-620342	PR17 Metric Bolt for Mounting Foot to Housing M10x20 T265*	4
33	291-02-2406-0023	PR17 Oil Drain Plug T177*	1
34	291-02-9910- 740290	Oil Drain Plug O-Ring	1
35	291-13-720030	PR17 & PR30 Sight Glass to Pump O-Ring	1
36	291-13-3120240	PR17 & PR30 Sight Glass	1
37	291-02-9910-	PR17, PR30, & D115 Sight	1
	650920	Glass Cap O-Ring	ı
38	291-13-1040324	PR17 & PR30 Sight Glass Cap	1
39	291-13-3240031	PR17 Outlet Male Manifold With Plug Port	1
41	291-13-3120440	1" Ring Nut - PR17 Outlet	1
42	291-13-1140451	PR17 Outlet 1" Ring Nut O- Ring and PR30 & PR40 Man- ifold Plug O-Ring	1
43	291-13-3120460	PR17 1" Outlet Elbow	1
44	291-13-3240080	PR17 Outlet Female Manifold with Threaded Adapter Port	1
50	291-13-3460210	PR17 & PR30 Manifold Con- necting Fork & PR40 Accu- mulator Connecting Fork	1
62	291-13-961790	PR17 & PR30 Motor Side Snap Ring	1
63	291-13-3120160	PR17 & PR30 Motor Side Seal Ring	1
64	291-13-961780	PR17 Roller Bearing	1
65	291-13-3240320	PR17 Piston Connecting Rod Ring	2
67	291-13-3460110	PR17 & PR30 Needle Bearing	1
68	291-13-1300230	PR17 & PR30 Non Motor Side Seal Ring	1
	291-13-480900	PR17 & PR30 Non Motor Side Snap Ring	1
71	291-13-2280950	PR17 Pump Shaft Key Way	1
72	291-13-3120690	PR17 Outlet Male Manifold Plug	1
73	291-13-2840891	PR17 Outlet Male Manifold Plug O-Ring	1
81	291-13-390315	Washer- SS for M8	6
84	291-13-3240190	PR17 Pump Shaft	1
85	291-02-9910- 3240460	PR17 Threaded Adapter	1
86	291-13-550351	PR17 Threaded Adapter to Outlet Manifold O-Ring	2


^{*} Torque: in-lbs +/- 10%

Specially-Formulated PumpRight Oil 291-02-2160-				
-0038	1 Quart	PR17 uses		
-0047	1 Gallon	13 oz. of oil		
-0048	2 1/2 Gallons			



Complete PR30 Pump Assembly w/ Hydraulic Motor and PWM Valve Kit: 500-01-5700



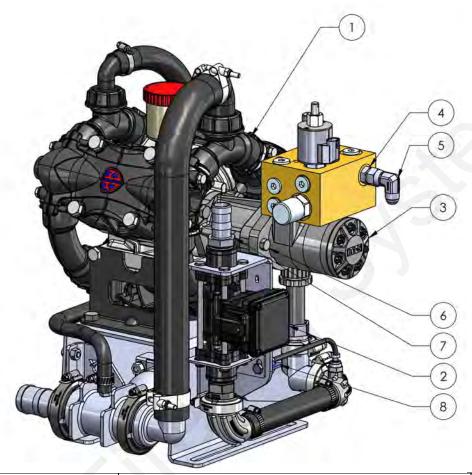


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
1	500-40-200030	PR30 Poly Pre-Build Assembly (Minus Flowmeter and Hydraulics)	1	s
2	500-02-2090	EMag PR30 Flowmeter Kit (.6 - 13 GPM) - 1" HB	1	S
	500-02-2095	EMag PR30 Flowmeter Kit (1.3 - 26 GPM) - 1" HB	ı	
3	164-FTA1609	4.0 CID Hydraulic Motor with PWM Valve, Speed Sensor,and Bypass Valve, CW Rotation	1	S
3	164-FTA0994	4.0 CID Hydraulic Motor with PWM Valve and Bypass Valve, CW Rotation	'	
4	161-01-8MB-8MJ	Adapter - #8 male O-Ring Boss to #8 male JIC	1	
5	161-02-8MJ-8FJX-90	Elbow - #8 female JIC to #8 male JIC - 90	2	
6	300-080200-5	1/2" x 2" Hex Head Bolt - G5	2	
7	321-08	1/2" Nylock Nut	2	
8	521-00-100250	Pump Priming and Air Bleed Assembly	1	

See Page 25 See Page 27 See Page 42

PR30 Pump Pre-Build Assembly (Minus Flowmeter and Hydraulics)

Kit: 500-40-200030




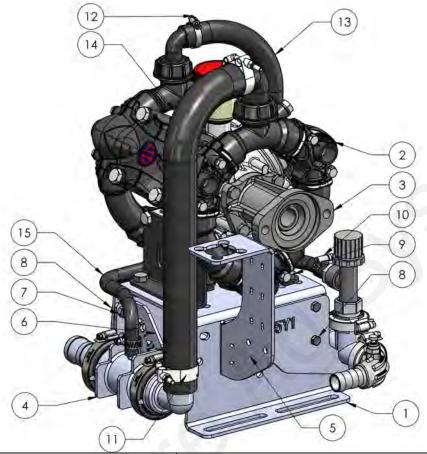

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
1	400-1117A4	Diaphragm Pump Bracket	1	
2	290-02-PR30	PR30 Poly BlueFlex Diaphragm Pump - 30GPM	1	See Page 28
3	291-02-AR55376	Flange Adapter Kit - PR30	1]
4	520-00-3013	Plumbing Assembly - PR17/30 Hydraulic Dia- phragm Pumps	1	See Page 26
5	410-4015Y1	PR17/30 - Flow Meter Support Bracket	1	
6	410-4014Y1	PRV Support Bracket - PR17/30	1	
7	323-05-SS	5/16" Flange Nut SS	6	
8	300-050012-SS	5/16" x 3/4" Hex Head Bolt - SS	6	
9	300-080012-SS	1/2" x 3/4" Hex Head Bolt - SS		
10	350-0605	SS Hose Clamp - Size 6 - 7/8" Diameter	2	
11	350-TC181	T-Bolt Hose Clamp - 1.81 - 2.06" Diameter (fits 1 1/2" Enforcer or AG200)	2	
12	350-1608	1" Hose Clamp	2	
13	280-100-AG200	1" AG200 Hose	19	
14	280-150-ENF	1-1/2" Enforcer Hose	22	
15	280-05-AG200	1/2" AG200	23	

PR17 & PR30 Pump Plumbing Assembly Kit: 520-00-3013



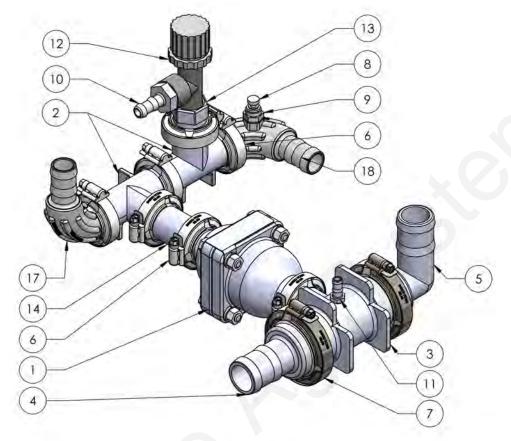

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	102-MPRV100-100	Pressure Relief Valve - 100 PSI	1
2	105-100TEE	1" Manifold Tee	2
3	105-200100TEE038	2" Standard Port Manifold x 1" Flanged Tee	1
4	105-200150BRB	2" Manifold x 1-1/2" Hose Barb	1
5	105-200150BRB90	2" Manifold x 1-1/2 Hose Barb - 90°	1
6	105-FC100	1" Manifold Clamp	7
7	105-FC200	2" Manifold Clamp	2
8	113-05-025	Plug - 1/4" QC	1
9	113-06-025025	QC to MPT - 1/4" QC x 1/4" MPT	1
10	101-075050	3/4" MPT x 1/2" HB	1
11	101-038050	3/8" MPT x 1/2" HB	1
12	102-23520-3-4	3/4" Throttling Valve with out spring - 150 PSI	1
13	105-100075FPT	1" Manifold x 3/4" FPT	1
14	105-100CPG	1" Manifold Coupling	1
15	105-100G	1" EPDM Manifold Gasket	7
16	105-150G	1 1/2" EPDM Gasket	2
17	105-100BRBSWP90	1" Flange X 90° Sweep Hose Barb	1
18	105-100BRBSWPG90	1" Manifold x 1" Hose Barb - 1/4" Gauge Port - 90 Degree Sweep	1



PR30 Flowmeter Kits


Kit: 500-02-2090 EMag PR17/PR30 Flowmeter Kit (.6 - 13 GP Kit: 500-02-2095 EMag PR30 Flowmeter Kit (1.3 - 26 GPM)







ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	105-100BRBSWP90	1" Flange X 90° Sweep Hose Barb	1
2	105-100G	1" EPDM Manifold Gasket	1
3	105-FC100	1" Manifold Clamp	1
4	400-3826Y1	SS Flowmeter Mounting Bracket	1
5	300-050012-SS	5/16" x 3/4" HCS SS	2
6	323-05-SS	5/16" Flange Nut SS	2
7	280-100-AG200-8L	1" AG200 Hose - 8" L	1
8	350-1608	1" Hose Clamp	2
9	204-01-46211CUF02	Electro Magnetic Flow meter .6 - 13 GPM Non-visual	1
9	204-01-46211CUF03	Electro Magnetic Flow meter 1.3 - 26 GPM Non-visual	I
10	105-100MPT	1" Flange X 1" Male Thread	1
11	101-100100	1" MPT x 1" HB	1

PR30 Diaphragm Pump Parts Breakdown

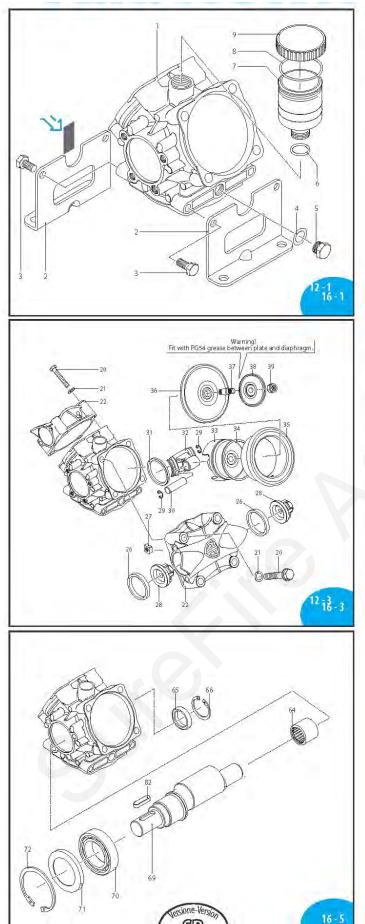

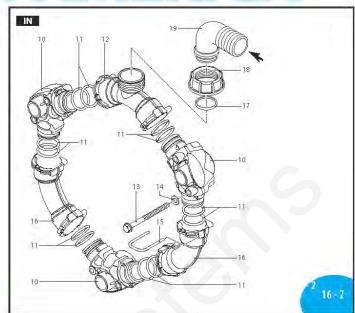

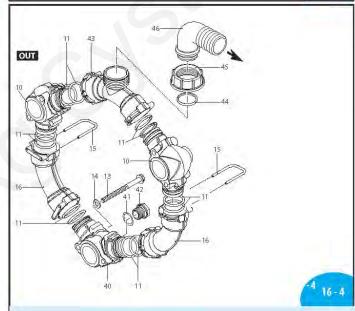





PR30 Diaphragm Pump Parts List

л	- 	Ham Dag and all and	O-T\
#	Item Number	Item Description	QTY
1	291-13-3460010	PR30 Pump Housing	1
2	291-13-3460100	PR30 Black Metal Mounting Foot	2
3	291-13-160673	PR30 & PR40 Metric Bolt for Mounting Foot to Housing M10 x 25 T265*	4
4	291-02-9910- 740290	PR17, PR30, PR40 Pump Oil Drain Plug O-Ring	1
5	291-02-2406- 0023	PR17, PR30, PR40, D70, D115, & D160 Pump Oil Drain Plug T177*	1
6	291-13-720030	PR17 & PR30 Sight Glass to Pump O-Ring	1
7	291-13-3120240	PR17 & PR30 Sight GlassT177*	1
8	291-02-9910- 650920	PR17, PR30, & D115 Sight Glass Cap O-Ring	1
9	291-13-1040324	PR17 & PR30 Sight Glass Cap	1
10	291-13-3460030	PR30 Inlet & Outlet Male Manifold	5
11	291-13-2680141	PR30 Manifold O-Ring - Inlet and Outlet	24
12	291-13-3460050	PR30 Inlet Manifold - Threaded	1
13	291-13-3460201	PR30 & PR40 Metric Bolt For Male Manifolds M8 x 100 T106*	12
14	291-13-390315	Washer - SS for M8	12
15	291-13-3460210	PR17 & PR30 Manifold Con- necting Fork & PR40 Accu- mulator Connecting Fork	12
16	291-13-3460040	PR30 Inlet & Outlet Female Manifold	4
17		O-Ring - 29 x 3 Viton	1
18	291-02-9910- 750670	Ring Nut for 1 1/2" Outlet	1
19	291-13-50267	Poly Elbow- 1 1/2" Outlet HB	1
20	004 40 750070	PR30 & PR40 Metric Bolt For Pump Head M12 x 70 T309*	12
21	291-13-390092	PR30 & PR40 SS Washer For M12 x 70 Bolt	12
22	291-13-3460020	PR30 & PR40 Pump Head	3
26	201_13_3/60380	Valve Gasket For PR17, PR30, and PR40	6
27		Nut for all M8 Bolts	12
28	291-13-2429051	Valve For PR17, PR30, and PR40	6
29	291-02-9910- 380080	PR30 & D115 Piston Pin Snap Ring	6

#	Item Number	Item Description	QTY
30	291-02-9910- 380300	PR30 & D115 Piston Pin	3
31	291-13-3460090	PR30 Piston Connecting Rod Ring	2
32	291-13-3460080	PR30 Piston Connecting Rod	3
33	291-13-580120	PR30 & D115 Piston	3
34	291-02-9910- 500260	PR30, PR40, D115, D160, & AR&HD250 Piston Ring	3
35	291-13-750110	PR30, D160, & D250 Diaphragm Sleeve	3
36	291-13-550081	BlueFlex Diaphragm for D70/ 115/ 160/ AR&H250/ PR30/ PR40	3
37	291-13-2240101	PR30 & PR40 Hub Pin T265*	3
38	291-13-580090	PR30 Diaphragm Plate	3
39	291-13-2240670	PR17, PR30, & PR40 Hub Pin Nut T221*	3
40	291-13-3460031	PR30 Outlet Male Manifold With Plug Port	1
41 (a)	291-13-1150641	O-Ring - PR30 & PR40 Manifold Plug (new style plug)	1
41 (b)	291-13-1140451	PR30 & PR40 Manifold Plug O- Ring (old style plug)	
42	291-13-346090	PR30 & PR40 Manifold Plug (new style) T88*	1
43	291-13-3460060	PR30 Outlet Manifold - Threaded	1
44	291-13-880311	PR30 Outlet 1" Ring Nut O-Ring & PR40 Accumulator O-Ring	1
	291-13-651100	Ring Nut 1 1/4"	1
46	291-13-651460	PR30 1" Outlet Elbow	1
64	291-13-3460110	PR17 & PR30 Needle Bearing	1
65	291-13-1300230	PR17 & PR30 Non Motor Side Seal Ring	1
66	291-13-480900	PR17 & PR30 Non Motor Side Snap Ring	1
69	291-13-3460260	PR30 Pump Shaft	1
70	291-13-961781	PR30 Roller Bearing	1
71	291-13-3120160	PR17 & PR30 Motor Side Seal Ring	1
72	291-13-961790	PR17 & PR30 Motor Side Snap Ring	1
82	291-13-2460480	PR30 Pump Shaft Key Way	1

^{*} Torque: in-lbs +/- 10%

291-13-100150 PR30 & PR40 Diaphragm Service Kit

#	Description	QTY	#	Description	QTY
26	Valve Gasket	2	36	Diaphragm	1
28	Valve	2	(pu	mp requires 3	kits)

291-13-100710 PR30 O-RIng Kit


#	Description	QTY	#	Description	QTY
4	Oil Drain Plug O-Ring	1	17	O-Ring 29x3 Viton	1
6	Sight Glass to Pump O-Ring	1	41	Outlet Male Manifold Plug O-Ring	1
8	Sight Glass Cap O-RIng	1	44	Outlet 1" Ring Nut O-Ring	1
11	Manifold O-Ring	24			

Specia Oil	illy-Formulated 291-02-2160-	d PumpRight
-0038	1 Quart	PR30 uses
-0047	1 Gallon	28 oz. of oil
-0048	2 1/2 Gallons	



Complete PR40 Pump Assembly w/ Hydraulic Motor and PWM Valve Kit: 500-01-6700



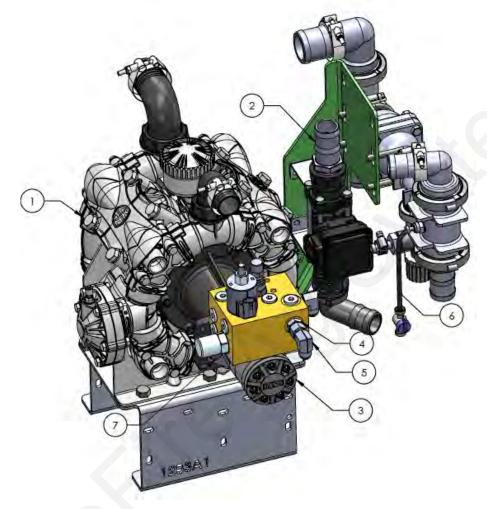

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
1	500-40-200040	PR40 Pre-Build Assembly (Minus Flowmeter and Hydraulics)	1	
2	500-02-2080	Arag Ion Flowmeter Kit (2.6 - 53 GPM) with adapter cable - 1 1/2" HB	1	
3	164-FTA1609	4.0 CID Hydraulic Motor with PWM Valve and Bypass Valve, SPEED Sens	1	
3	164-FTA0994	4.0 CID Hydraulic Motor with PWM Valve and Bypass Valve, CW Rotation	1	
4	161-01-8MB-8MJ	Adapter - #8 male O-Ring Boss to #8 male JIC	1	
5	161-02-8MJ-8FJX-90	Elbow - #8 female JIC to #8 male JIC - 90	2	
6	521-00-100250	Pump Priming and Air Bleed Assembly	1	
7	300-080200-5	1/2" x 2" G5	2	Ī
8	321-08-SS	1/2" Nylock Nut-SS	2	

See Page 31

See Page 33


See Page 42



PR40 Pump Pre-Build Assembly (Minus Flowmeter and Hydraulics)

Kit: 500-40-200040



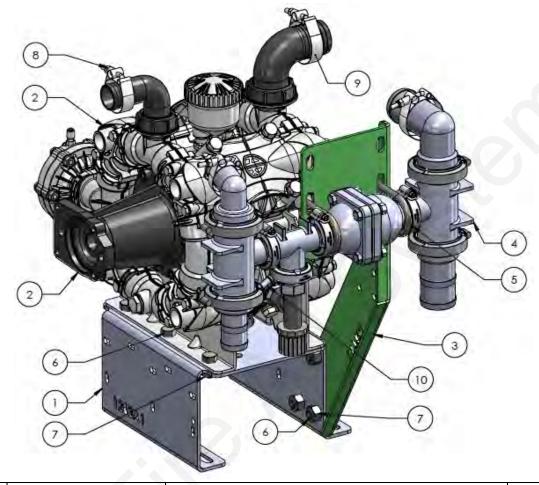

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
1	400-1203A1	D160 - D250 Diaphragm Pump Bracket	1	
2	290-02-PR40	PR40 Poly BlueFlex Diaphragm Pump - 40GPM - 290 PSI	1	
3	400-1204A1	D160 - D250 MPRV Support	1	1
4	520-00-3015	Plumbing Assembly - D160 & D250 Hydraulic Dia- phragm Pump	1	
5	302-UB101	M100 U-Bolt Assembly - 1 SS Ubolt, 2 SS lock washers, 2 SS nuts	2	
6	300-080100-5	1/2" x 1" HCS G5	9	
7	323-08	1/2" Flange Nut	9	
8	350-TC181	T-Bolt Hose Clamp - 1.81 - 2.06" Diameter (fits 1	2	
9	350-TC231	T-Bolt Hose Clamp - 2.31 - 2.62" Diameter (fits 2"	2	
10	350-0605	SS Hose Clamp - Size 6 - 7/8" Diameter	2	Ī
11	291-02-9910-HYD1570	Hydraulic Flange Kit - D160, D250, PR40 & AR330	1	


See Page 34

See Page 32



PR40 & D250 Pump Plumbing Assembly Kit: 520-00-3015



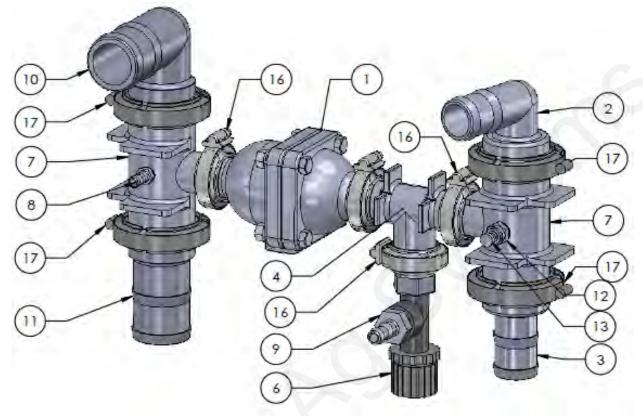


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	102-MPRV100-100	Pressure Relief Valve - 100 PSI	1
2	105-200150BRB90	2" Manifold Flng 1-1/2 Barb 90	1
3	105-200150BRB	2" Manifold X 1-1/2" Barb	1
4	105-100TEE	1" Manifold Tee	1
5	105-100075FPT	1" Manifold x 3/4" FPT	1
6	102-23520-3-4	3/4" Throttling Valve with out spring - 150 PSI	1
7	105-200100TEE038	2"Std Port x 1" Flanged Tee	2
8	101-038050	3/8" MPT x 1/2" HB	1
9	101-075050	3/4" MPT x 1/2" HB	1
10	105-200BRB90	2" Manifold x 2" HB - 90 Degree	1
11	105-200BRB	2" Manifold x 2" HB	1
12	113-06-025038	QC to MPT - 1/4" QC x 3/8" MPT	1
13	113-05-025	Plug - 1/4" QC	1
14	105-100G	1" EPDM Manifold Gasket	4
15	105-150G	1 1/2" EPDM Gasket	4
16	105-FC100	1" Manifold Clamp	4
17	105-FC200	2" Manifold Clamp	4




PR40/D250 EMag Flowmeter Kit (2.6-53 GPM) Kit: 500-02-2080



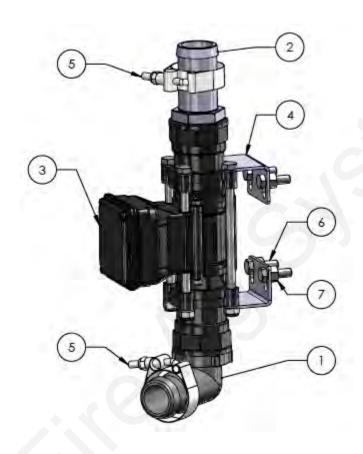

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	101-125150-90	1-1/4"MPT X 1-1/2"Hse Shnk-90D	1
2	101-125150	1-1/4" MPT x 1-1/2" HB	1
3	204-01-46211CUF04	Electro Magnetic Flow meter 2.6 - 53 GPM Non-visual	1
4	400-3335Y1	SS Flowmeter Mounting Bracket	2
5	350-TC181	T-Bolt Hose Clamp - 1.81 - 2.06" Diameter	2
6	300-050100-SS	5/16" x 1" HCS SS	4
7	323-05-SS	5/16" Flange Nut SS	4
-	280-150-AG200	1 1/2" AG200 Hose - 2 feet	
-	201-17842	Adapter Cable - AMP Superseal to MT Controller	

PR40 Diaphragm Pump Parts Breakdown

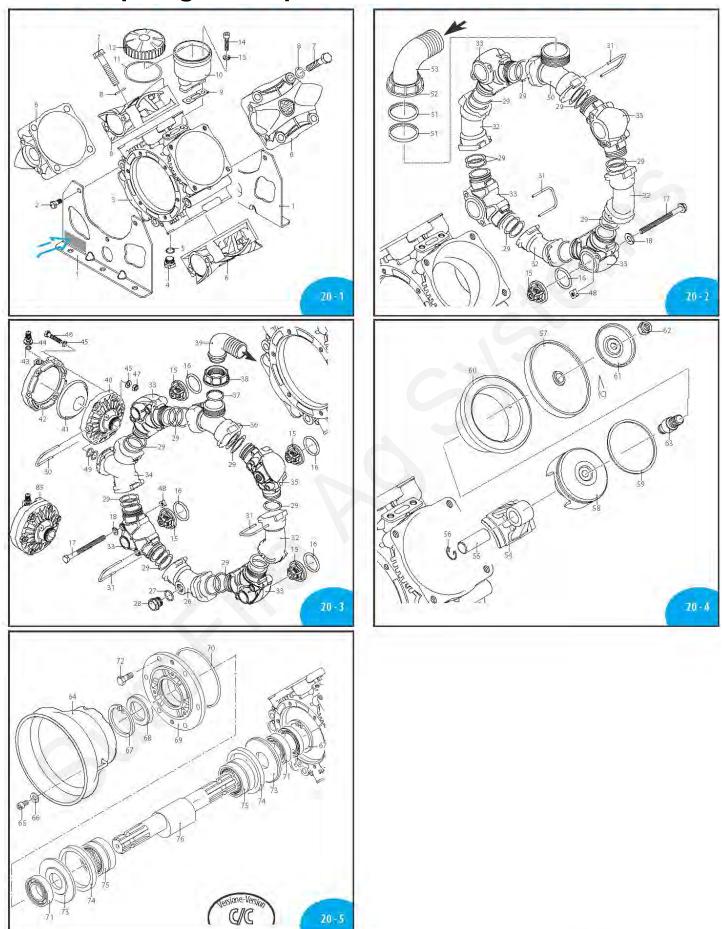

PR40 Diaphragm Pump Parts List

#	Item Number	Item Description	10.	ΤΥ	#	Item Number	Item Description	QTY
1	291-13-761031	PR40 Black Metal Mounting Foot		2		291-02-9910-	Ring-nut for 1 1/2" Inlet/Outlet - PR17, PR30,	
_		PR30 & PR40 Metric Bolt for Mounting	na		38	750670	PR40, D160 & D250 Pump	1
2	291-13-160673	Foot to Housing M10 x 25 T354*	''9 (6	20		1-1/2" HB Elbow - PR17 & PR30 Inlet, PR40 &	4
3	291-13-761010	PR40 Pump Housing		1	39	291-13-50267	D250 Outlet	- 1
4	291-02-2406-0023	PR17, PR30, PR40, D70, D115, &			40	291-13-3460180	PR40 Accumulator Manifold	1
•		D160 Pump Oil Drain Plug T177*			41	291-13-800192	PR40 Accumulator Diaphragm	1
5	291-02-9910-	PR17, PR30, PR40, D70, D115, &		1	42	291-13-3460190	PR40 Accumulator Head	1
6	740290 291-13-3460020	D160 Pump Oil Drain Plug O-Ring PR30 & PR40 Pump Head		4	43	291-02-9910- 650542	PR40, D70, D115, D160, & AR&HD250 Accumulator Head Valve Stem Gasket	1
_		PR30 & PR40 Metric Bolt For Pump				291-02-9910-	PR40, D160, & AR&HD250 Accumulator Head	
7	291-13-750072	Head M12 x 70 T309*	1	6	44	180020	Valve Stem T22*	1
8	291-13-390092	PR30 & PR40 SS Washer For M12 >	΄ 1	6	45	201 12 200215	PR17, PR30, & PR40 SS Washer for M8 x 12,	12
	291-02-9910-	70 Bolt		_	45	291-13-390315	M8 x 40, M8 x 55, & M8 x 100	12
9	750040	Oil Sight Glass Gasket for PR40, D1 & D250	00 .	1	46	291-13-621782	PR40 Metric Bolt for Accumulator M8 x 40	6
10	291-13-751170	PR40 & ARD250 Sight Glass	-	1	47	201 12 2120260	T177* DD40 Accumulator Hox Nut M9, T177*	6
		PR40 & ARD250 Sight Glass Cap C)-		4 <i>1</i> 48	291-13-3120260 291-13-3120510	PR40 Accumulator Hex Nut M8 T177* Square Nut for M8 Bolts	16
11	291-13-1980340	Ring					PR30 Outlet 1" Ring Nut O-Ring & PR40 Ac-	
12	291-13-751183	PR40 & ARD250 Sight Glass Cap		1	49	291-13-880311	cumulator O-Ring	2
140	004 40 000040	PR40 & D250 SS Washer for M8 x 3		_	50	291-13-761210	PR40 Inlet Manifold - Threaded	1
13	291-13-380243	Bolt & D160 & D250 Bolt Off of the Pump Head	2	2	51	291-13-3040471	PR40 Inlet 2" Ring Nut O-Ring - Viton	2
		PR40, D160, & D250 Metric Bolt For			52	291-13-3040450	PR40 Inlet 2" Ring Nut	1
14	291-13-680350	Sight Glass M8 x 35 T88*	1	2	53	291-13-3040440	PR40 2" Inlet Elbow	1
15	291-13-2429051	Valve For PR17, PR30, and PR40		8	54	291-02-9910-	PR40 & D160 Piston Connecting Rod	4
16	291-13-3460380	Valve Gasket For PR17, PR30, and				760140		
10	291-13-3400360	PR40 - Viton	,	0	55	291-13-160700	PR40 Piston Pin	4
17	291-13-3460201	PR30 & PR40 Metric Bolt For Male	1	6	56	291-02-9910- 160691	PR40, D160, & AR&HD250 Piston Pin Snap Ring	8
		Manifolds M8 x 100 T88* PR17, PR30, & PR40 SS Washer fo	r				BlueFlex Diaphragm for D70/ 115/ 160/	
18	291-13-390315	M8 x 12, M8 x 40, M8 x 55, & M8 x 1		6	57	291-13-550081	AR&H250/ PR30/ PR40 Pump	4
26	291-13-761240	PR40 Outlet Female Manifold With F	Olua	1	58	291-02-9910- 750122	PR40, D160, & AR&HD250 Piston	4
		Port O-Ring - PR30 & PR40 Manifold Plu	a			291-02-9910-	PR30, PR40, D115, D160, & AR&HD250 Pis-	
27(a)	291-13-1150641	(new style)	9 2	2	59	500260	ton Ring	4
		PR17 Outlet 1" Ring Nut O-Ring and			60	291-13-750115	PR40 Diaphragm Sleeve	4
27(b)	291-13-1140451	PR30 & PR40 Manifold Plug O-Ring		2	61	291-13-751251	PR40 Diaphragm Plate	4
		(old style)			62	291-13-2240670	PR17, PR30, & PR40 Hub Pin Nut T221*	4
28	291-13-346090	PR30 & PR40 Manifold Plug (new st plug) T88*	yle		63	291-13-2240101	PR30 & PR40 Hub Pin T265*	4
		PR40 Manifold O-Ring - Inlet and Ou	ıtlot		64	291-13-1500470	PR40 & ARD250 Shaft Protector	1
29	291-13-230061	- Viton	3 ا	32	65	305-10020	Socket Head Bolt - 10 mm x 20 mm	3
					66	330-06-SS	3/8" Flat Washer - SS	3
30	291-13-3460210	PR17 & PR30 Manifold Connecting Fork & PR40 Accumulator Connectir	ng	1	67	291-02-9910- 200390	PR40, D160, & AR&HD250 Snap Ring	2
31	291-13-761250	PR40 Manifold Connecting Fork	1	6	68	291-02-9910-	PR40, D160, & AR&HD250 Seal Ring	2
32	291-13-761200	PR40 Inlet & Outlet Female Manifold		4		160740	<u> </u>	
33	291-13-761190	PR40 Inlet & Outlet Male Manifold		7	69	291-13-680020	PR40 & ARD250 Inspection Plate	1
		PR40 Outlet Female Manifold - Con-		,	70	291-02-9910-	PR40, D160, & AR&HD250 Seal/Bearing	1
34	291-13-761230	nects to Accumulator		1	_	851360	Housing O-Ring	<u> </u>
35	291-13-761191	PR40 Outlet Male Manifold With Plu	g .	1	71	291-02-9910- 230350	PR40, D160, & HD250 Roller Bearing	1
36	291-13-761220	Port PR40 Outlet Manifold - Threaded	- -	1	72	291-13-160673	PR30 & PR40 Metric Bolt for Mounting Foot to	6
37		O-Ring - 29 x 3 Viton - PR17, PR30,			_		Housing M10 x 25 T309*	Ļ
31	291-13-1880460	PR40, D250 Outlet		1	73	291-02-9910-	PR40, D160, & AR&HD250 Shaft Spacer	2
						540040 291-02-9910-	Plate	-
Specially-Formulated PumpRight Oil					74	750130	PR40, D160, & AR&HD250 Shaft Ring	2
		PumpRight Oil 1 Quart PR40 uses 56	07		75	291-02-9910-	PR40, D160, & AR&HD250 Needle Bearing	2
		of oil	02.			750090		
291	-02-2160-0047	1 Gallon			76	291-13-750174	PR40 Pump Shaft	1

291-13-100150 PR30 & PR40 **Diaphragm Service Kit**

= .apag								
#	Description	QTY						
16	Valve Gasket	2						
15	Valve	2						
57	Diaphragm	1						

(pump requires 4 kits)

291-13-100720 PR40 O-Ring Kit


231-13-100720 1 14-0 O-14111g Kit									
	#	Description	QTY		#	Description	QTY		
	5	Oil Drain Plug O-Ring	1		37	O-Ring 29x3 Viton	1		
	9	Sight Glass to Pump O-Ring	1		27	Outlet Male Manifold Plug O-Ring	1		
	11	Sight Glass Cap O-RIng	1		49	Outlet 1" Ring Nut O-Ring	1		
	29	Manifold O-Ring	32						

* Torque: in-lbs +/- 10%

AR D250 Assembly and Part Breakdowns

Complete D250 Pump Assembly w/ Hydraulic Motor and PWM Valve Kit: 500-01-2700



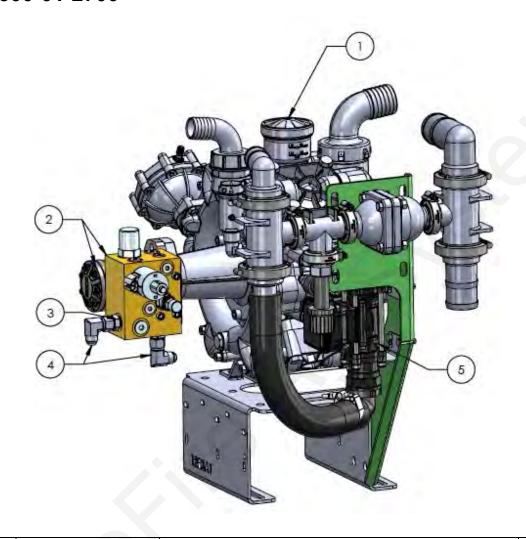


IT	EM NO.	PART NUMBER	DESCRIPTION	QTY.	
	1	500-40-100250	D250 Pre-Build Assembly (minus flowmeter and hydraulics)	1	See Page 37
	2		4.0 CID Hydraulic Motor with PWM Valve and Bypass	1	See Page 42
		164-FTA0994	4.0 CID Hydraulic Motor with PWM Valve and Bypass		
	3	161-01-8MB-8MJ	Adapter - #8 male O-Ring Boss to #8 male JIC	1	
	4	161-02-8MJ-8FJX-90	Elbow - #8 female JIC to #8 male JIC - 90	2	
	5	500-02-2080	Arag Ion Flowmeter Kit (2.6 - 53 GPM) with adapter cable - 1 1/2" HB	1	See Page 39
	6	280-150-AG200	1 1/2" AG200 Hose	1	

AR D250Assembly and Part Breakdowns

D250 Pump Pre-Build Assembly (Minus Flowmeter and Hydraulics)

Kit: 500-40-100250



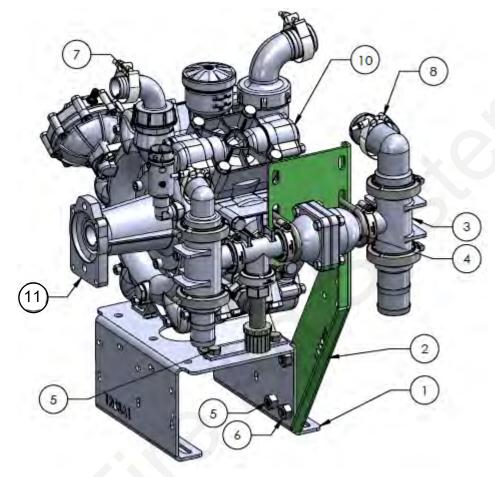

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	Ī
1	400-1203A1	D160 - D250 Diaphragm Pump Bracket	1	
2	400-1204A1	D160 - D250 MPRV Support	1	
3	520-00-3015	Plumbing Assembly - D160 & D250 Hydraulic Dia- phragm Pump	1	
4	302-UB101	M100 U-Bolt Assembly - 1 SS Ubolt, 2 SS lock washers, 2 SS nuts	2	
5	300-080100-5	1/2" x 1" HCS G5	7	
6	323-08	1/2" Flange Nut	7	
7	350-TC181	T-Bolt Hose Clamp - 1.81 - 2.06" Diameter (fits 1 1/2"	2	
8	350-TC231	T-Bolt Hose Clamp - 2.31 - 2.62" Diameter (fits 2" En-	2	
9	350-0605	SS Hose Clamp - Size 6 - 7/8" Diameter	2	
10	290-02-9910-D250	D250-6 Chamber Diaphragm Pump 55 GPM-Pump	1	
11	291-02-9910-HYD1570	Hydraulic Flange Kit - D160, D250, PR40 & AR330	1	l


See Page 38

See Page 40



D250 & PR40 Pump Plumbing Assembly Kit: 520-00-3015



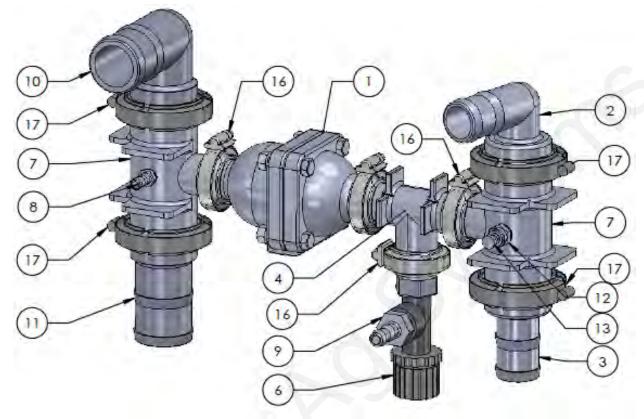


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	102-MPRV100-100	Pressure Relief Valve - 100 PSI	1
2	105-200150BRB90	2" Manifold Flng 1-1/2 Barb 90	1
3	105-200150BRB	2" Manifold X 1-1/2" Barb	1
4	105-100TEE	1" Manifold Tee	1
5	105-100075FPT	1" Manifold x 3/4" FPT	1
6	102-23520-3-4	3/4" Throttling Valve with out spring - 150 PSI	1
7	105-200100TEE038	2"Std Port x 1" Flanged Tee	2
8	101-038050	3/8" MPT x 1/2" HB	1
9	101-075050	3/4" MPT x 1/2" HB	1
10	105-200BRB90	2" Manifold x 2" HB - 90 Degree	1
11	105-200BRB	2" Manifold x 2" HB	1
12	113-06-025038	QC to MPT - 1/4" QC x 3/8" MPT	1
13	113-05-025	Plug - 1/4" QC	1
14	105-100G	1" EPDM Manifold Gasket	4
15	105-150G	1 1/2" EPDM Gasket	4
16	105-FC100	1" Manifold Clamp	4
17	105-FC200	2" Manifold Clamp	4




D250/PR40 EMag Flowmeter Kit (2.6-53 GPM) Kit: 500-02-2080



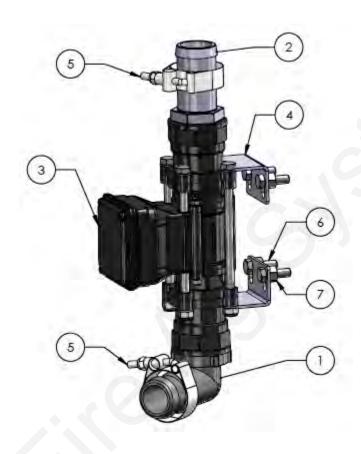

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	101-125150-90	1-1/4"MPT X 1-1/2"Hse Shnk-90D	1
2	101-125150	1-1/4" MPT x 1-1/2" HB	1
3	204-01-46211CUF04	Electro Magnetic Flow meter 2.6 - 53 GPM Non-visual	1
4	400-3335Y1	SS Flowmeter Mounting Bracket	2
5	350-TC181	T-Bolt Hose Clamp - 1.81 - 2.06" Diameter	2
6	300-050100-SS	5/16" x 1" HCS SS	4
7	323-05-SS	5/16" Flange Nut SS	4
-	280-150-AG200	1 1/2" AG200 Hose - 2 feet	
-	201-17842	Adapter Cable - AMP Superseal to MT Controller	

AR-D250 Diaphragm Pump Parts Breakdown

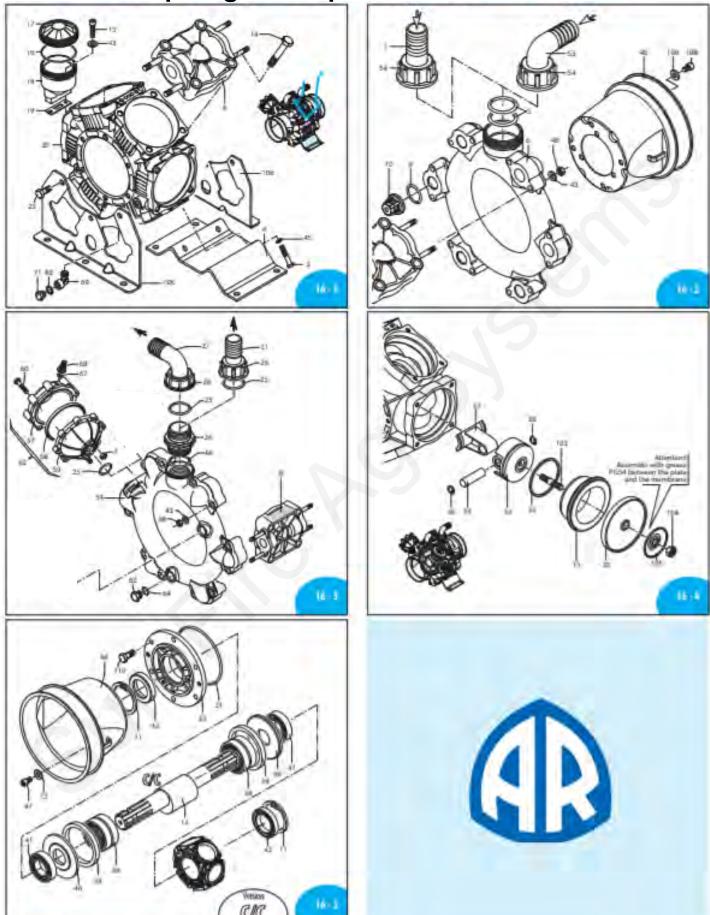

AR-D250 Diaphragm Pump Parts List

		Diapinagin i an	_
#	Item Number	Item Description	QTY
5	291-02-9910- 750740	PR40 & AR&HD250 2" Inlet Ring Nut O-Ring	2
6	291-02-9910- 751070	D250 Suction Manifold	1
8	291-02-9910- 750100	D160 & D250 Pump Head	6
9	291-02-680070	D70, D115, D160, & AR&HD250 Pump Valve O-Ring (was 320030)	12
10	291-02-9910- 759051	Pump Valve for D70, D115, D160, & AR&HD250	12
11	291-02-9910- 200390	PR40, D160, & AR&HD250 Snap Ring	2
12	291-13-750170	D160 & AR&HD250 Pump Shaft	1
13	291-13-750110	PR30, D160, & D250 Diaphtagm Sleeve	6
14	291-02-9910- 750061	D160 & AR&HD250 Metric Bolt For Pump Head M12 x 65 T445*	24
15	291-13-680350	PR40, D160, & D250 Metric Bolt For Sight Glass M8 x 35 T90*	2
16	291-13-1980340	PR40 & ARD250 Sight Glass Cap O-Ring	1
17	291-13-751183	PR40 & ARD250 Sight Glass Cap	1
18	291-13-751170	Oil Sight Glass PR40 & ARD250	1
19	291-02-9910- 750040	Oil Sight Glass Gasket for PR40, D160 & D250	1
20	291-13-751300	ARD250 Pump Housing	1
21	291-02-9910- 851360	PR40, D160, & AR&HD250 Seal/Bearing Housing O-Ring	1
22	291-13-680020	PR40 & ARD250 Inspection Plate	1
23	291-13-160673	PR30 PR40, & ARD250 Metric Bolt for Mounting Foot to Housing and other things M10 x 25	6
24	291-02-9910- 751130	AR&HD250 Outlet 1 1/2" Threaded Adapter T90*	1
25	291-13-1880460	O-Ring - 29 x 3 Viton - PR17 & PR30 Inlet, PR40 & D250 Outlet	2
26	291-02-9910- 750670	Ring Nut for 1-1/2" Outlet -PR40, D160 & D250 Pump	1
27	291-13-50267	Poly Elbow 1 1/2" - PR17 & PR30 Inlet, PR40 & D250 Outlet	1
30	291-13-550081	BlueFlex Diaphragm for D70, D115, D160, & AR&HD250, PR30, PR40	6
32	291-02-9910- 500260	PR30, PR40, D115, D160, & AR&HD250 Piston Ring	6
33	291-02-9910- 750122	PR40, D160, & AR&HD250 Piston	6
34	291-02-9910- 751080	AR&HD250 Outlet Manifold	1
35	291-13-160700	PR40 & ARD250 Piston Pin	6
36	291-02-9910- 160691	PR40, D160, & AR&HD250 Piston Pin Snap Ring	12
37	291-02-9910- 750140	AR&HD250 Piston Connecting Rod	6
38	291-02-9910- 750090	PR40, D160, & AR&HD250 Needle Bearing	2
39	291-02-9910- 750130	PR40, D160, & AR&HD250 Shaft Ring	2
40	291-02-9910- 540040	PR40, D160, & AR&HD250 Shaft Spacer Plate	2
41	291-13-751280	ARD250 Roller Bearing	2
42	291-02-9910- 160740	PR40, D160, & AR&HD250 Seal Ring	2
43	291-16-380243	PR40 & D250 SS Washer for M8 x 35 Bolt and D160 & D250 Bolt off of the Pump Head	26
44	291-02-9910- 751140	AR&HD250 Threaded Adapter to Outlet Manifold O-Ring	1

#	Item Number	Item Description	QTY
46	291-13-3120260	PR40 & AR&HD250 Hex Nut M8	24
48	291-13-1500470	PR40 & ARD250 Red Shaft Protector	1
53	291-02-9910- 750850	Inlet Elbow for D250 - 2"	1
54	291-02-9910- 750710	AR&HD250 2" Inlet Ring Nut	1
57	291-13-620232	D160 & AR&HD250 Accumulator Head	1
58	291-13-550194	D70, D115, D160 & AR&HD250 Accumulator Diaphragm	1
59	291-13-680180	D160 & AR&HD250 Accumulator Manifold	1
60	291-13-621782	PR40, D160, & AR&HD250 Metric Bolt for Accumulator M8 x 40 T220*	8
64	291-02-9910- 180101	D160 & AR&HD250 Outlet Manifold Plug O-Ring & D70 Sight Glass to Pump O- Ring	1
65	291-02-9910- 330173	D160 & AR&HD250 Outlet Manifold Plug & D70 Accumulator Manifold Plug & D115 DX Rt. valv. ret. plug	1
67	291-02-9910- 650542	PR40, D70, D115, D160, & AR&HD250 Accumulator Head Valve Stem Gasket	1
68	291-02-9910- 180020	PR40, D160, & AR&HD250 Accumulator Head Valve Stem T25*	1
69	291-13-750370	AR&HD250 Oil Drain Elbow Fitting	1
71	291-13-880581	AR&HD250 Oil Drain Plug	1
83	291-13-880820	AR&HD 250 Oil Drain Plug Washer	1
103	291-02-2240100	D250 Hub Pin T265*	6
104	291-02-2240110	ARD250 Hub Pin Nut T220*	6
105	291-13-751250	ARD250 Diaphragm Plate	6
106	291-13-751291	ARD250 Black Metal Mounting Foot	2
108	305-10020	Socket Head Bolt—10 mm x 20 mm T90*	3
109	330-06-SS	3/8" Flat Washer - SS	3
110	291-13-160673	PR30, PR40, & ARD250 Metric Bolt for Mounting Foot to Housing and other things M10 x 25 T310*	6

* Torque: in-lbs +/- 10%


291-13-100200 D250 Diaphragm Service Kit

#	Description	QTY	#	Description	QTY
9	Valve Gasket	2	30	Diaphragm	1
10	Valve	2	(pump requires 6 kits)		

291-02-9910-KIT1904 D250 O-Rlng Kit

Complete PR80 Pump Assembly w/ Hydraulic Motor and PWM Valve Kit: 500-01-8700 / 500-01-8701



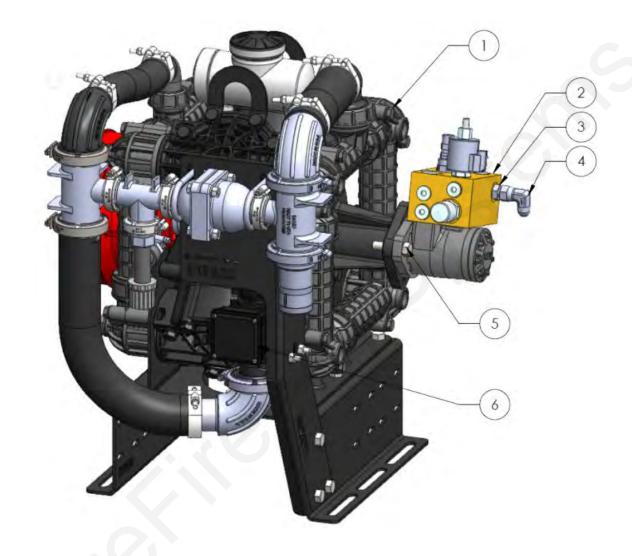

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
1		PR80 Pre-Build Assembly (minus flowmeter and hydraulics)	1	See Page 45
2	164-FTA1609	4.0 CID Hydraulic Motor with PWM Valve and Bypass Valve, SPEED Sens	1	See Page 50
2	164-FTA0994	4.0 CID Hydraulic Motor with PWM Valve and Bypass Valve, CW Rotation		See Page 30
3	161-01-8MB-8MJ	Adapter - #8 male O-Ring Boss to #8 male JIC	1	
4	161-02-8MJ-8FJX-90	Elbow - #8 female JIC to #8 male JIC - 90	2	
5	300-M120030-8.8	Metric Bolt - M12 x 30 mm - G8.8	2	Caa Daga 47
*	500-02-2100	Emag PR80 Flowmeter Kit (5-106 GPM) - 2" Full Port Flange	1	See Page 47


^{*}Flowmeter Kit sold separately from 500-01-8700/8701



PR80 Pump Pre-Build Assembly (Minus Flowmeter and Hydraulics)

Kit: 500-40-200080



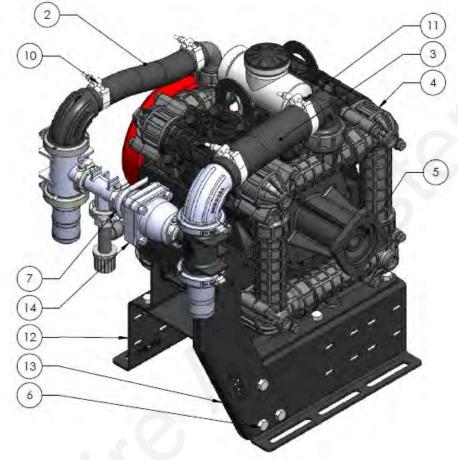

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
1	280-050-AG200	1/2" AG200 Hose	18in	1
2	280-150-3000S	1 1/2" 3000 Series Bulk	12in	1
3	280-200-ENF	2" Enforcer Fertilizer Solution Hose	12in	1
4	290-02-PR80	PR80 Polypropylene BlueFlex Diaphragm Pump (Pump only)	1	1
5	291-02-AR55384	PR80 Hydraulic Flange Kit	1	
6	300-080100-SS	1/2" x 1" Hex Head Bolt - SS	9	
7	302-UB101	M100 U-Bolt Assembly	2	1
8	323-08-SS	1/2" Flange Nut - SS	9	
9	350-0605	SS Hose Clamp - Size 6 - 7/8" Diameter	2	
10	350-TC181	Pressure Seal HD Clamp, Size 238 (fits 1 1/4" - 1 1/2" Enforcer, Wire Braided or AG200)	2	
11	350-TC231	Pressure Seal HD Clamp, Size 288 (fits 2" Enforcer and Wire Braided)	2	
12	400-4928Y1	PR80 Diaphragm Pump Base	1	1
13	400-4929Y1	PR80 MPRV Support	1	1
14	520-00-3016	PR80 Plumbing Assembly - BOM	1	3


See Page 48

See Page 46



PR80 Pump Plumbing Assembly Kit: 520-00-3016



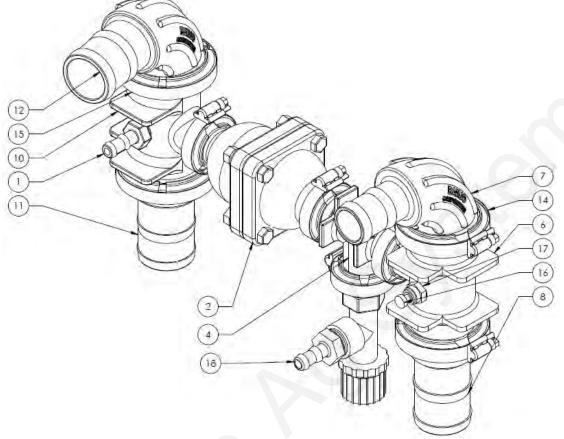


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	101-050050-H	1/2" MPT x 1/2" HB	1
2	102-MPRV100-100	Pressure Relief Valve - 100 PSI	1
3	105-100G	1" EPDM Manifold Gasket	4
4	105-100TEE	1" Manifold Tee	1
5	105-150G	1 1/2" EPDM Gasket	2
6	105-200100TEE-038	2" Manifold x 1" Tee with 3/8" Tap	1
7	105-200150BRBSWP90	2" Manifold x 1-1/2" HB Sweep 90 Degree	1
8	105-200BRB	2" Manifold x 2" HB	1
9	105-200G-H	2" EPDM Manifold Gasket for 220 Series Manifold Fittings	2
10	105-220100TEE-050	2" Full Port Manifold x 1" Tee with 1/2" Tap	1
11	105-220BRB	2" Manifold x 2" HB	1
12	105-220BRBSWP90	2" Full Port Manifold x 2" HB - 90 Degree Sweep	1
13	105-FC100	1" Manifold Clamp	4
14	105-FC200	2" Manifold Clamp	2
15	105-FC220	2" Full Port Manifold Clamp	2
16	113-05-025	Plug - 1/4" QC	1
17	113-06-025038	QC to MPT - 1/4" QC x 3/8" MPT	1
18	521-02-3013A	PumpRight Sub-Assembly - Throttling Vlave	1




PR80 EMag Flowmeter Kit (5-106 GPM) Kit: 500-02-2100



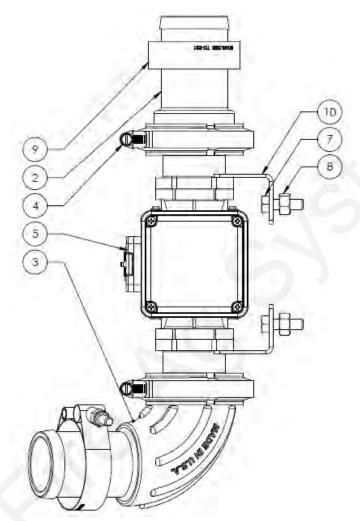

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	105-200G-H	2" EPDM Manifold Gasket for 220 Series Manifold Fittings	2
2	105-220BRB	2" Full Port Manifold x 2" HB	1
3	105-220BRBSWP90	2" Full Port Manifold x 2" HB - 90 Degree Sweep	2
4	105-FC220	2" Full Port Manifold Clamp	2
5	204-01-46221A58787	Electro Magnetic Flow meter 5 - 106 GPM Non-visual - 2" FP Flange	1
6	280-200-WBS	2" Wire Braided Suction Hose	18in
7	300-050100-SS	5/16" x 1" HCS SS	4
8	323-05-SS	5/16" Flange Nut SS	4
9	350-TC231	T-Bolt Hose Clamp - 1.81 - 2.06" Diameter	2
10	400-3335Y1	SS Flowmeter Mounting Bracket	2

PR80 Diaphragm Pump Parts Breakdown

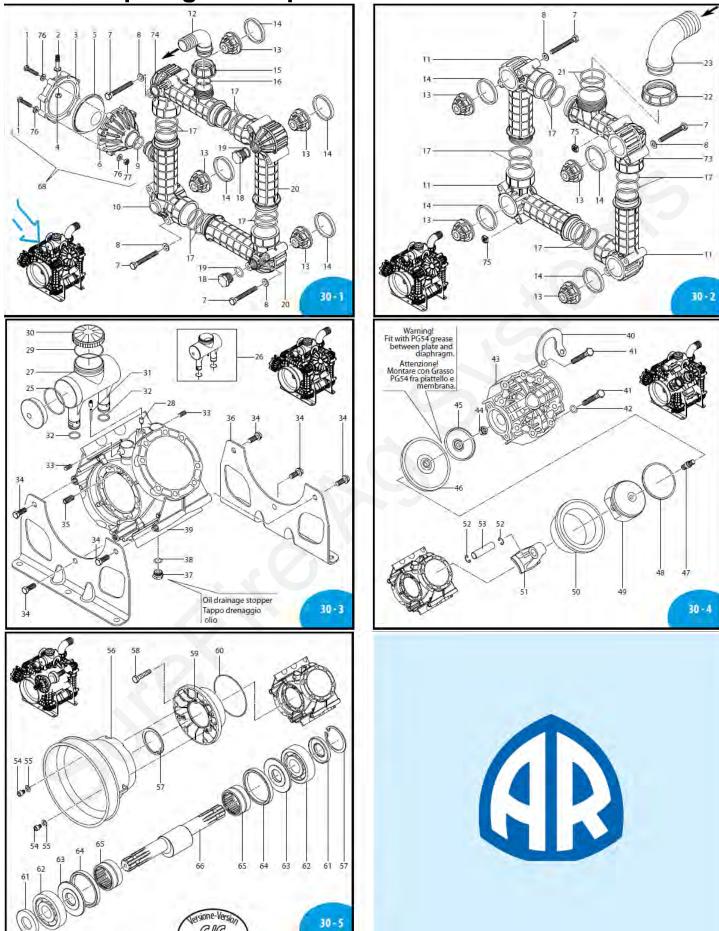

PR80 Diaphragm Pump Parts List

		<u> </u>	
Item No.	Part Number	Description	Qty
1	291-13-3120270	PR80 Accumulator Bolt - M8 x 40	8
2	291-13-180020	PR80 Accumulator Valve Stem	1
3	291-13-3300120	PR80 Accumulator Head	1
4	291-13-650542	PR80 Head Valve Stem Gasket	1
5	291-13-550194	D70, D115, D160, D250 - PR80 Blue Flex	1
5	291-13-550194	Accumulator Diaphragm	'
6	291-13-3300110	PR80 Accumulator Manifold	1
7	291-13-3040611	PR80 Manifold Metric Bolt - M10x85	16
8	291-13-3040520	SS M10 Washer for PR Pumps	16
9	291-13-280221	PR80 Accumulator O-Ring (29.75 x 3.53)	1
10	291-13-3280070	PR80 Outlet Plumbing Manifold	1
11	291-13-3280040	PR80 linlet Plumbing Manifold	3
12	291-02-9910- 540550	1-1/2" HB Elbow - D115 Inlet, D160 Outlet, PR80 Outlet	1
13	291-13-3049051	Valve for PR80	8
14	291-13-3040650	Valve Gasket for PR80	8
15	291-02-9910- 750670	Ring Nut for 1-1/2" Inlet/Outlet - PR17 & PR30 Inlet, PR40 & D250 Outlet	1
40		O-Ring - 1 1/4" Inlet on D70 or 1 1/2" Dis-	4
16	291-13-1880460	charge on D250	1
17	291-13-100321	PR 80 Manifold O-Ring (52.39 x 3.53)	16
18	291-13-3040370	PR 80 Manifold Plug (3/4 G)	2
19	291-13-1540631	PR80 Manifold Plug O-Ring (23.47 x 2.62)	2
20	291-13-3280041	PR80 Manifold with Threaded Drain	2
21	291-13-750741	PR80 Inlet Fitting O-Ring	2
22	291-02-9910- 750710	AR&HD250 2" Inlet Ring Nut	1
23	291-13-750720	PR80 60mm Inlet Hose Barb Elbow	0
23	291-02-9910- 760020	D160/PR80 2" Inlet Elbow	1
24	291-13-3040260	PR80 Oil Sight Glass Plug	1
25	291-13-3040510	PR80 Oil Sight Glass Plug O-Ring (70 x 3)	1
26	291-13-3049001	PR80 Oil Sight Glass Assembly	1
27	291-13-3040250	PR80 Oil Sight Glass (Tank Only)	1
28	291-13-3040490	PR80 Oil Sight Glass Connection Fitting	2
29	291-02-9910- 1040060	D160/D250, PR80 Sight Glass Cap O-Ring	1
30	291-13-750050	PR80 Oil Sight Glass Cap	1
31	291-13-3040500	PR80 Oil Sight Glass Pipe 34mm	1
32	291-13-3040590	PR80 Oil Sight Glass O-Ring (22x3)	2
33	291-13-394172	PR80 Oil Sight Glass Mounting Set Screw (M14 x 40)	2
34	291-13-3040291	PR80 Bolt Mounting Bracket to Pump Housing - TE M14x40	6
35	291-13-3280090	PR80 Set Screw (M10x14)	2
36	291-13-3280030	PR80 Black Metal Mounting Foot	2
37	291-13-820361	PR80 Oil Drain Plug Brass	1
38	291-02-9910- 180101	D160 & AR&HD250 Outlet Manifold Plug O- Ring & D70 Sight Glass to Pump O-Ring	1
39	291-13-3280010	PR80 Pump Body	1
40	291-13-3280080	PR80 Lift Rings	2
41	291-13-3040301	PR80 Pump Head Mounting Bolt TE M12x85	32
42	291-13-390092	PR80 Pump Head Washer M12 Narrow	28
43	291-13-3040600	PR80 Pump Head	4
44	291-13-3040830	PR80 M12 Nut	4
45	291-13-3040820	PR80 Diaphragm Plate	4
	291-13-3040083	PR80 BlueFlex Diaphragm	4

14	1	T	
Item No.	IPart Number II Jescription		Qty
47	291-13-3040810	PR80 Hub Pin	4
48	291-13-3040110	PR80 Piston Ring	4
49	291-13-3040100	PR80 Piston	4
50	291-13-3280160	PR80 Diaphragm Sleeve	4
51	291-13-3280020	PR80 Piston Connecting Rod	4
52	291-02-9910- 160691	PR40, D160, D250 - PR80 Piston Pin Snap Ring	8
53	291-13-540070	PR80 Piston Pin	4
54	291-13-850252	PR80 Shield Mount Socket Head Screw M8x12	3
55	291-13-390315	PR80 Shield Mount Washer M8	3
56	291-02-9910- 1500470	PR40, ARD250, PR80 Red Shaft Protector	1
57	291-13-161050	PR80 Pump Shaft E-Clip 72Ø	2
58	291-13-450262	PR80 Inspection Flange Mounting Bolt M6x35	6
59	291-13-3040021	PR80 Inspection Flange	1
60	291-13-1800160	PR80 Seal/Bearing Housing O-Ring	1
61	291-13-2680120	PR80 Pump Shaft Ring Seal	2
62	291-13-160751	PR80 Pump Shaft Roller Bearing	2
63	291-13-540040	PR80 Pump Shaft Spacer Plate	2
64	291-13-850130	PR80 Pump Shaft Ring	2
65	291-13-850320	PR80 Pump Shaft Needle Bearing	2
66	291-13-3280150	PR80 Pump Shaft	1
68	291-13-42991	PR80 Complete Air Accumulator Assembly	1
69	291-13-3280190	PR80 Pump Shaft Spacer Plate	1
70	291-13-2240380	PR80 Pump Shaft Bearing	1
71	291-13-304321	PR80 Flange	1
72		PR80 Pump Shaft Ring	
73	291-13-2380050	PR80 Threaded Inlet Manifold	1
74	291-13-3280060	PR80 Threaded Outlet Manifold	

* Torque: in-lbs +/- 10%

Specially-Formulated PumpRight Oil						
291-02-2160-0038	1 Quart	PR80 uses 148 oz.				
291-02-2160-0047	1 Gallon	of oil				

291-13-100250 PR80 Diaphragm Service Kit						
#	Description QTY # Description QTY					
13	Valve Gasket	2		46	Diaphragm	1
14	Valve	2		(pump requires 6 kits)		

291-13-100730 PR80 O-Ring Kit					
#	Description				
9	PR80 Accumulator O-Ring (29.75 x 3.53)	1			
16	O-Ring - 1 1/4" Inlet on D70 or 1 1/2" Discharge on D250/PR80	1			
17	PR 80 Manifold O-Ring (52.39 x 3.53)	16			
19	PR80 Manifold Plug O-Ring (23.47 x 2.62)	2			
21	PR40, D250, PR80 2" Inlet Ring Nut O-Ring	2			
25	PR80 Oil Sight Glass Plug O-Ring (70 x 3)	1			
29	D160/D250, PR80 Sight Glass Cap O-Ring	1			
32	PR80 Oil Sight Glass O-Ring (22x3)	1			
38	O-Ring 17.5x2 - D160/D250 Outlet Manifold Plug, D70 Sight Glass, PR80 Oil Drain	1			
60	PR80 Seal/Bearing Housing O-Ring	1			




PWM Valve and Motor Parts

164-FTA0994 4.0 CID motor (this is the standard motor beginning in 2016)

164-FTA1609 Same as 164-FTA0994, but with RPM Speed Sensor



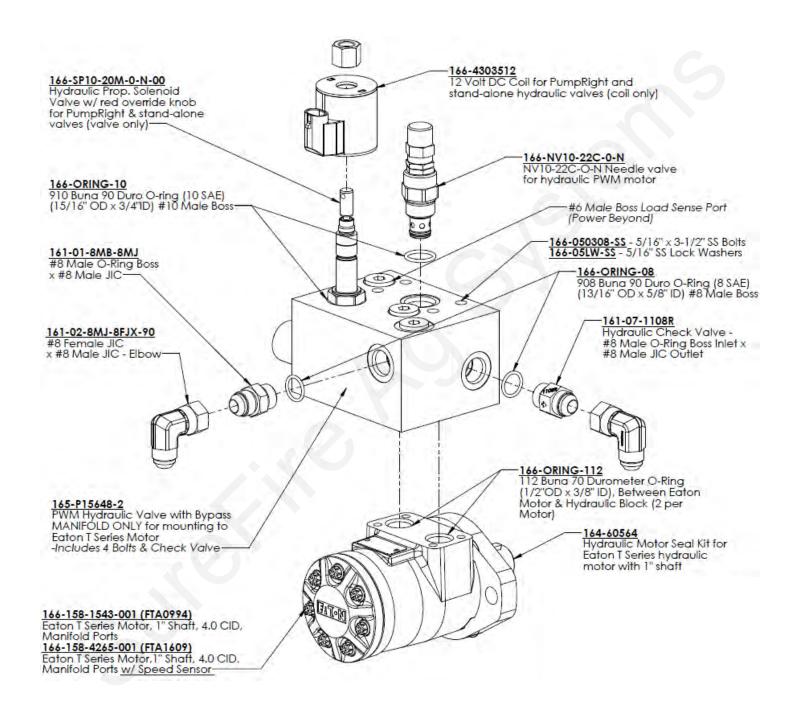

Notes	